

HOT PANTS & TOP PATTERN

Size 14

With Step-
by-Step
Instructions



 **tandy**
LEATHER COMPANY




A TANDY CORPORATION COMPANY

No. 1914


HOT PANTS & TOP PATTERN

No. 1914

SIZE 14
With Step-by-Step Instructions

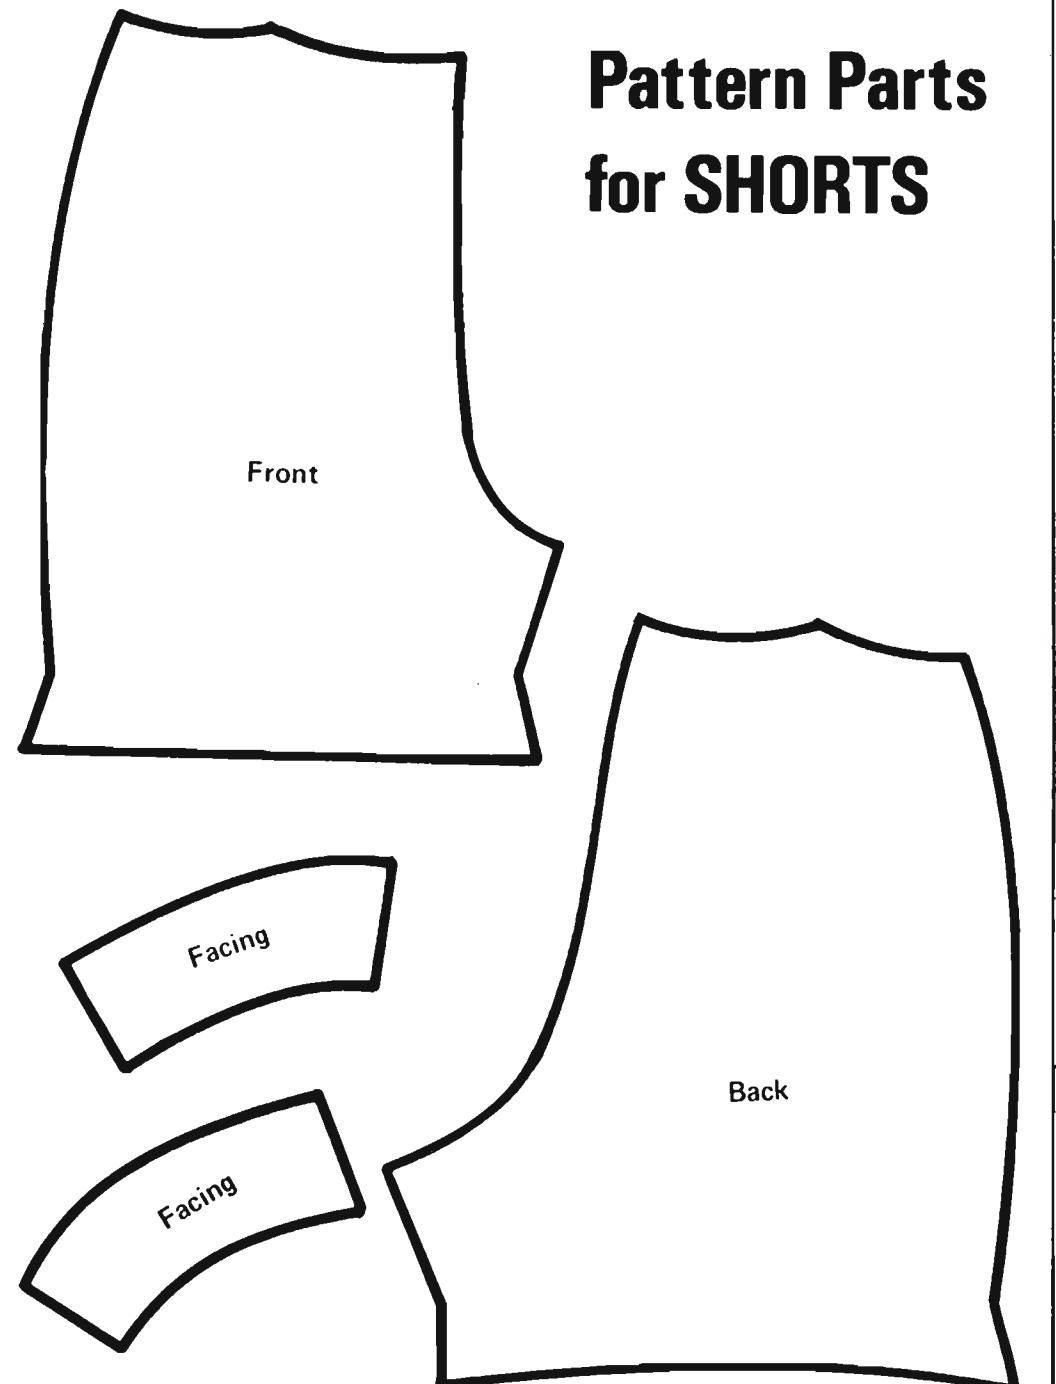

Pattern Parts for SHORTS

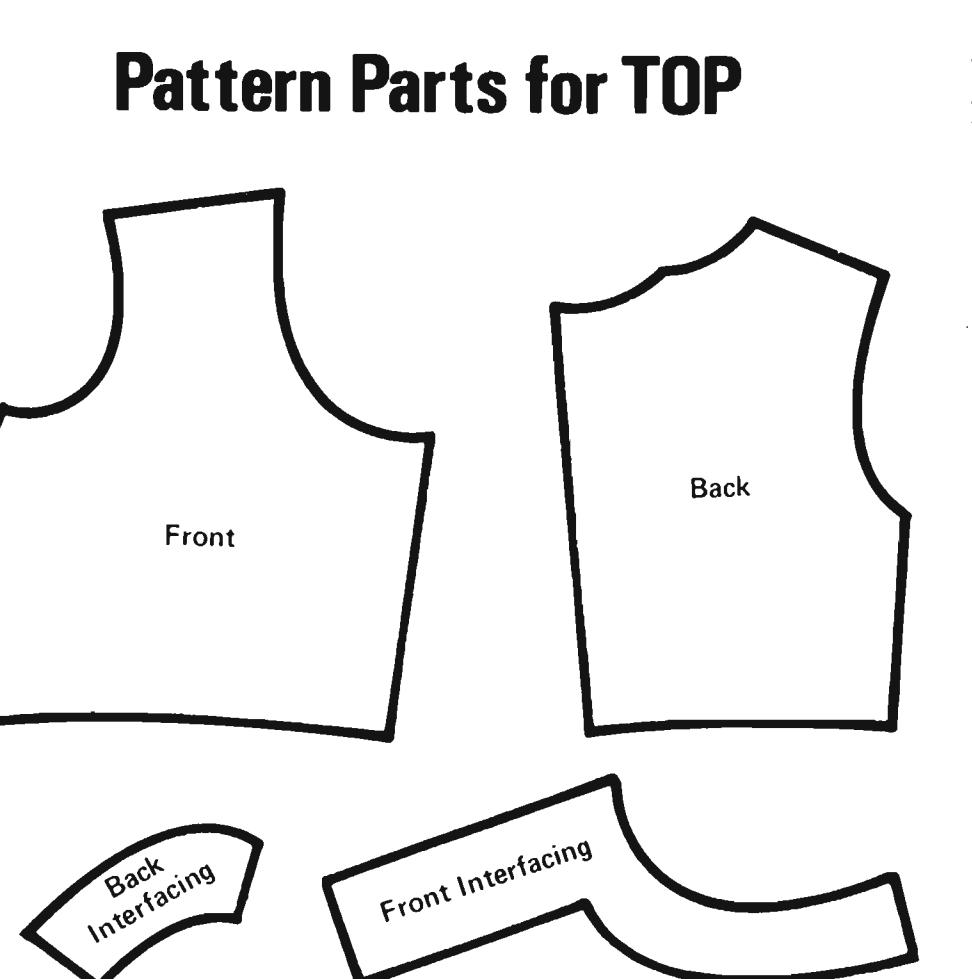

Pattern Parts for TOP

(No part of this or any other page may be reproduced without written permission.)


© Copyright 2010 by Tandy Leather Factory
All Rights Reserved




SNAP INSTALLATION INSTRUCTIONS

(Install snaps after garment is complete.)


1. Mark snap locations. Use No. 3 drive punch for holes.
2. Push button through first hole in leather garment (leaving head of button on outside) and rest head of button on concave side down.
3. Place socket over button, then hold button firmly on button and strike sharply with mallet until stud and eyelet are seated.
4. Push eyelet through corresponding hole (with eyelet on inside of garment). Place eyelet on arm (concave side down), then push button through eyelet and strike sharply with mallet until stud and eyelet are seated.
5. If snap is difficult to close, align socket and stud and place anvils on bottom tap lightly with mallet to close.

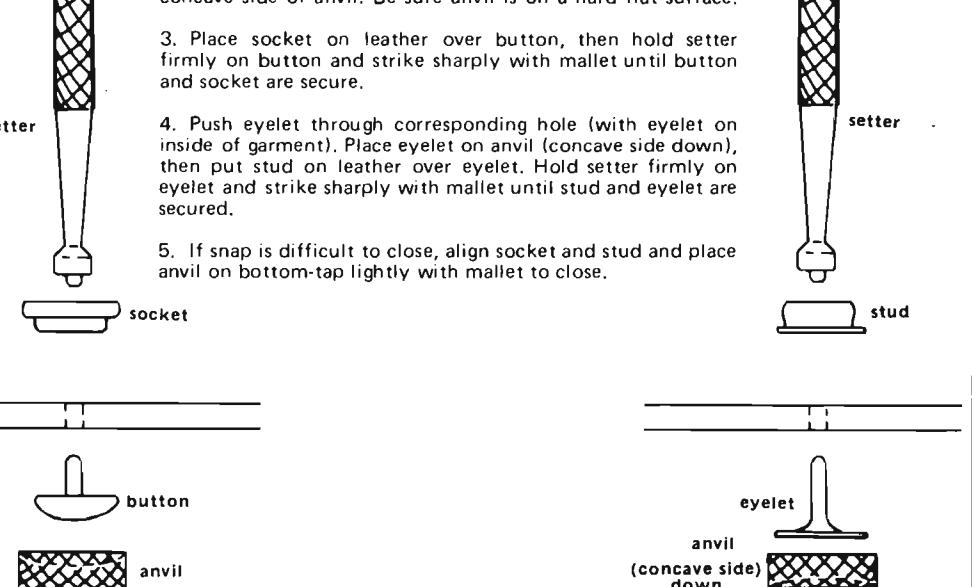

Dart Instructions

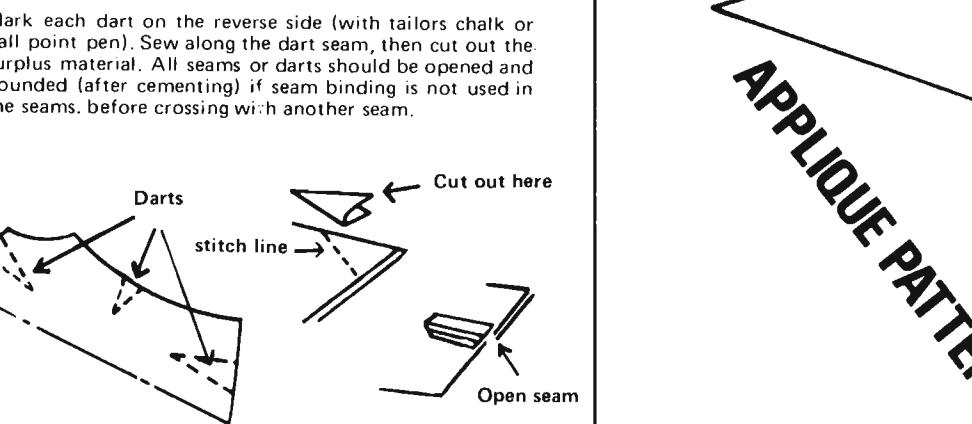

APPLIQUE PATTERN

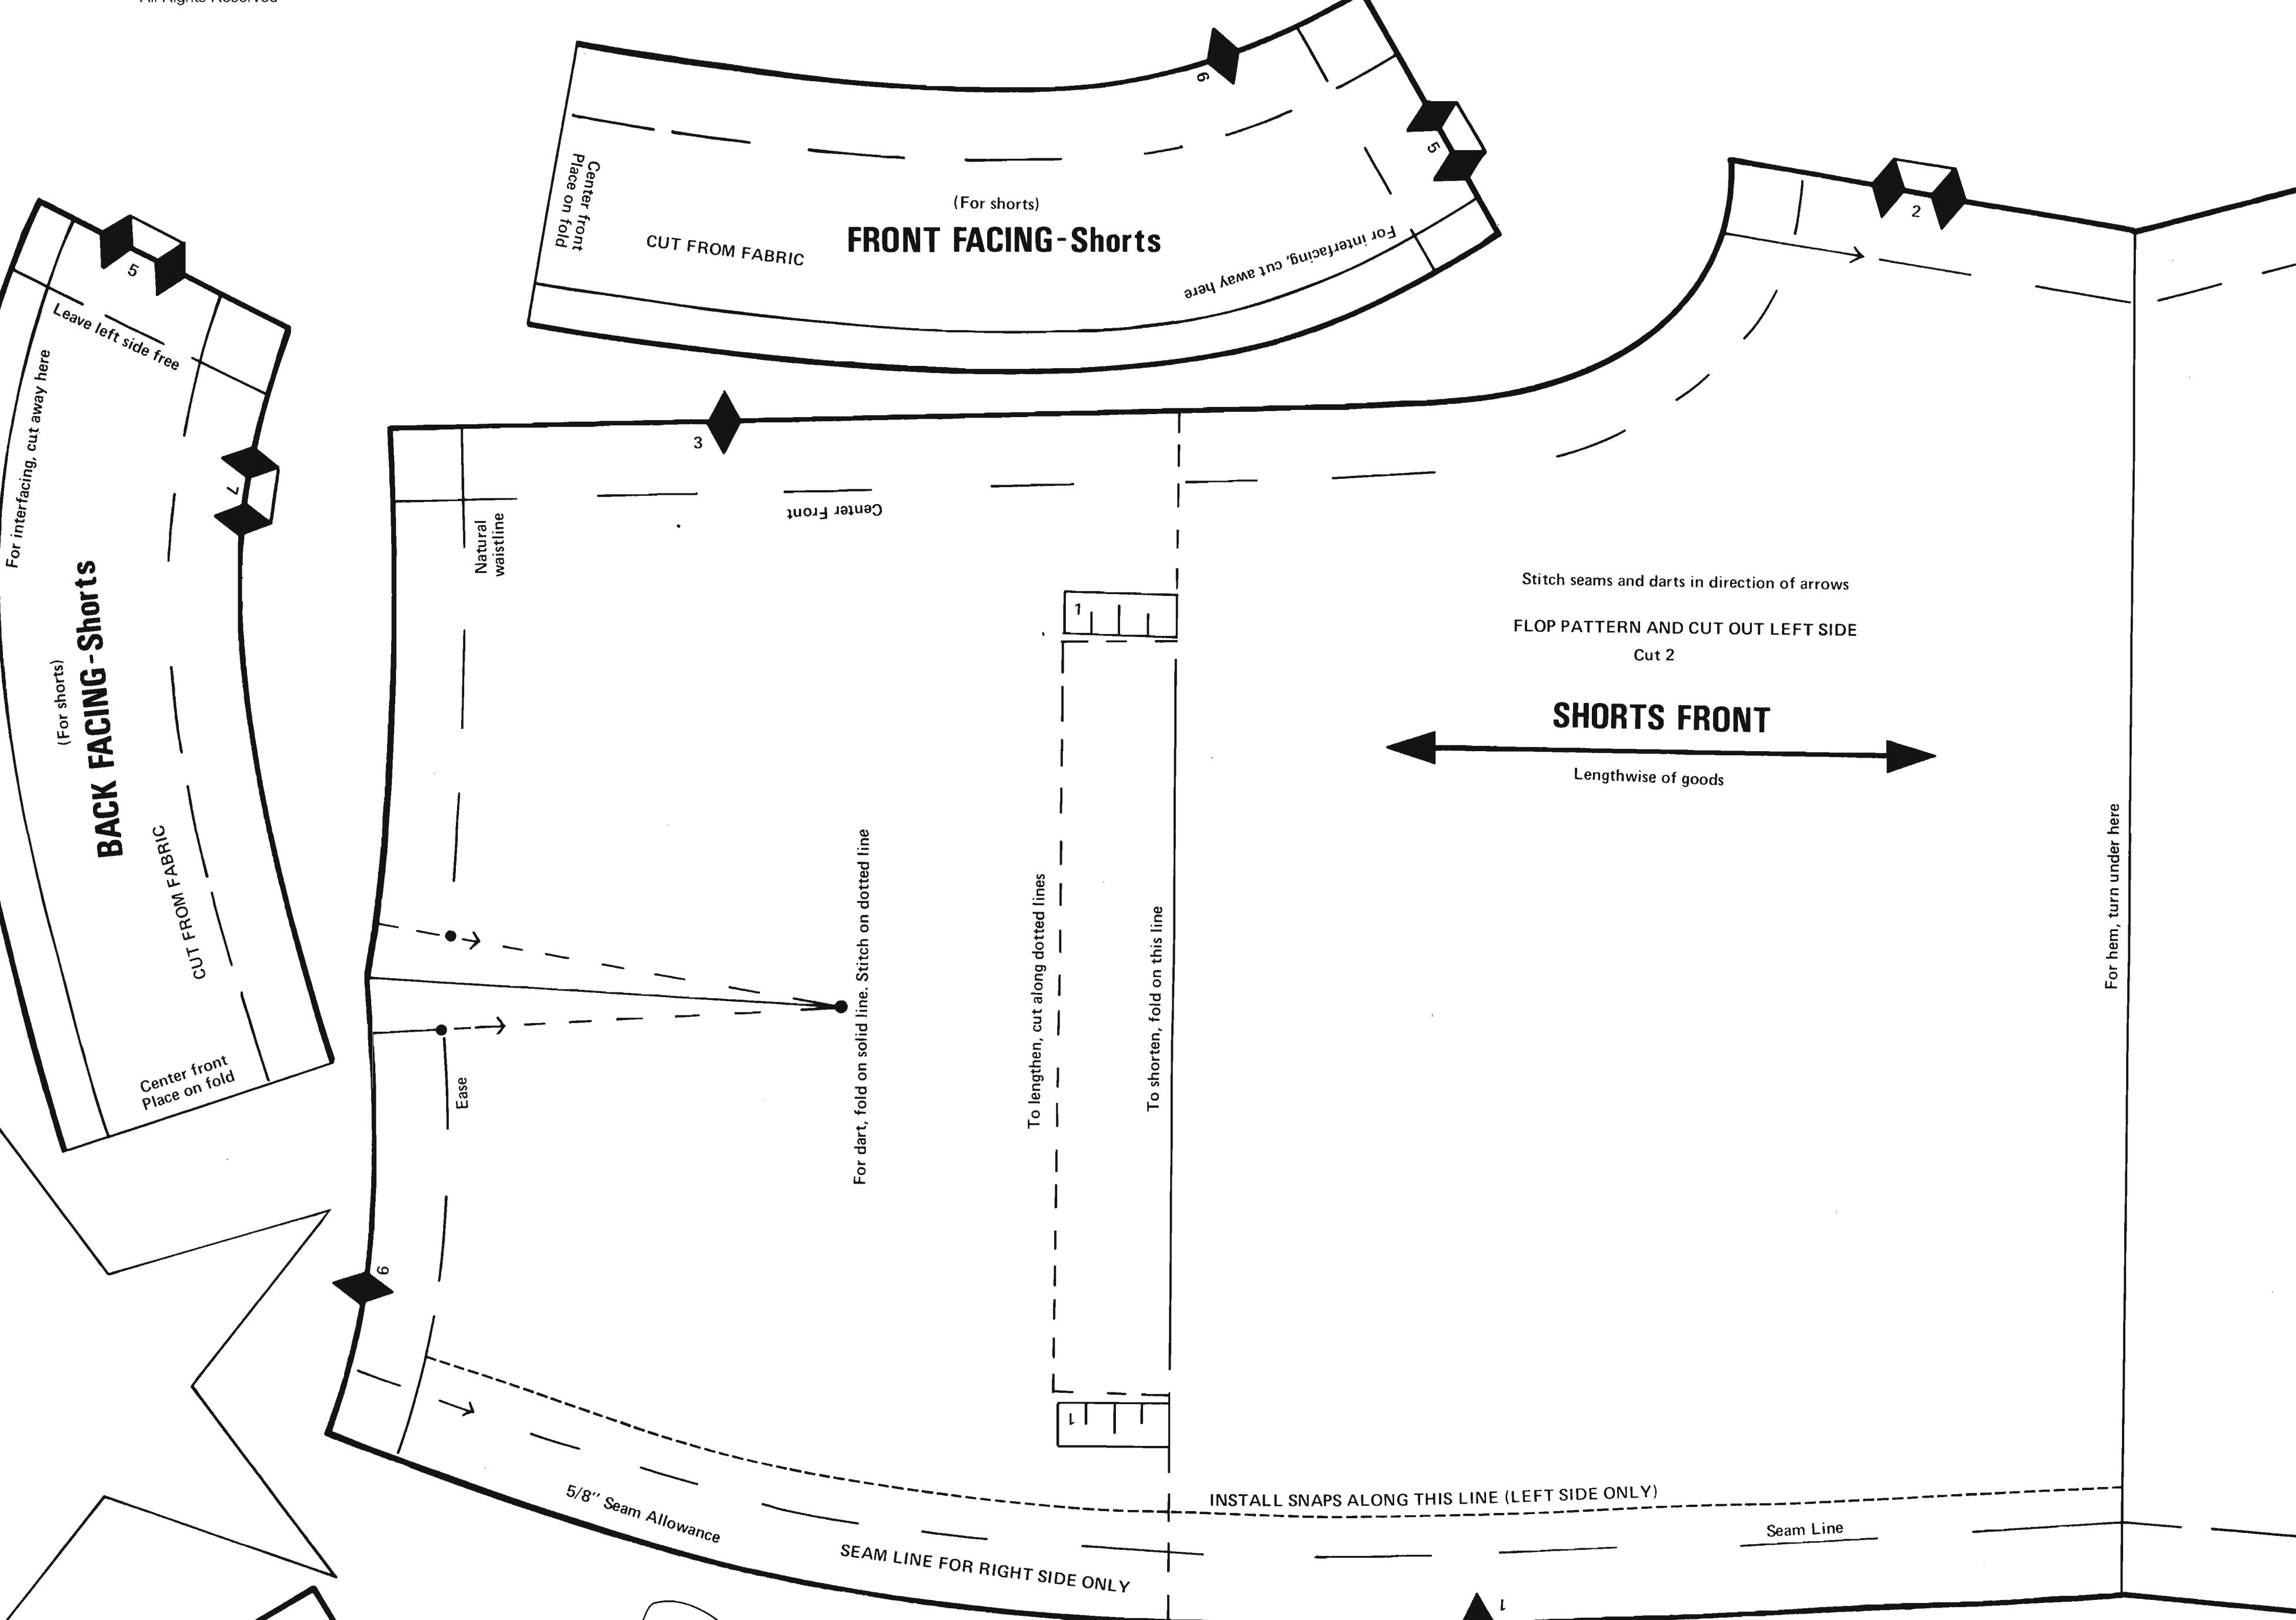


(For shorts)
CUT FROM FABRIC

FRONT FACING-Shorts




(For shorts)
CUT FROM FABRIC

BACK FACING-Shorts

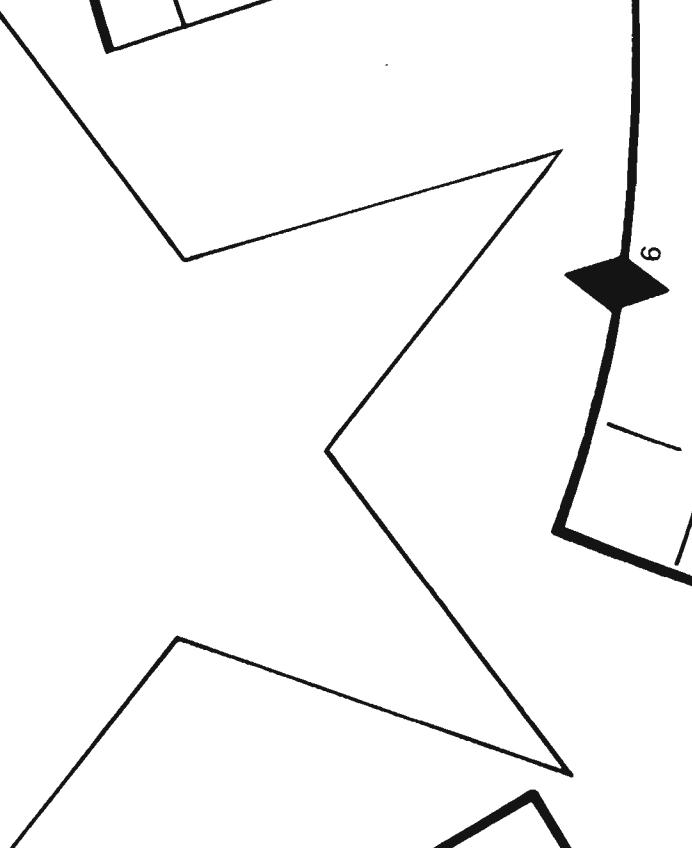


(For shorts)
CUT FROM FABRIC

FRONT FACING-Shorts

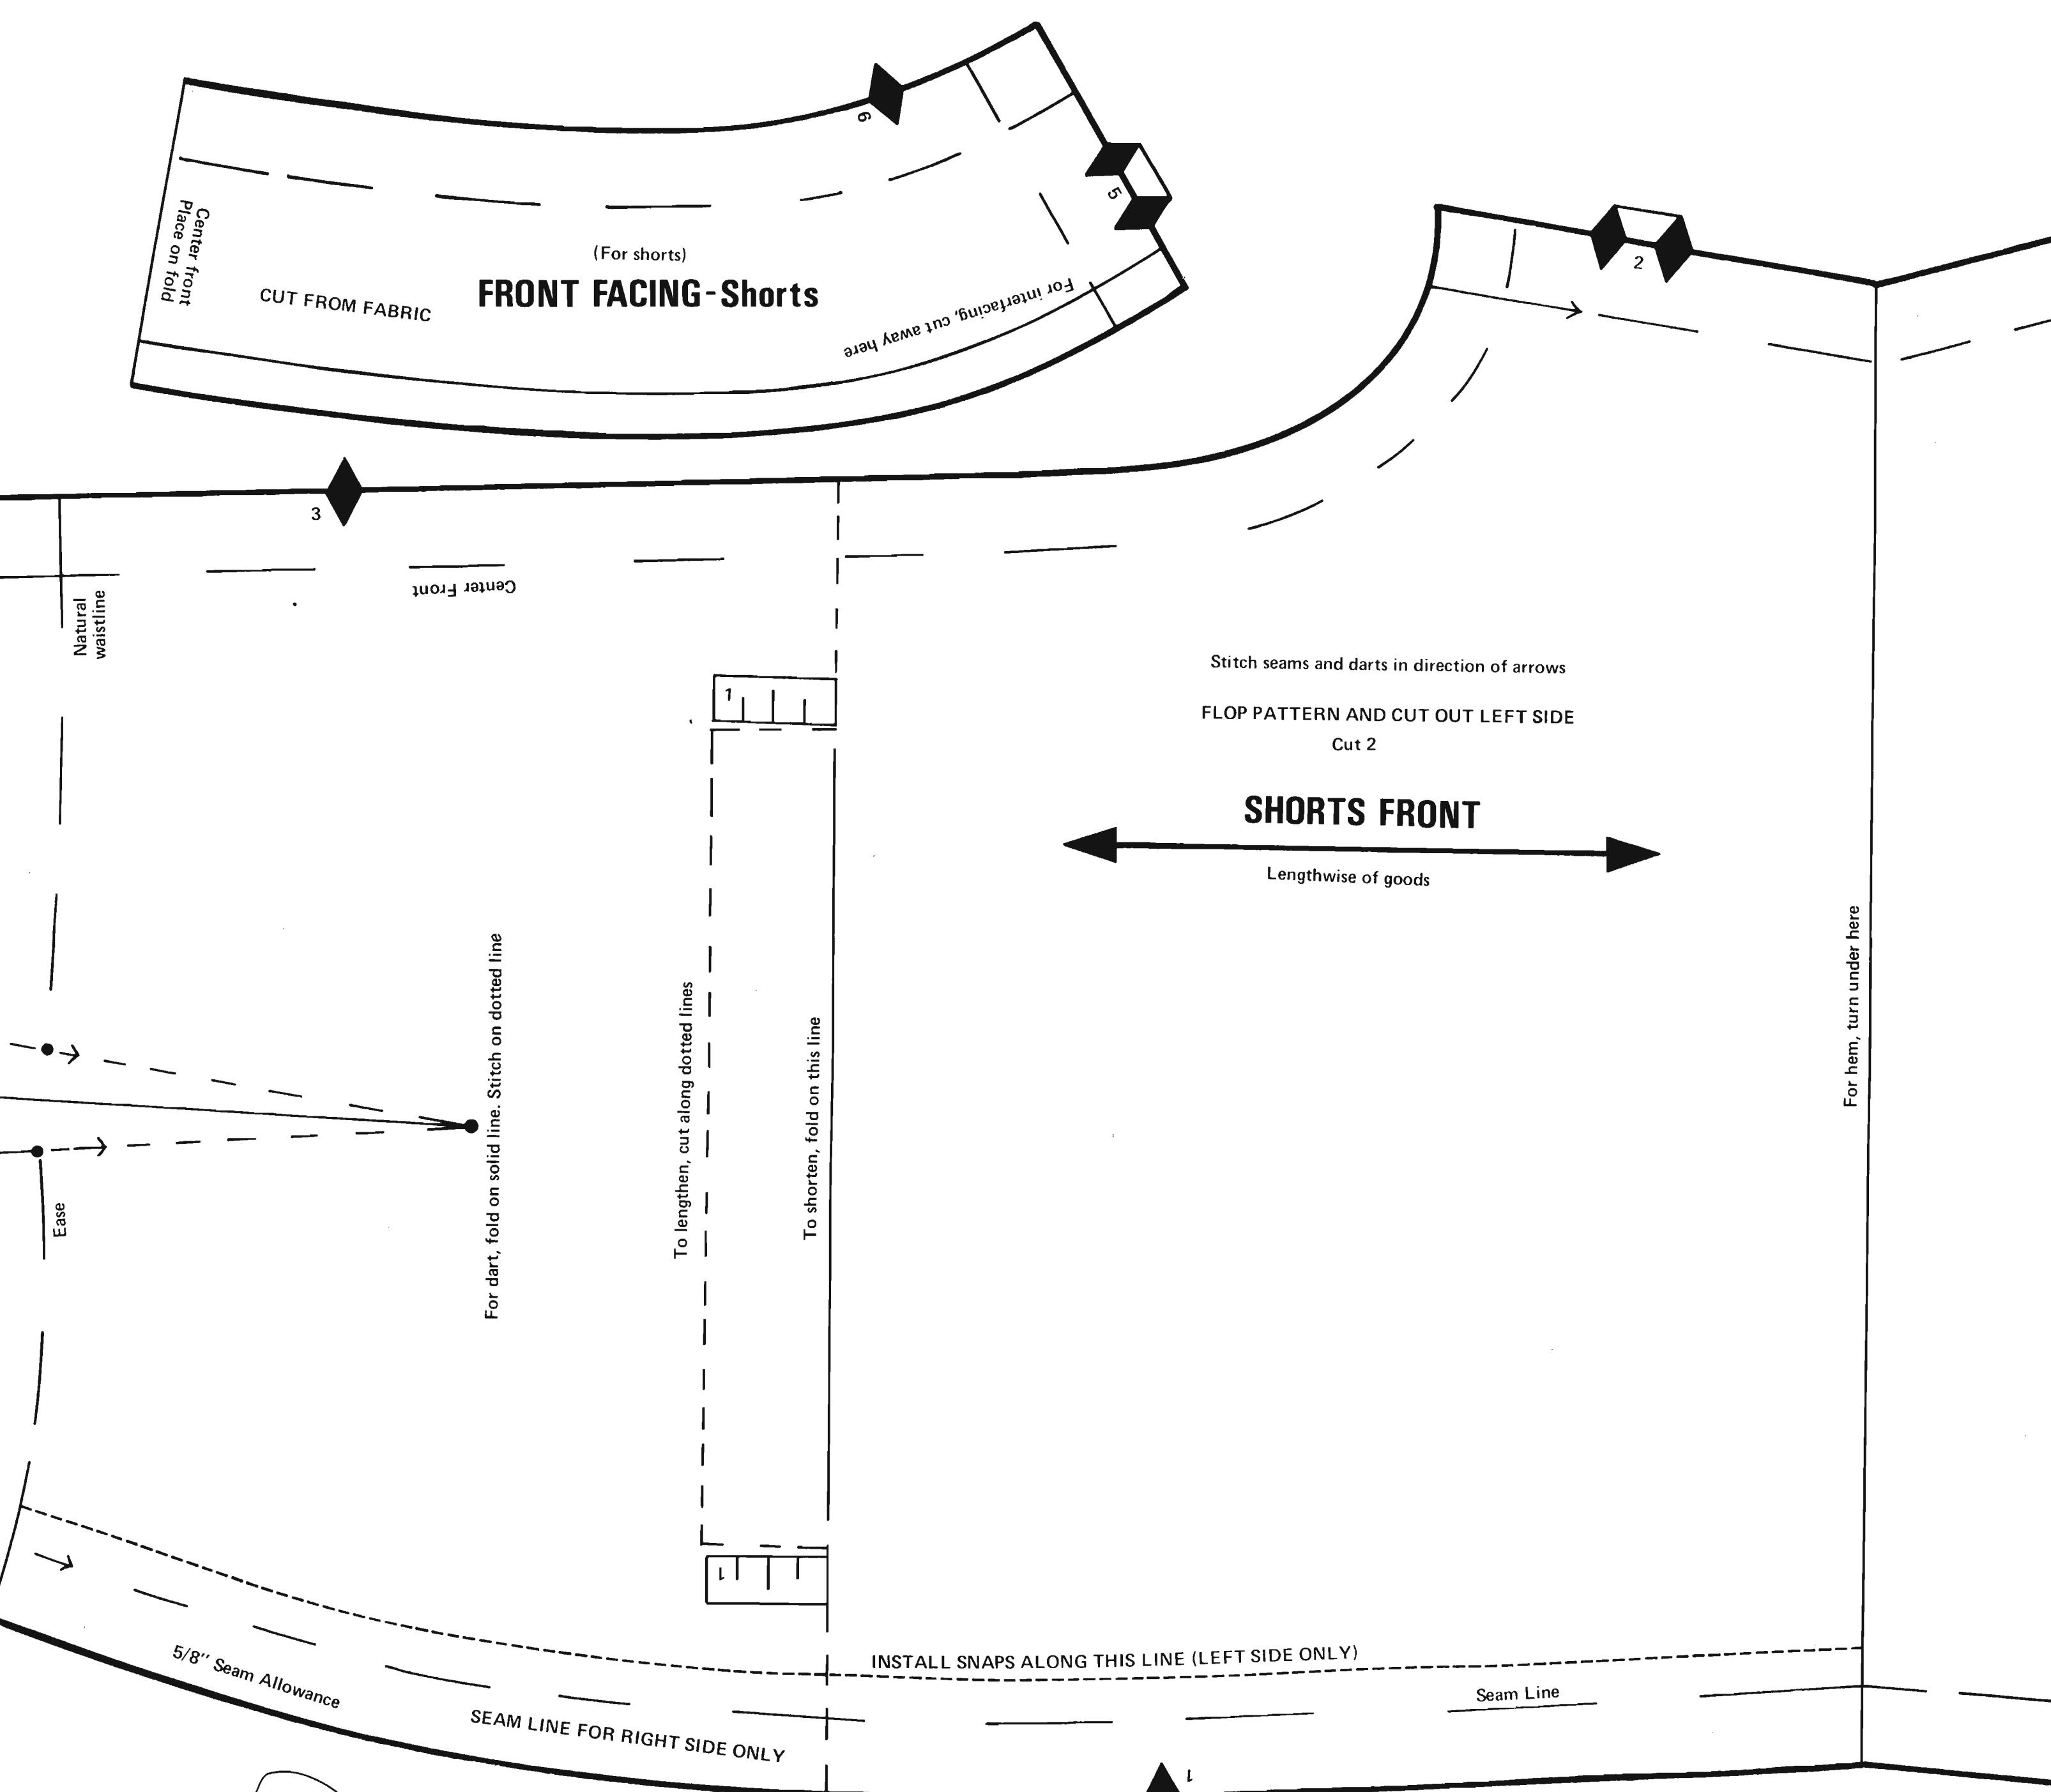


(For shorts)
CUT FROM FABRIC

FRONT FACING-Shorts

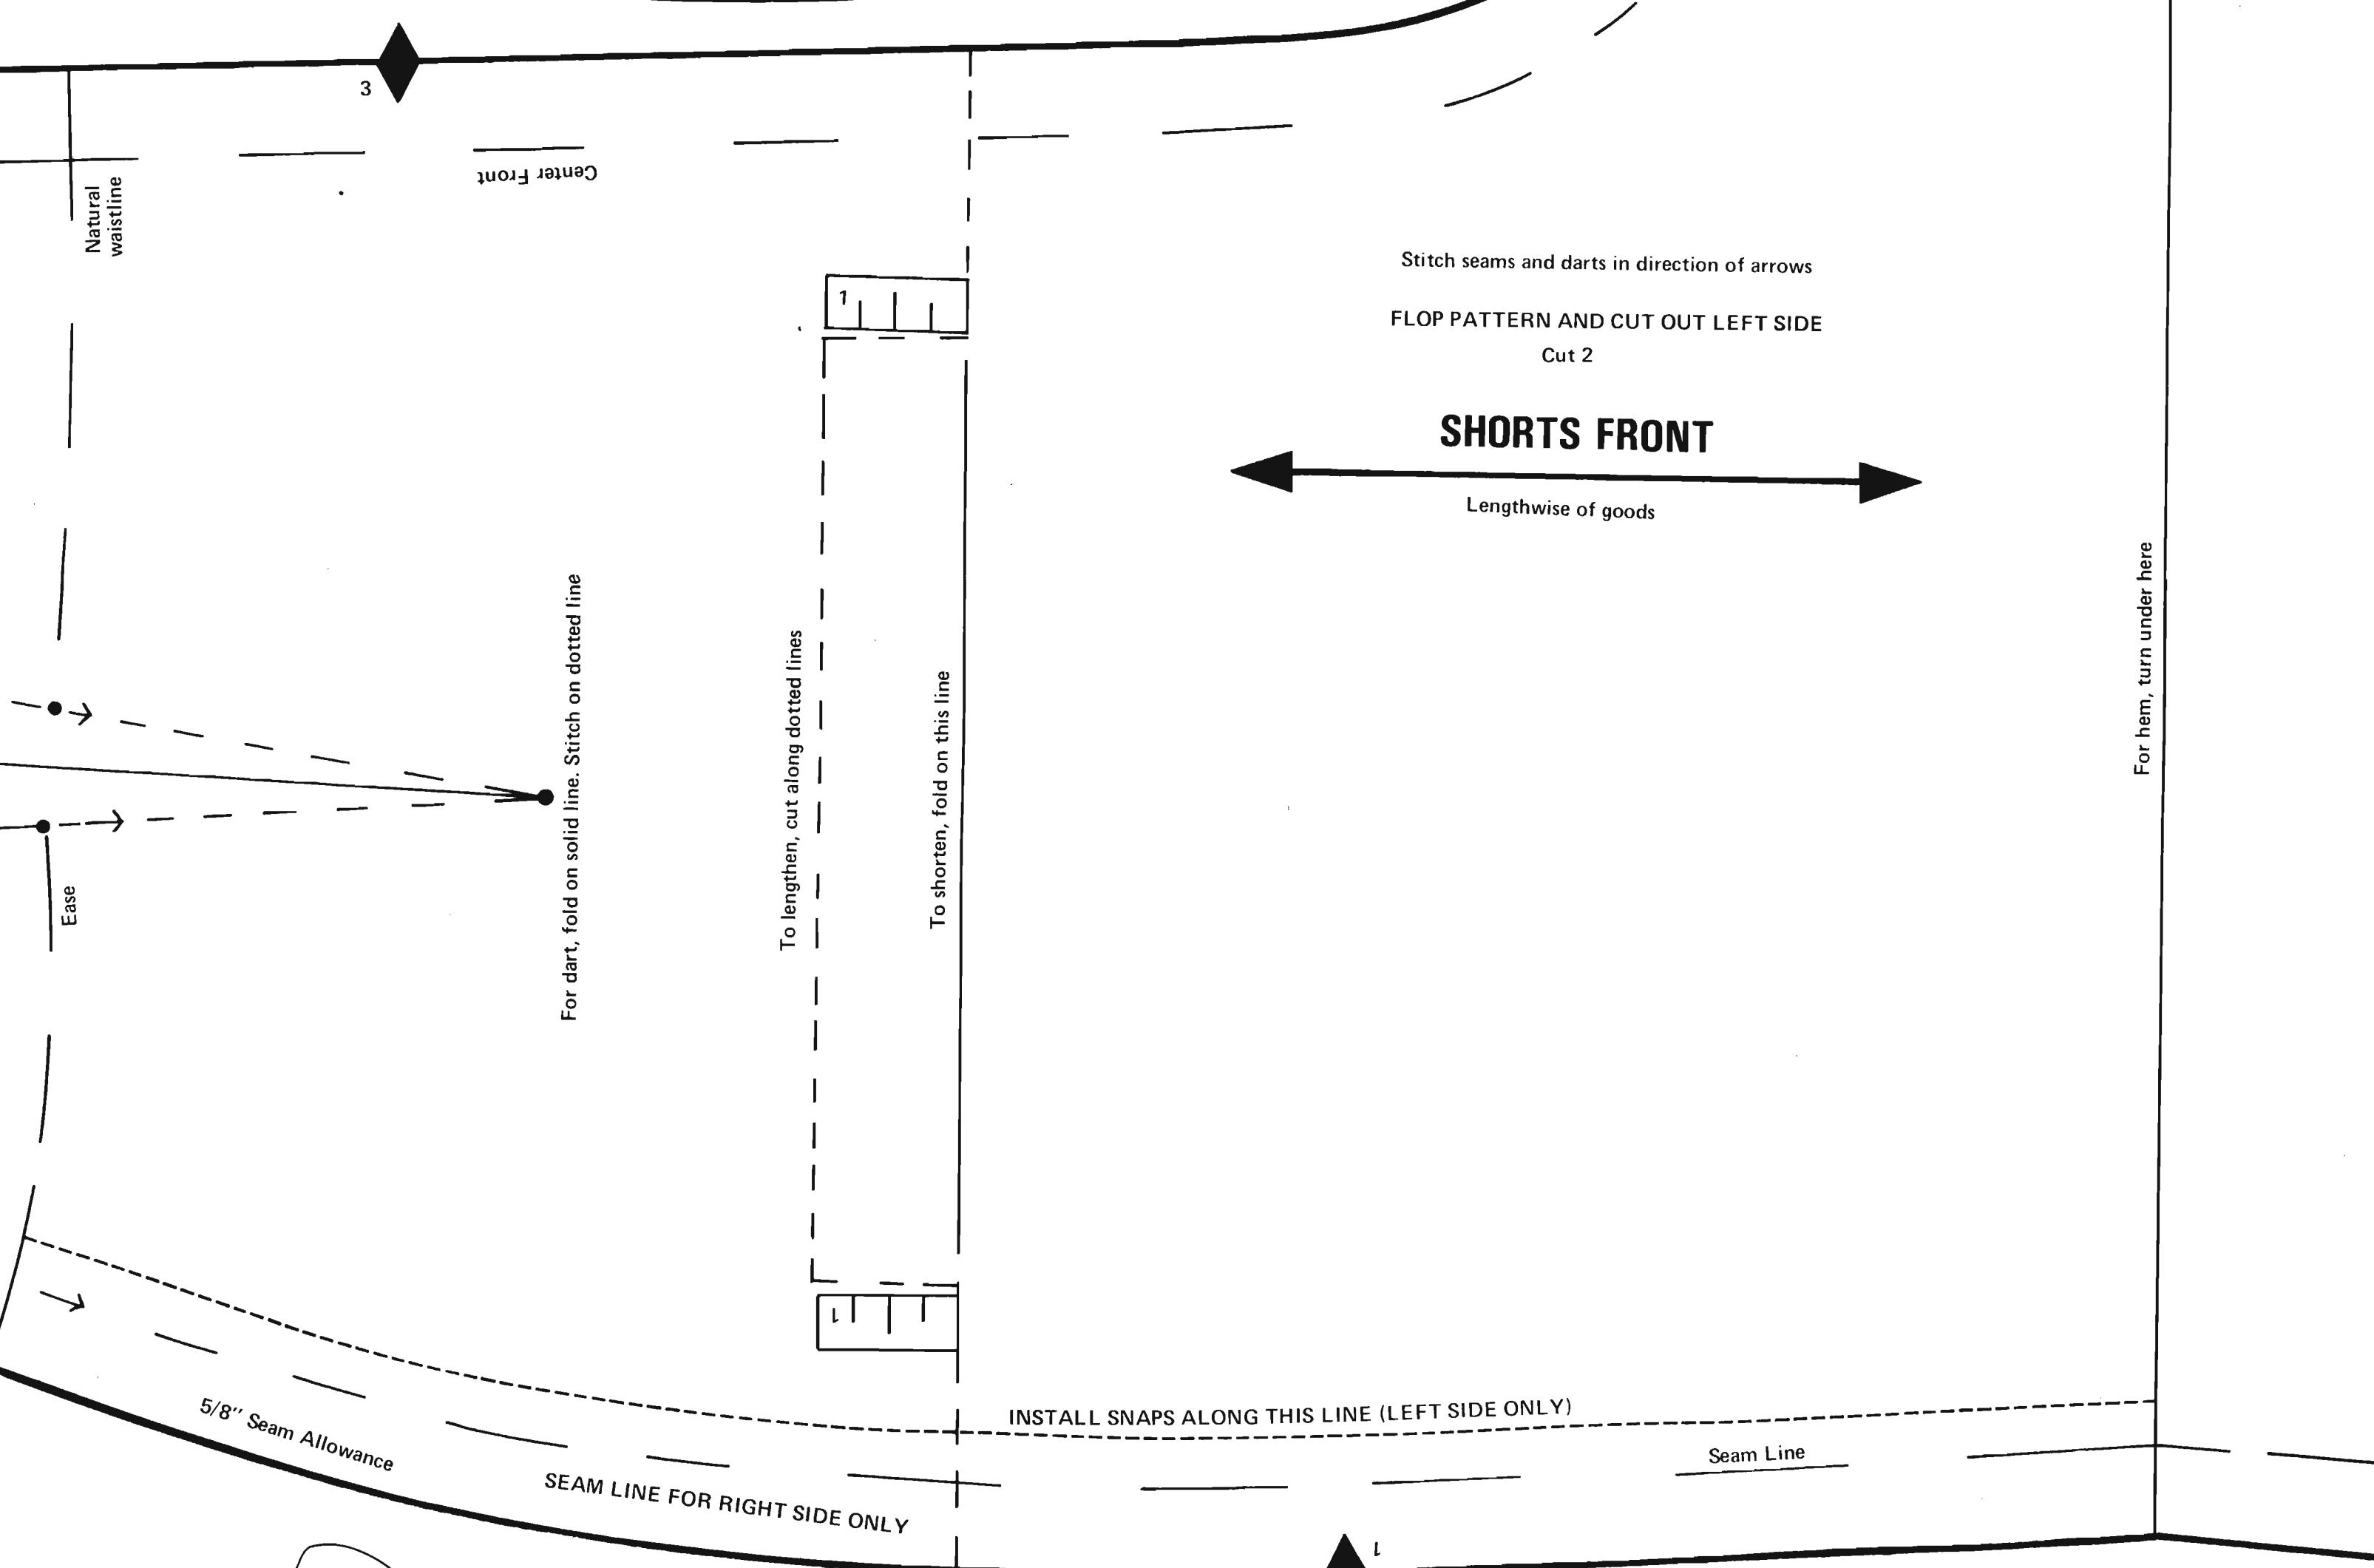


(For shorts)
CUT FROM FABRIC

FRONT FACING-Shorts

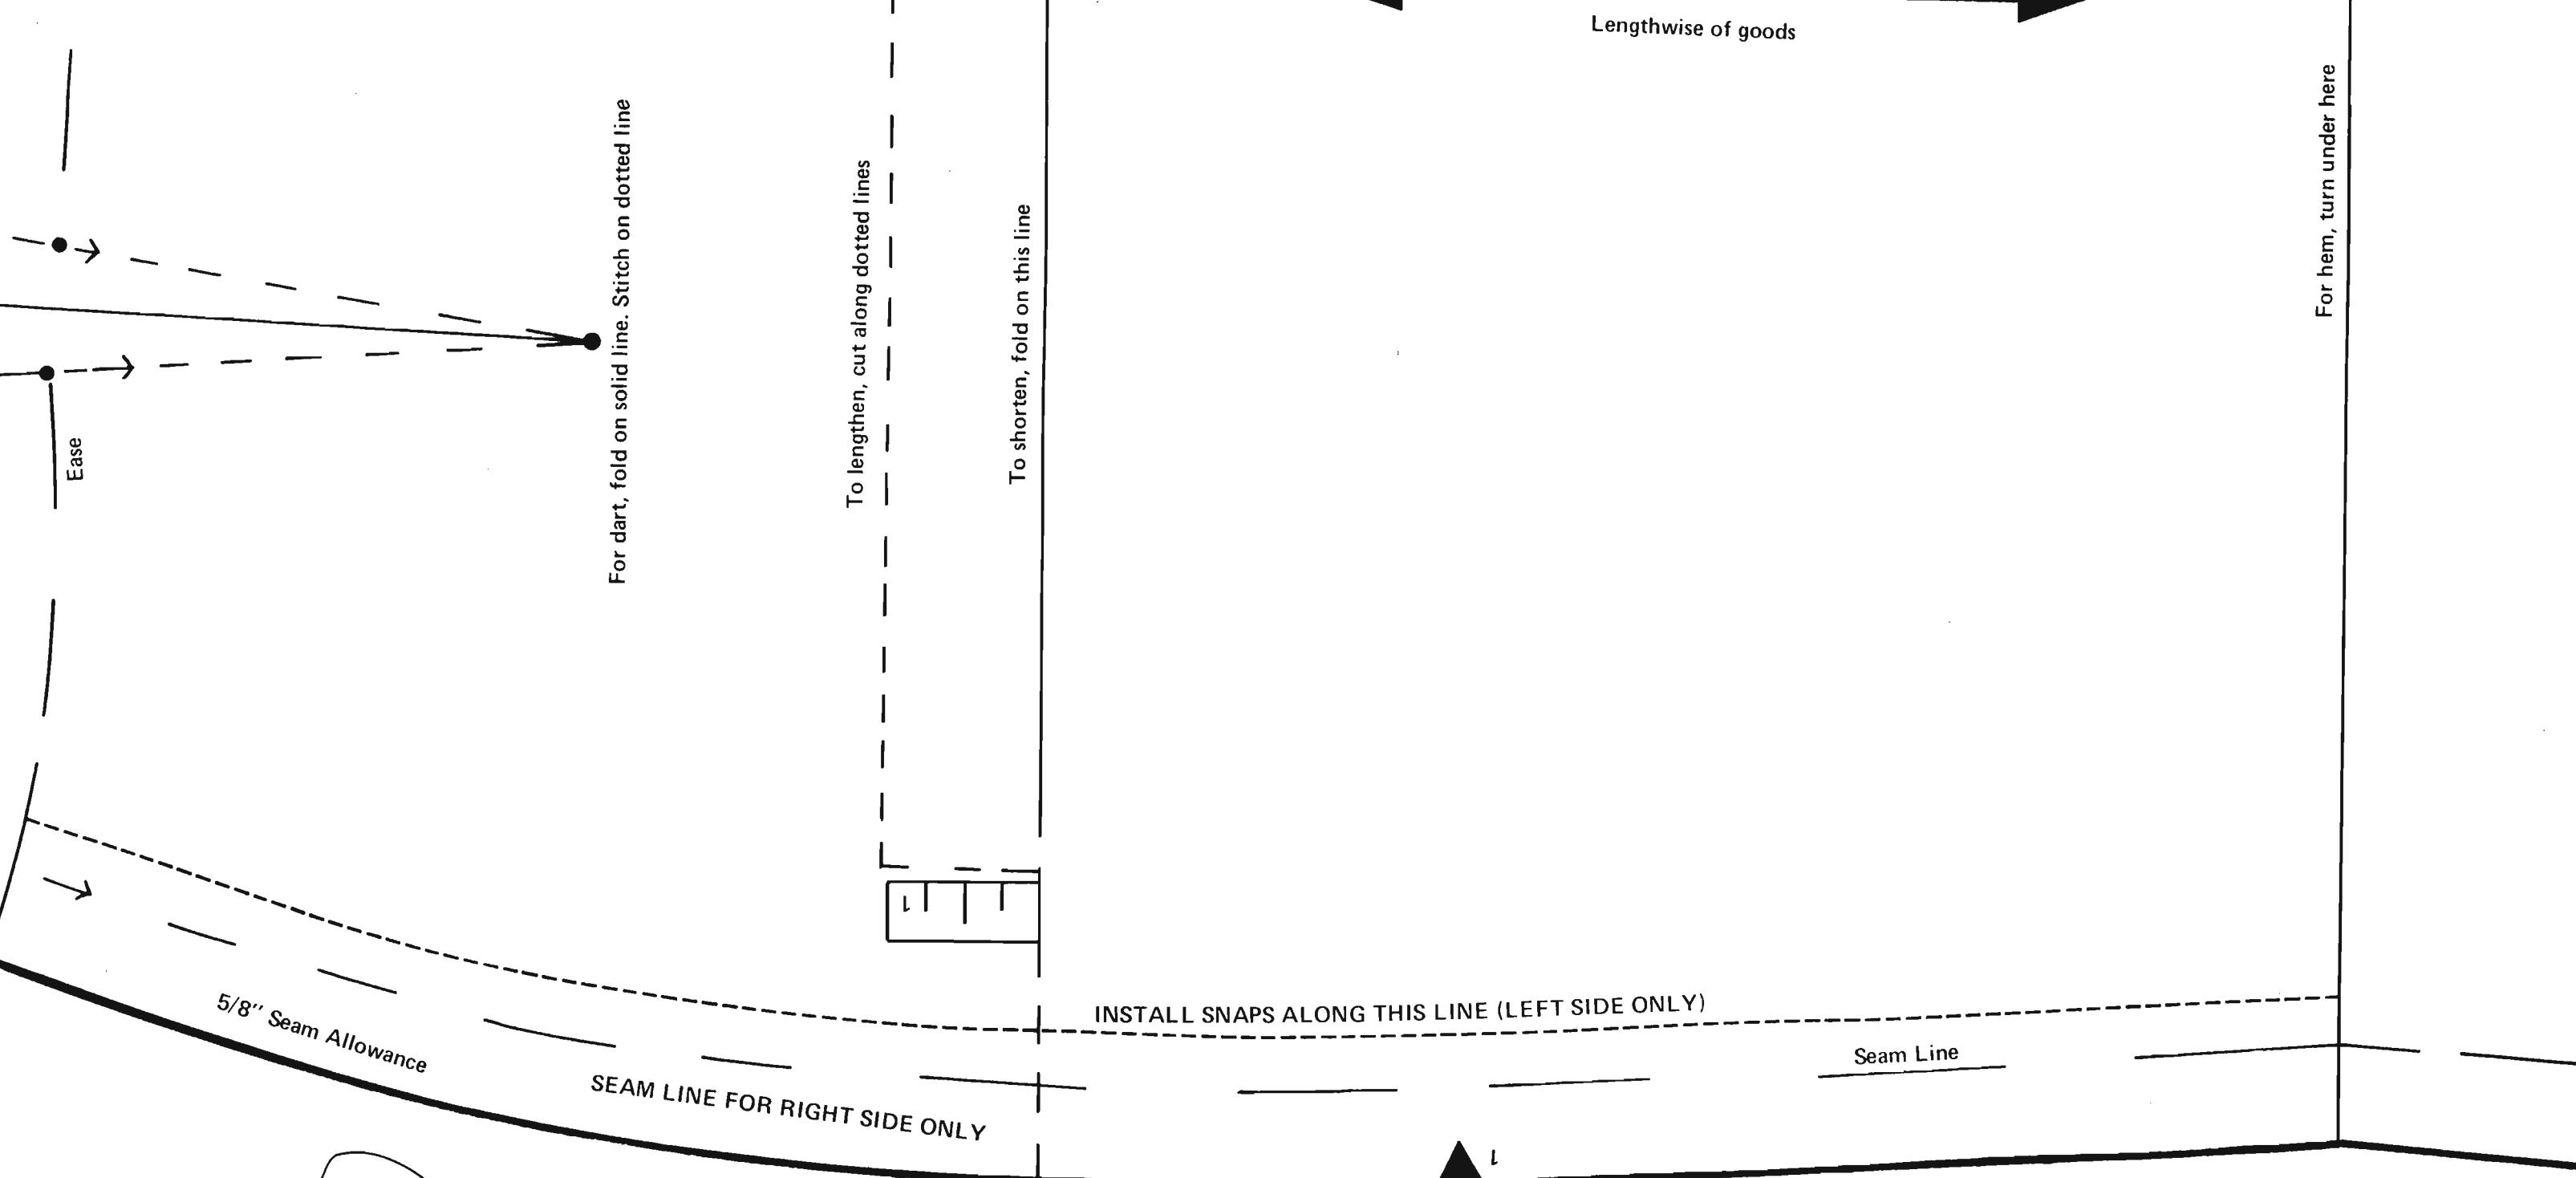


(For shorts)
CUT FROM FABRIC

FRONT FACING-Shorts

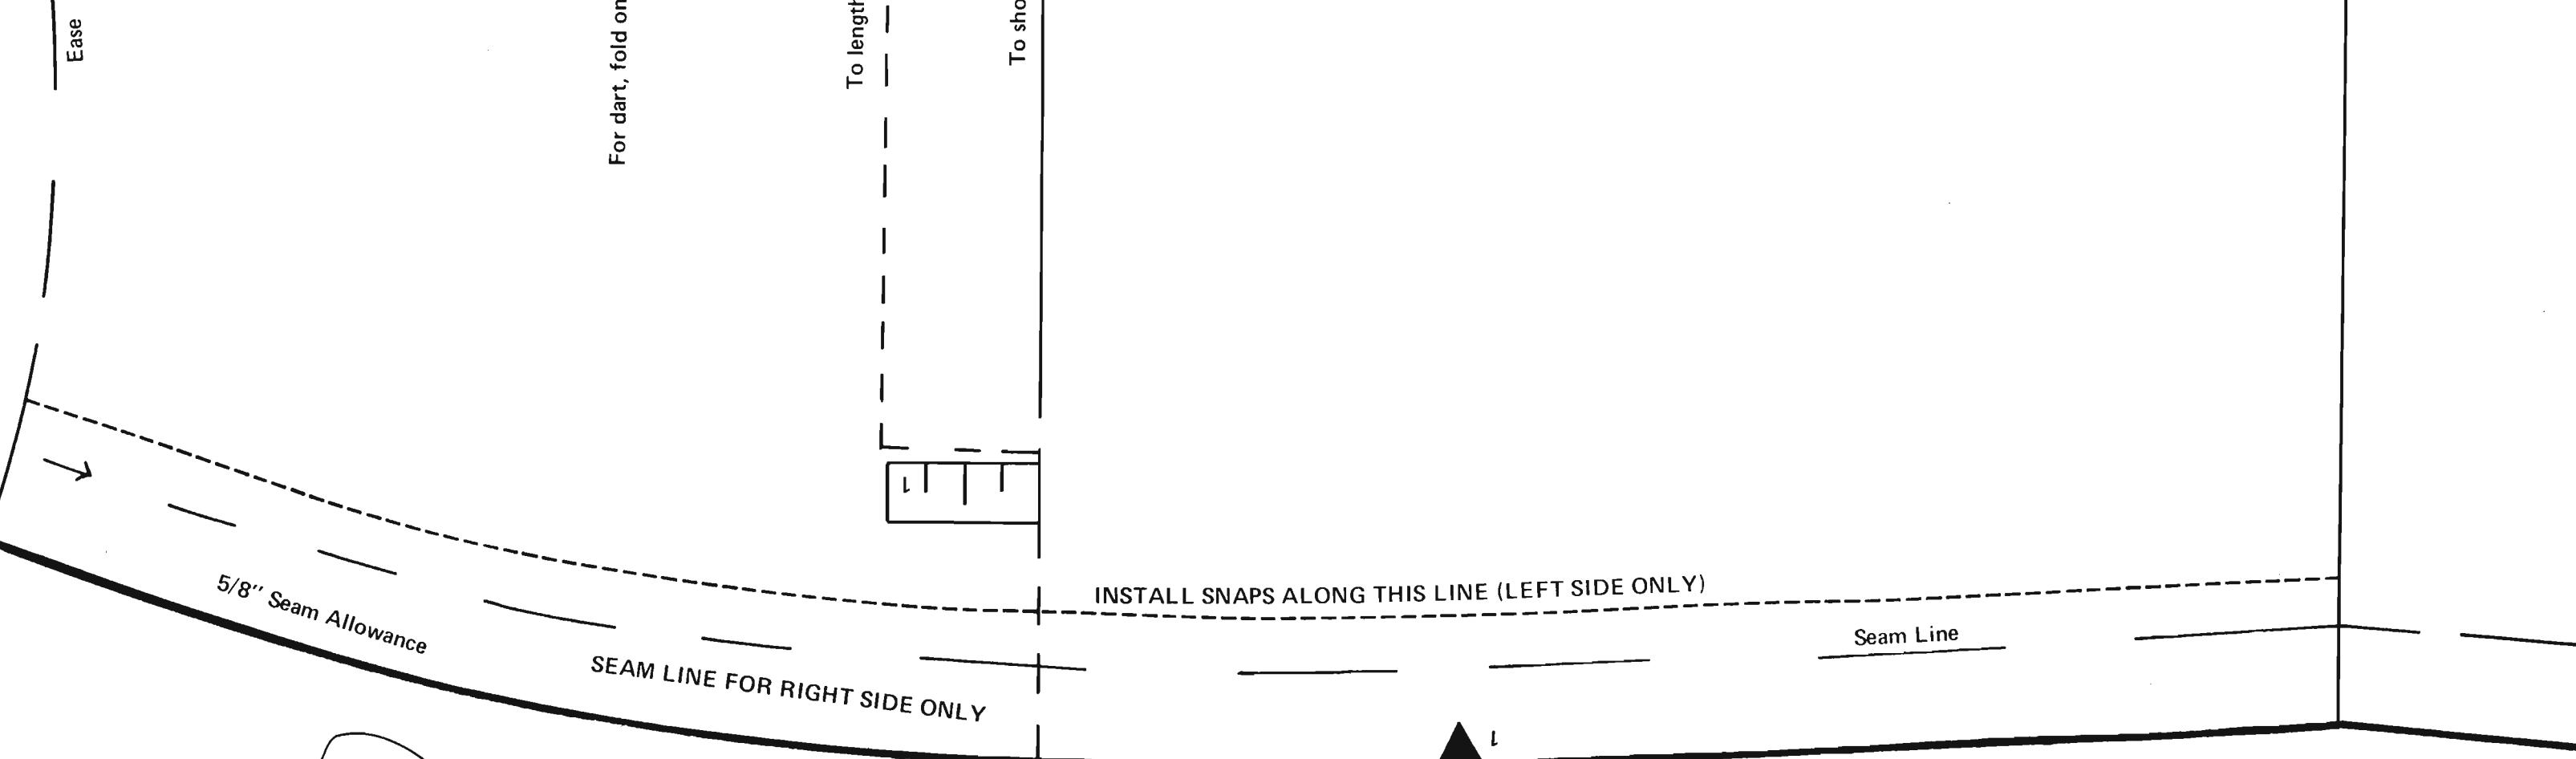

(For shorts)
CUT FROM FABRIC

FRONT FACING-Shorts

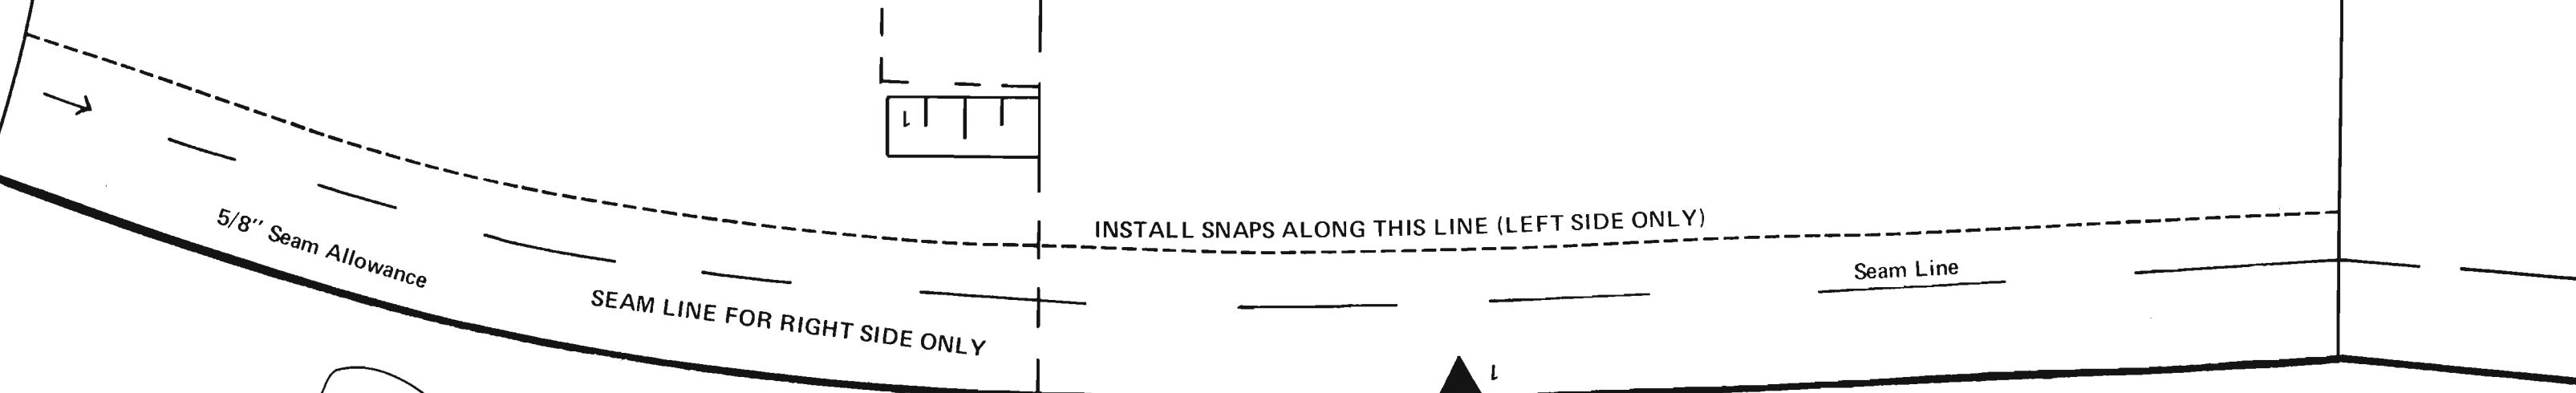

(For shorts)
CUT FROM FABRIC

FRONT FACING-Shorts



(For shorts)
CUT FROM FABRIC

FRONT FACING-Shorts

No. 1914

HOT
PANTS
& TOP
PATTERN

SIZE 14

With Step-

burr-Ston



A black and white photograph of a woman posing in a white, short-sleeved, cropped hoodie and dark shorts. The shorts feature a large white star patch on the left side and two small circular details on the right side. She is holding a long, thin object, possibly a bow or a whip, in her right hand. The background is a plain, light-colored wall.

Pattern Parts for SHORTS

Front




A large, irregularly shaped black outline representing the front pattern piece for a pair of shorts. It has a wide, flat bottom and a narrower, tapered top. The word "Front" is printed in a small, sans-serif font near the bottom center of the shape.





(No part of this or any other page may be reproduced without written permission.)

© Copyright 2010 by Tandy Leather Factory
All Rights Reserved

Pattern Parts for TOP

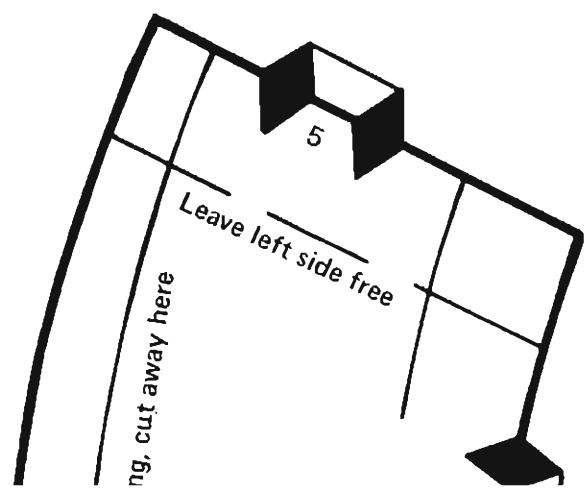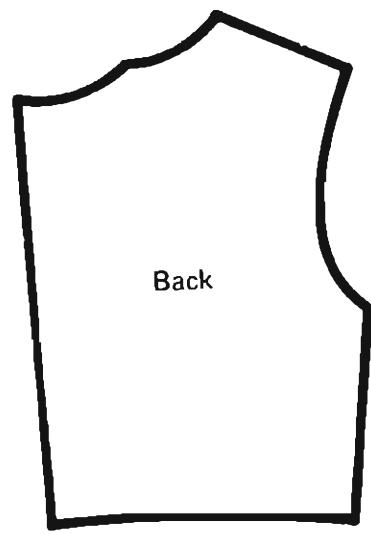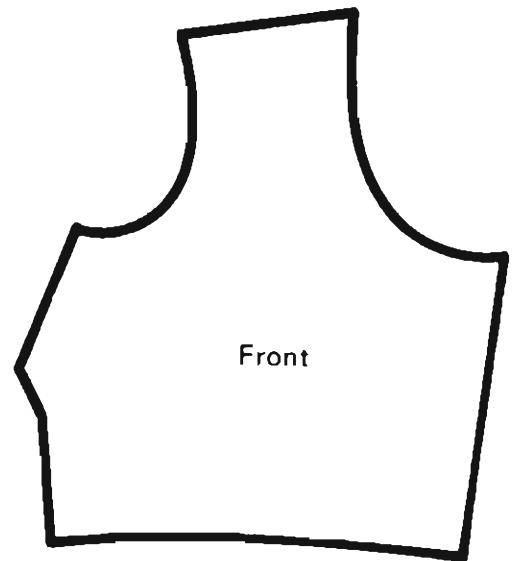

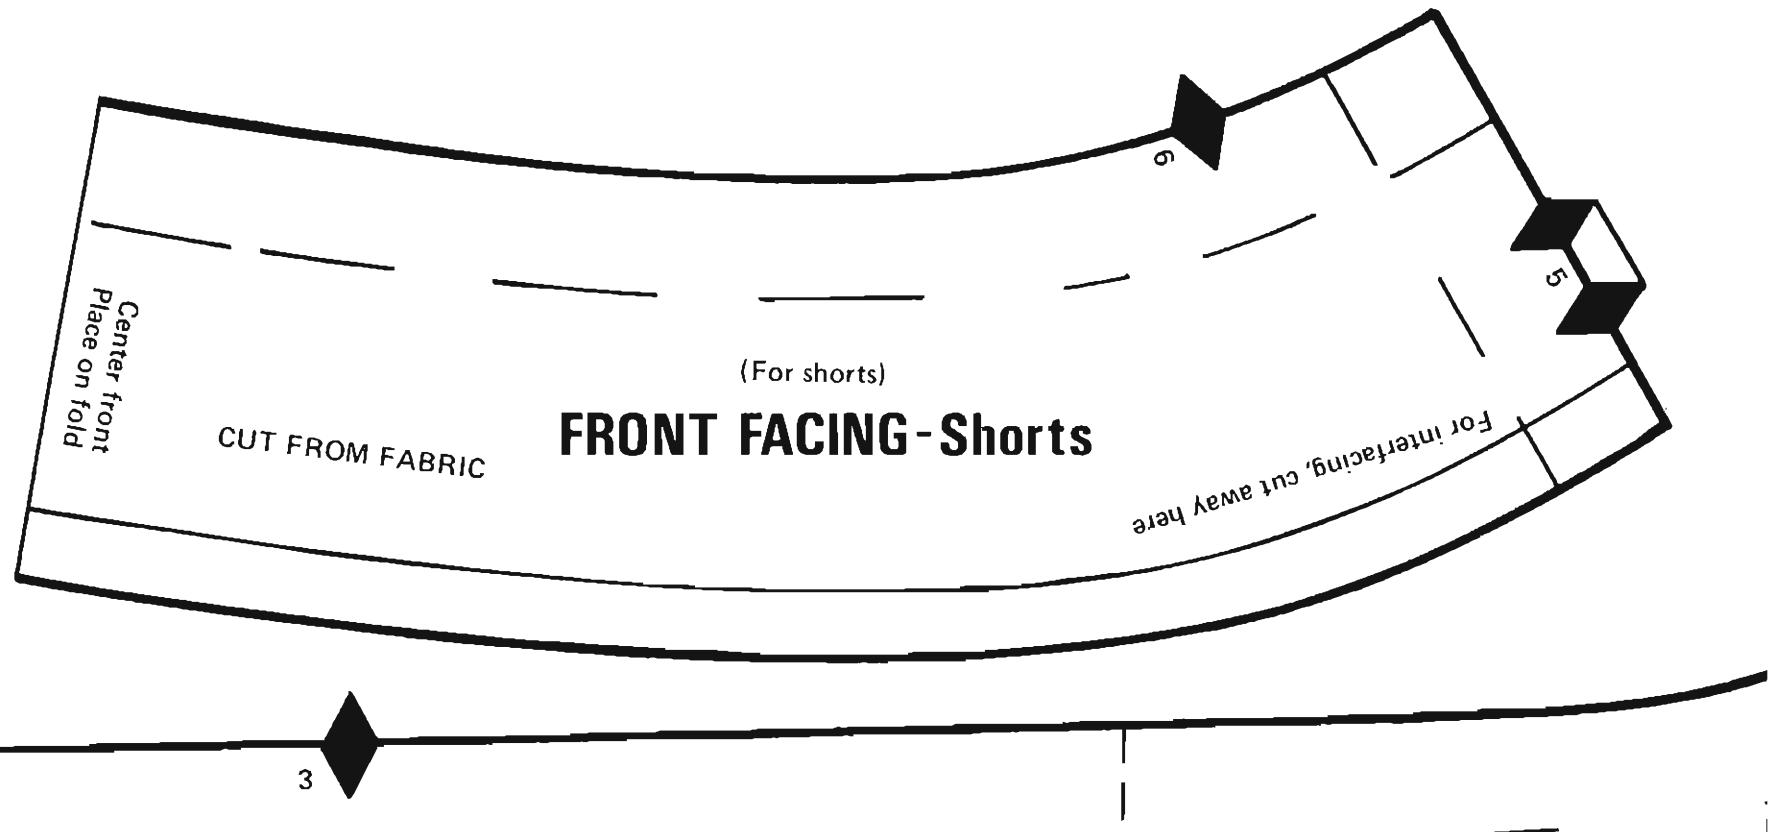

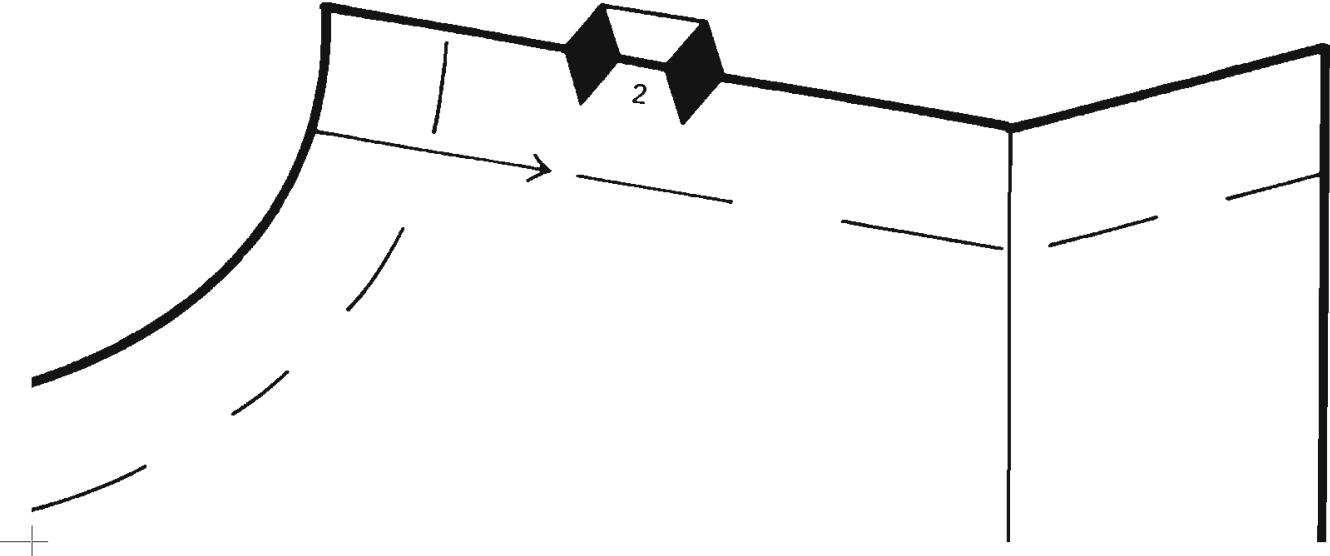

by step

Instructions



TOP INSTRUCTIONS




STEP 1: DARTS, INTERFACINGS, ETC.

Attach interfacing to **WRONG SIDE** of fronts, matching notches.

Stitch dart in fronts (see Dart Instructions).


Stitch darts in back. Attach interfacing to **WRONG SIDE** of back.

Stitch shoulder seams.

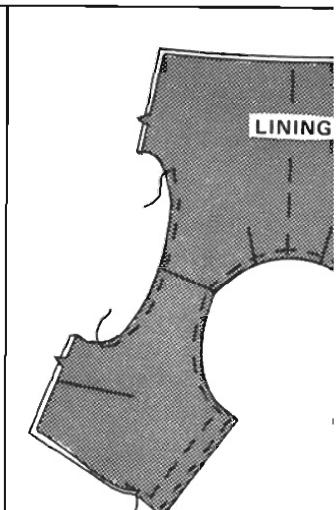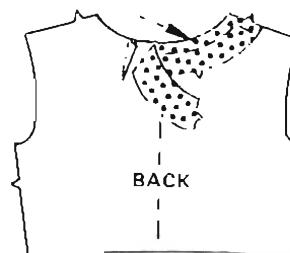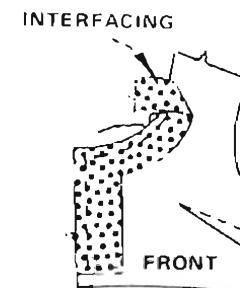


STEP 2: CONTINUED

Turn **TOP RIGHT SIDE OUT**, bringing fronts through shoulders toward back.

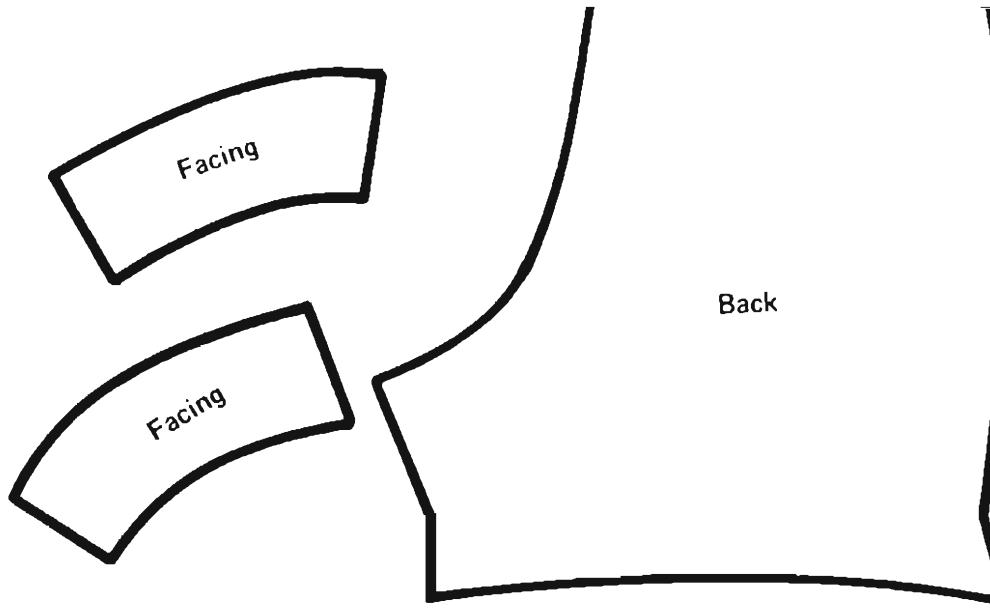


STEP 3: CASING, ETC.

If you are going to use a casing and elastic around the bottom of the top, stitch along line indicated on pattern.

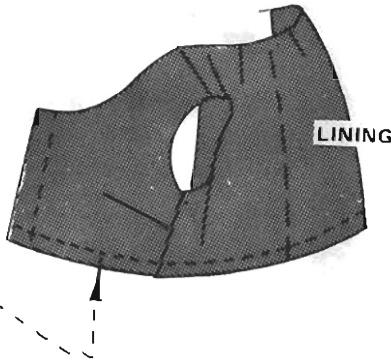


Insert elastic into casing, through front opening. Try on for measurement of elastic. Adjust. Pin elastic at front edges. Stitch across casing about $\frac{1}{4}$ " from front edges through the elastic. Trim elastic.

LINING

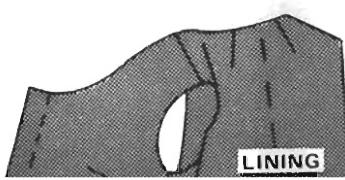


SHORTS INSTRUCTIONS

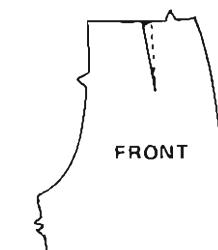

STEP 1: DARTS & SEAMS


Stitch dart in front and backs. (See Dart Instructions.)

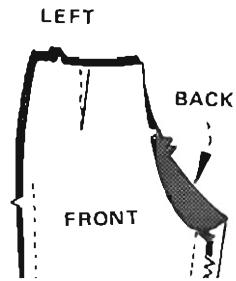


Stitch side seams, leaving LEFT seam free.



STEP 3: FACING ETC.



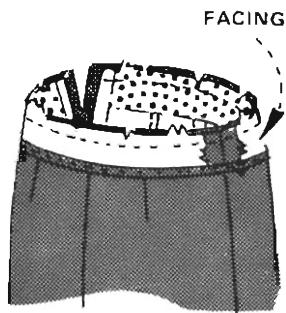


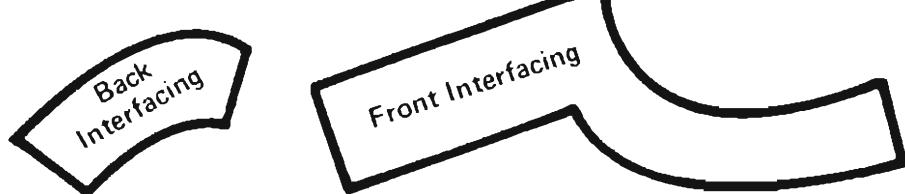

SNAP INSTALLATION INSTRUCTIONS

(Install snaps after garment is complete.)

1. Mark snap locations. Use No. 3 drive punch for holes.
2. Push button through first hole in leather garment (leaving head of button on outside) and rest head of button on concave side of anvil. Be sure anvil is on a hard flat surface.
3. Place socket on leather over button, then hold setter firmly on button and strike sharply with mallet until button and socket are secure.
4. Push eyelet through corresponding hole (with eyelet on inside of garment). Place eyelet on anvil (concave side down), then put stud on leather over eyelet. Hold setter firmly on eyelet and strike sharply with mallet until stud and eyelet are secured.
5. If snap is difficult to close, align socket and stud and place anvil on bottom-tap lightly with mallet to close.

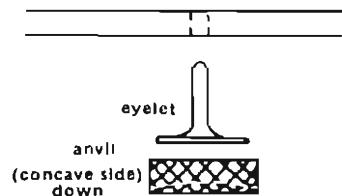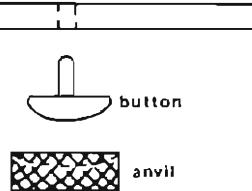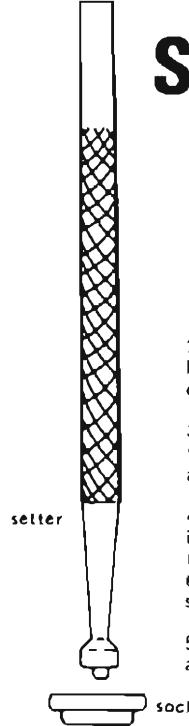


Dart Instructions

For interfacing

BACK FACING - Shorts

(For shorts)

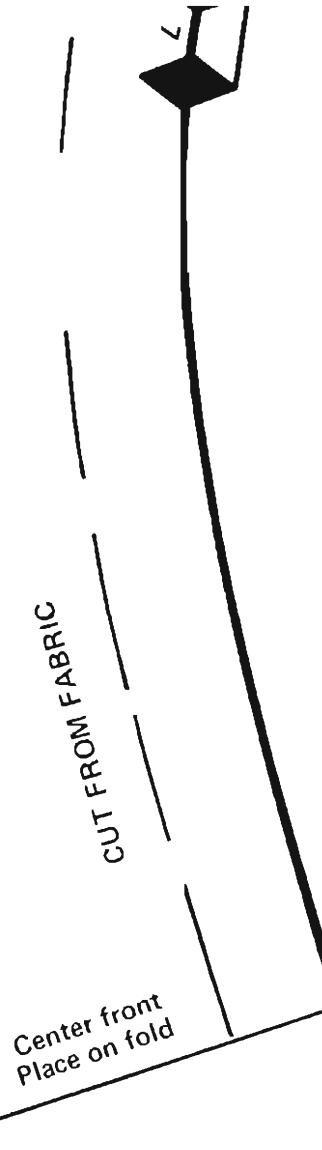

6

Natural
waistline

Center Front

Stitch

FLOP

For dart, fold on solid line. Stitch on dotted line

Ease

To lengthen, cut along dotted lines

To shorten, fold on this line



h seams and darts in direction of arrows

PATTERN AND CUT OUT LEFT SIDE

Cut 2

SHORTS FRONT

Lengthwise of goods



For hem, turn under here



Open out the lining at side edges; then stitch side seam of lining, continuing to stitch side seam of TOP matching armhole seam.

STEP 2: LINING

Stitch darts and seam lining same as TOP.



Attach lining to TOP RIGHT SIDES TOGETHER, matching shoulder seams, darts and outer edges.

Stitch across each lower front edge for about 3".

Stitch front and neck edges starting and ending $5/8"$ from lower front stitching. (This opening is for casing and should only be made if you intend to use elastic around the bottom of the top.)

Stitch armhole edges.

Grade seams. Clip curves.

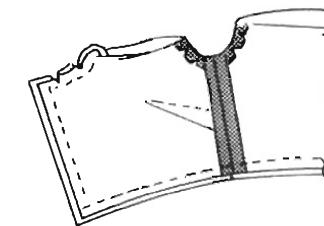
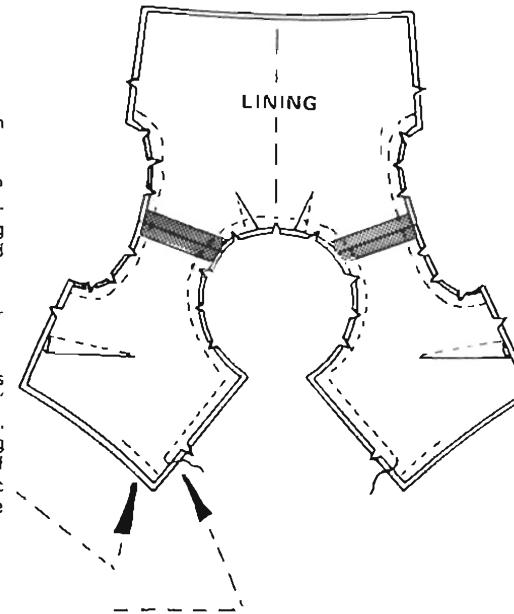



With RIGHT SIDES TOGETHER, leaving part of seam free.

Turn RIGHT SIDE OUT, thro edges together.


(For Top)

BACK

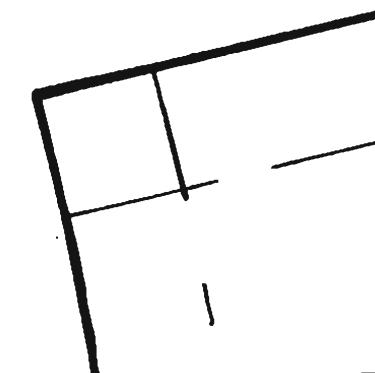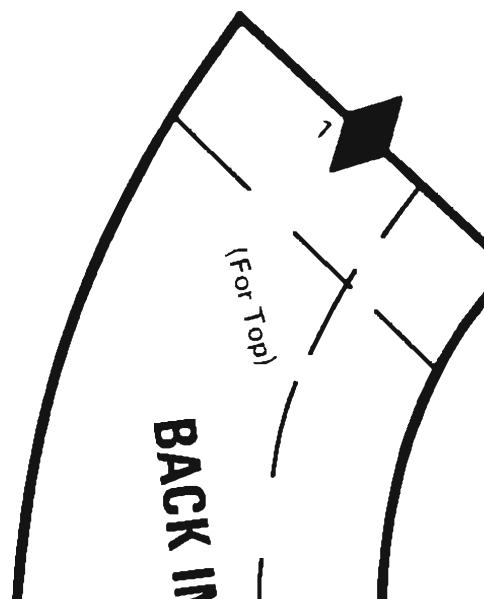


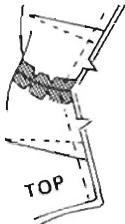

close to front edges.
Slipstitch each casing
opening TOGETHER,
concealing end of
elastic

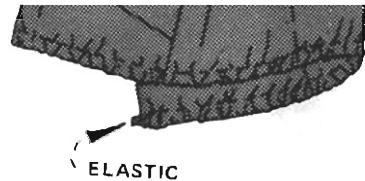


Stitch RIGHT side seam of facing.
Trim off notches on LEFT sid
edges. Stitch $\frac{1}{4}$ " from inner edge.
Turn in $\frac{1}{4}$ " and edge-stitch. Stic
facing to upper edge of shorts.
RIGHT SIDES TOGETHER. Grad
seam. Clip curve. Understitch
facing. Turn to INSIDE.
Catch-stitch to seams. Turn in
LEFT side edges and hem.

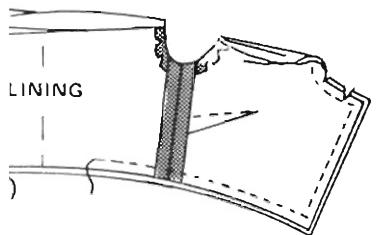

ER, stitch lining to TOP along lower
or turning. Grade seam.

ugh opening. Turn in and slipstitch

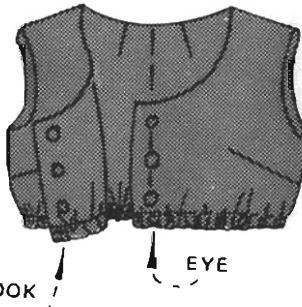


STEP 4: TO FINISH

Lap right front over left, matching centers. Mark
and attach snaps (See Snap Instructions).

Fasten lower edge with a hook and eye.

STEP 2: INTERFACING

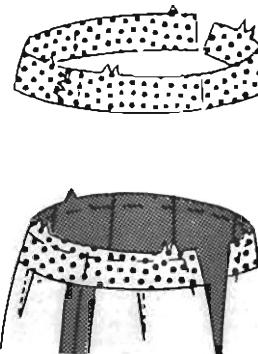


Stitch RIGHT side seam of
interfacing. Trim off notches
on LEFT side edges.

Attach interfacing to shorts,
WRONG SIDES UP, matching
notches and easing in shorts to
fit.


STEP 4: TO FINISH LOWER EDG

Turn up leg edges of shorts on hemline
and cement.


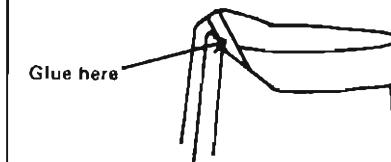


STEP 5: SNAPS


Install snaps on left side of shorts as ind
ted on pattern. (See Snap Instructions.)

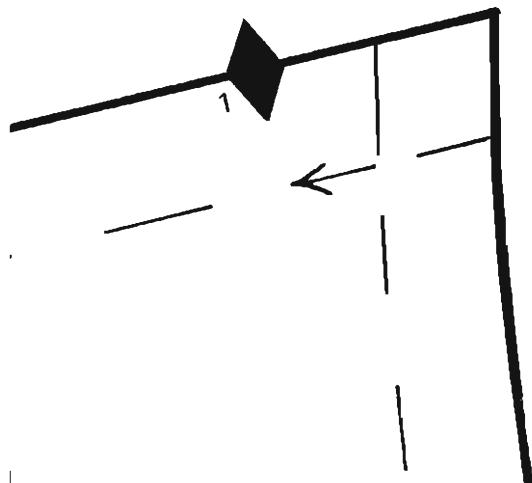

APPLIQUE PATTERN

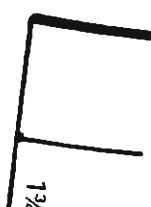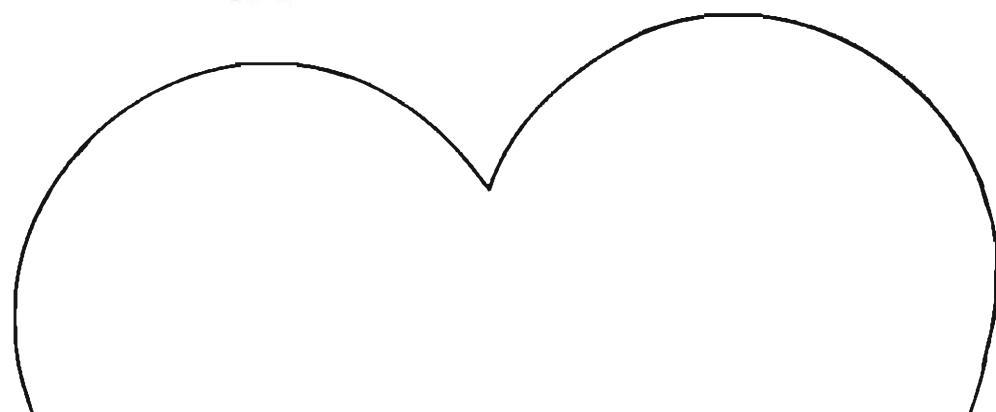

Mark each dart on the reverse side (with tailors chalk or ball point pen). Sew along the dart seam, then cut out the surplus material. All seams or darts should be opened and pounded (after cementing) if seam binding is not used in the seams, before crossing with another seam.

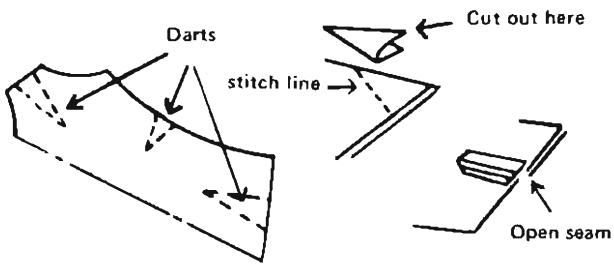


APPLIQUE PATTERN

Cut 2
(For Top)


FRONT

Lengthwise of go

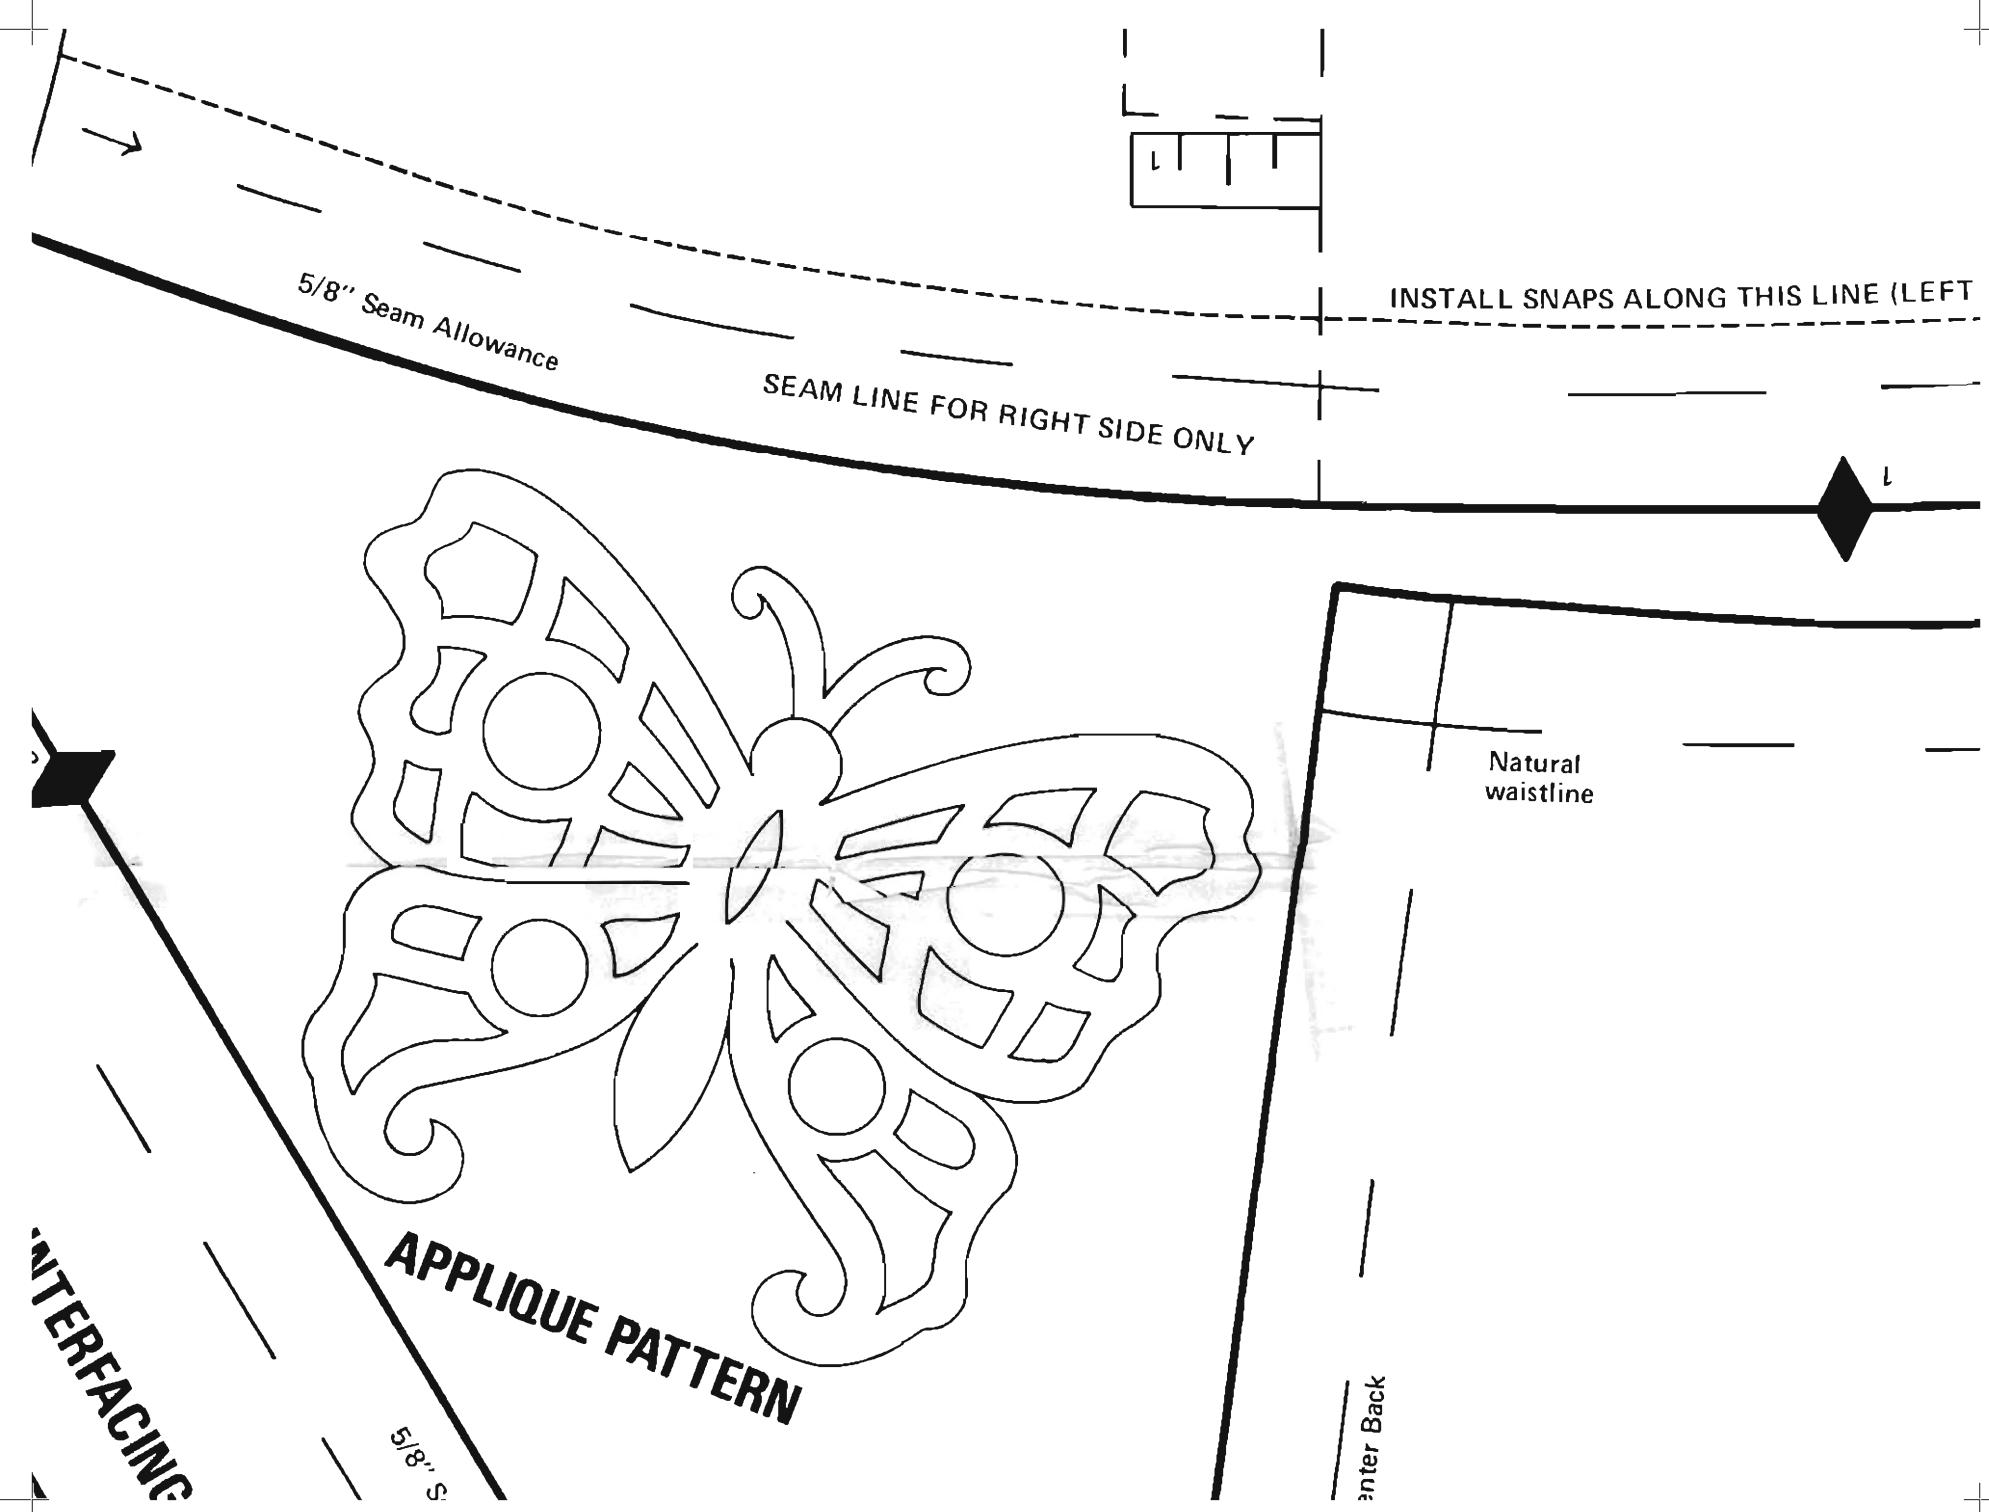


SIDE ONLY)


Seam Line

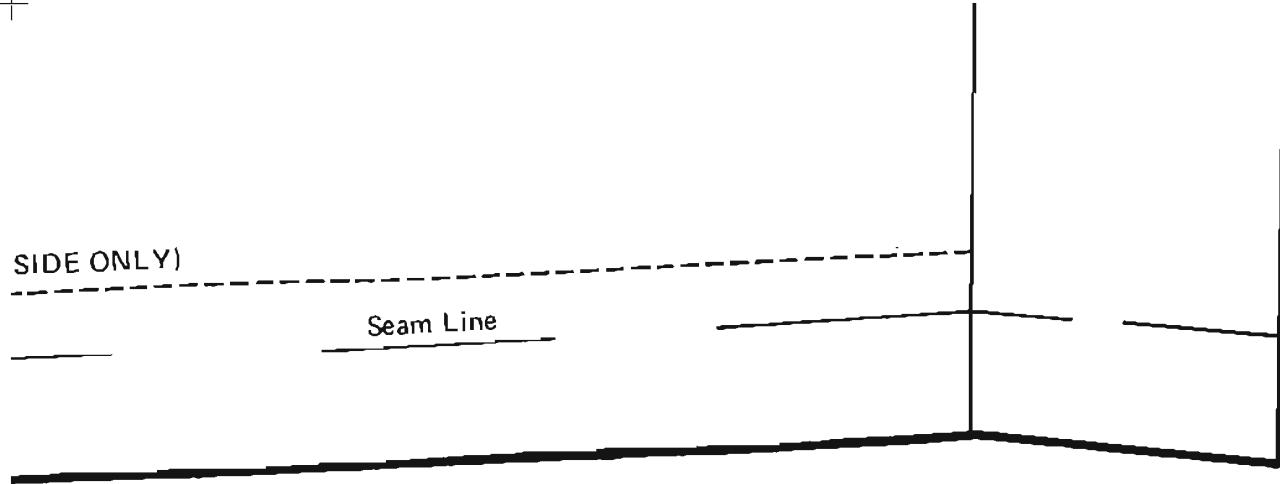

Dart


Ease

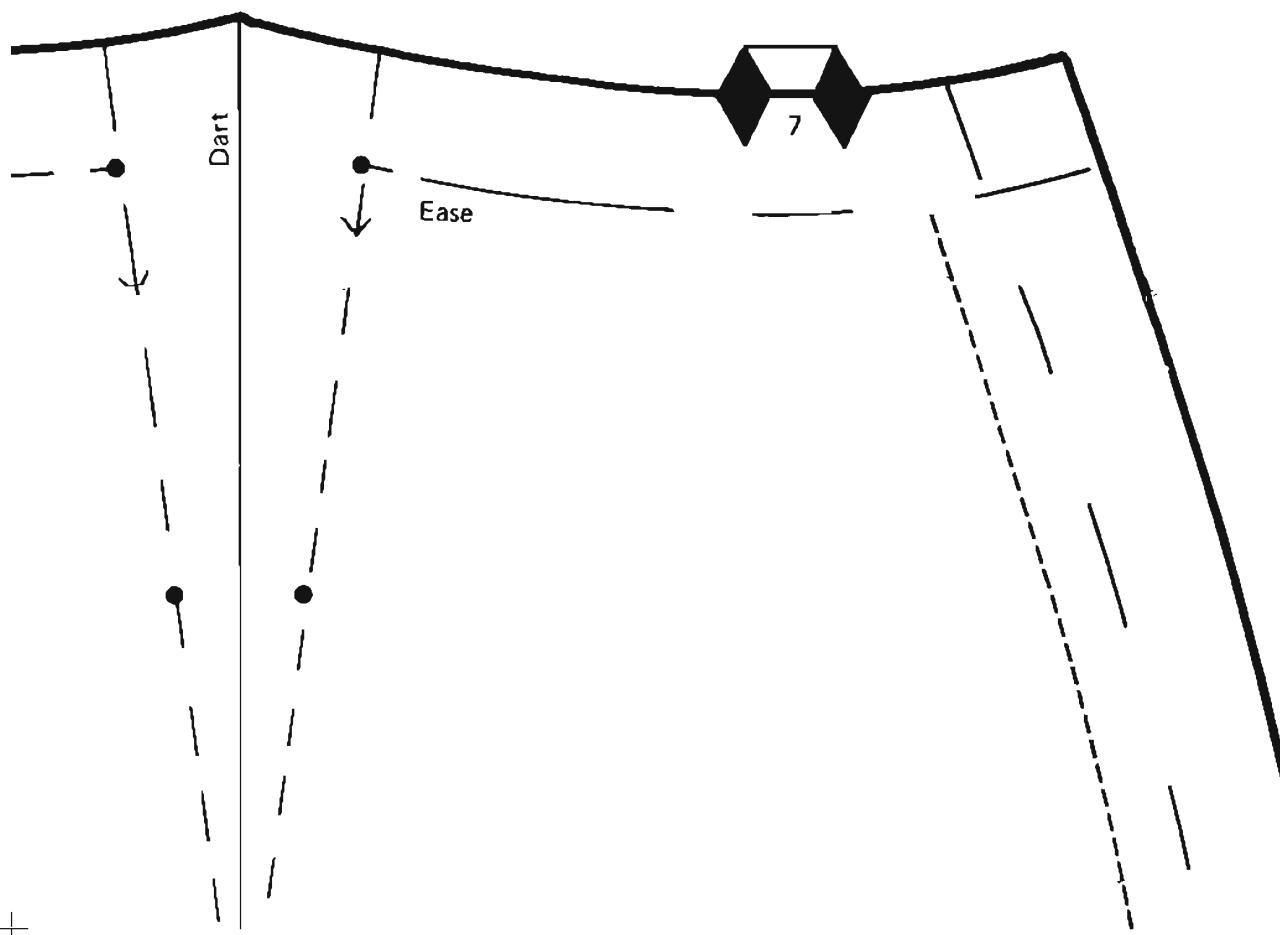

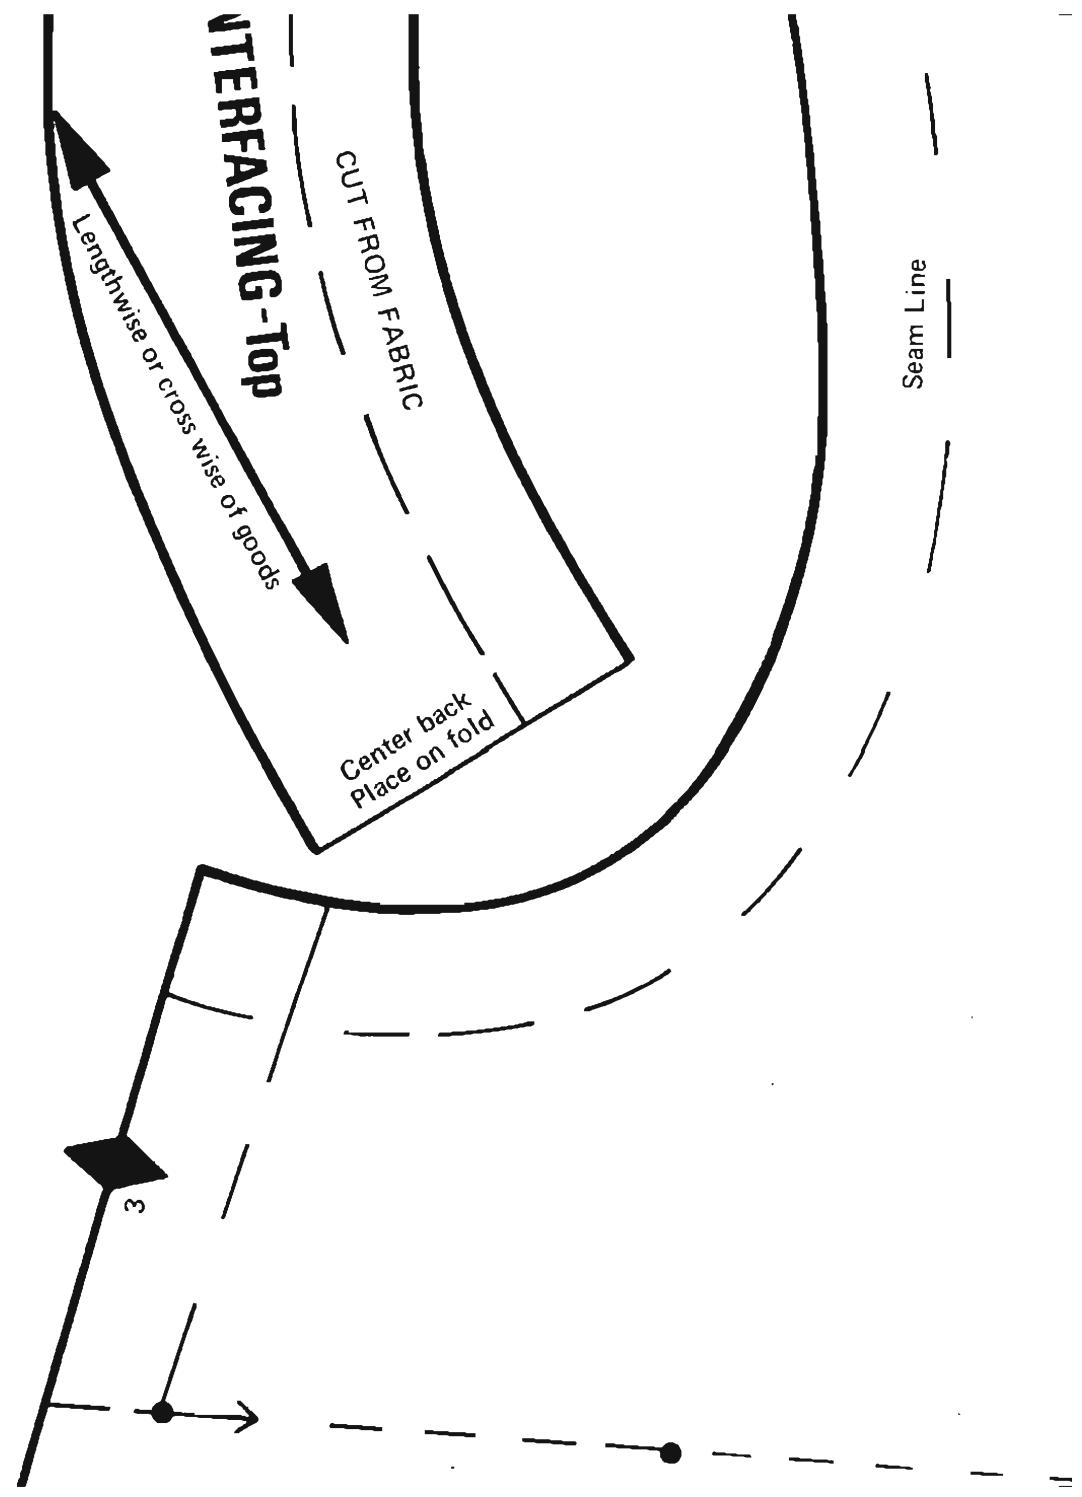

"lower than regular neckline

DO NOT CUT ON THIS LINE - FLOP PATTERN AND CUT OUT LEFT

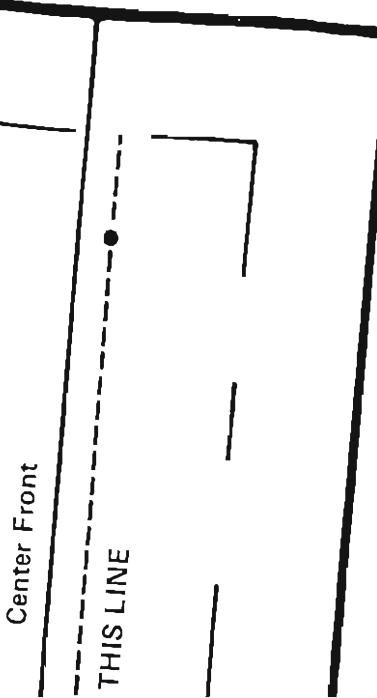

goods

ONTO

CUT OUT LEFT SIDE

(To be lined)


at 2

TOP BACK

(To be lined)




Dart

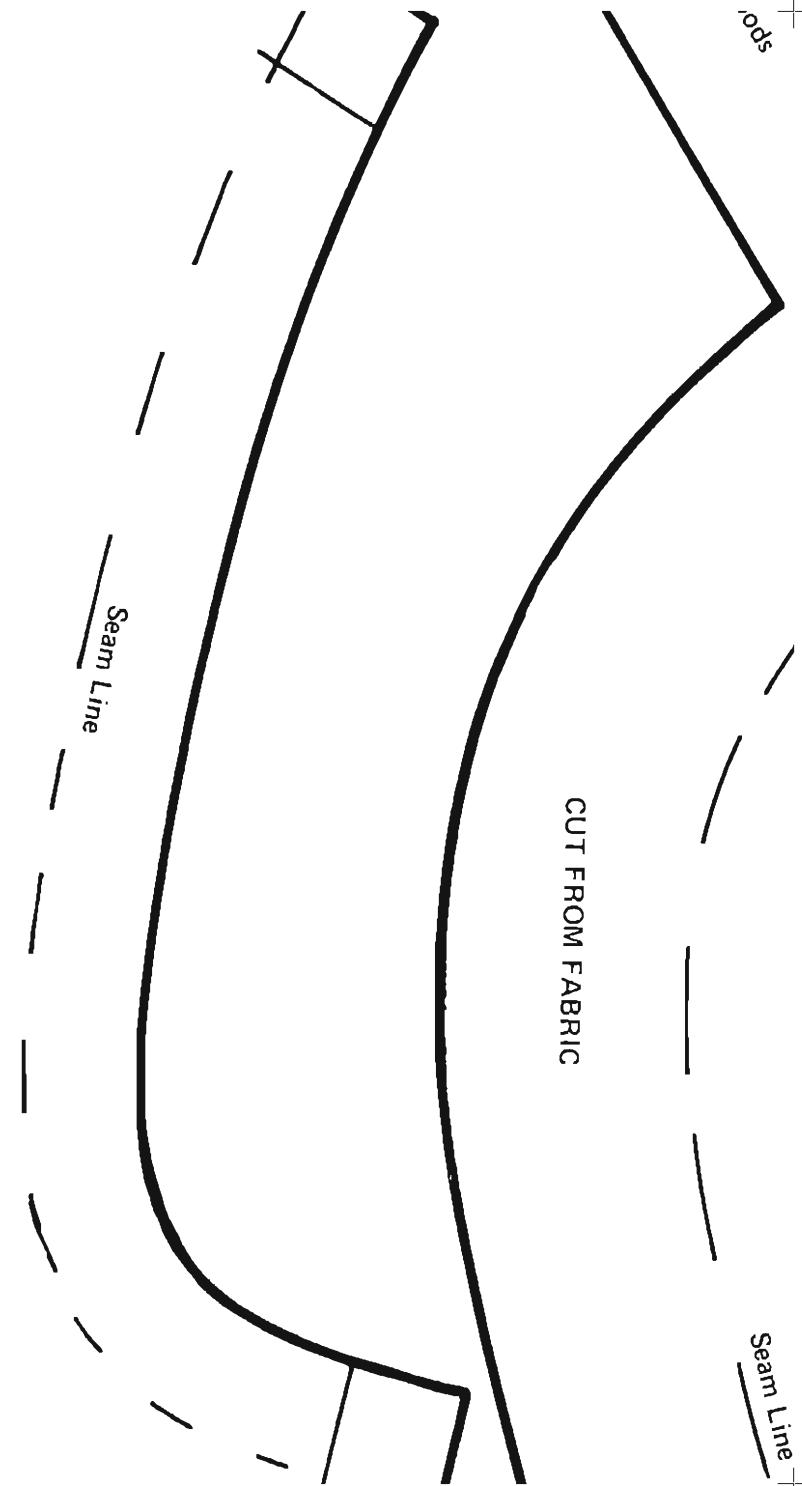


Seam Line

Darts

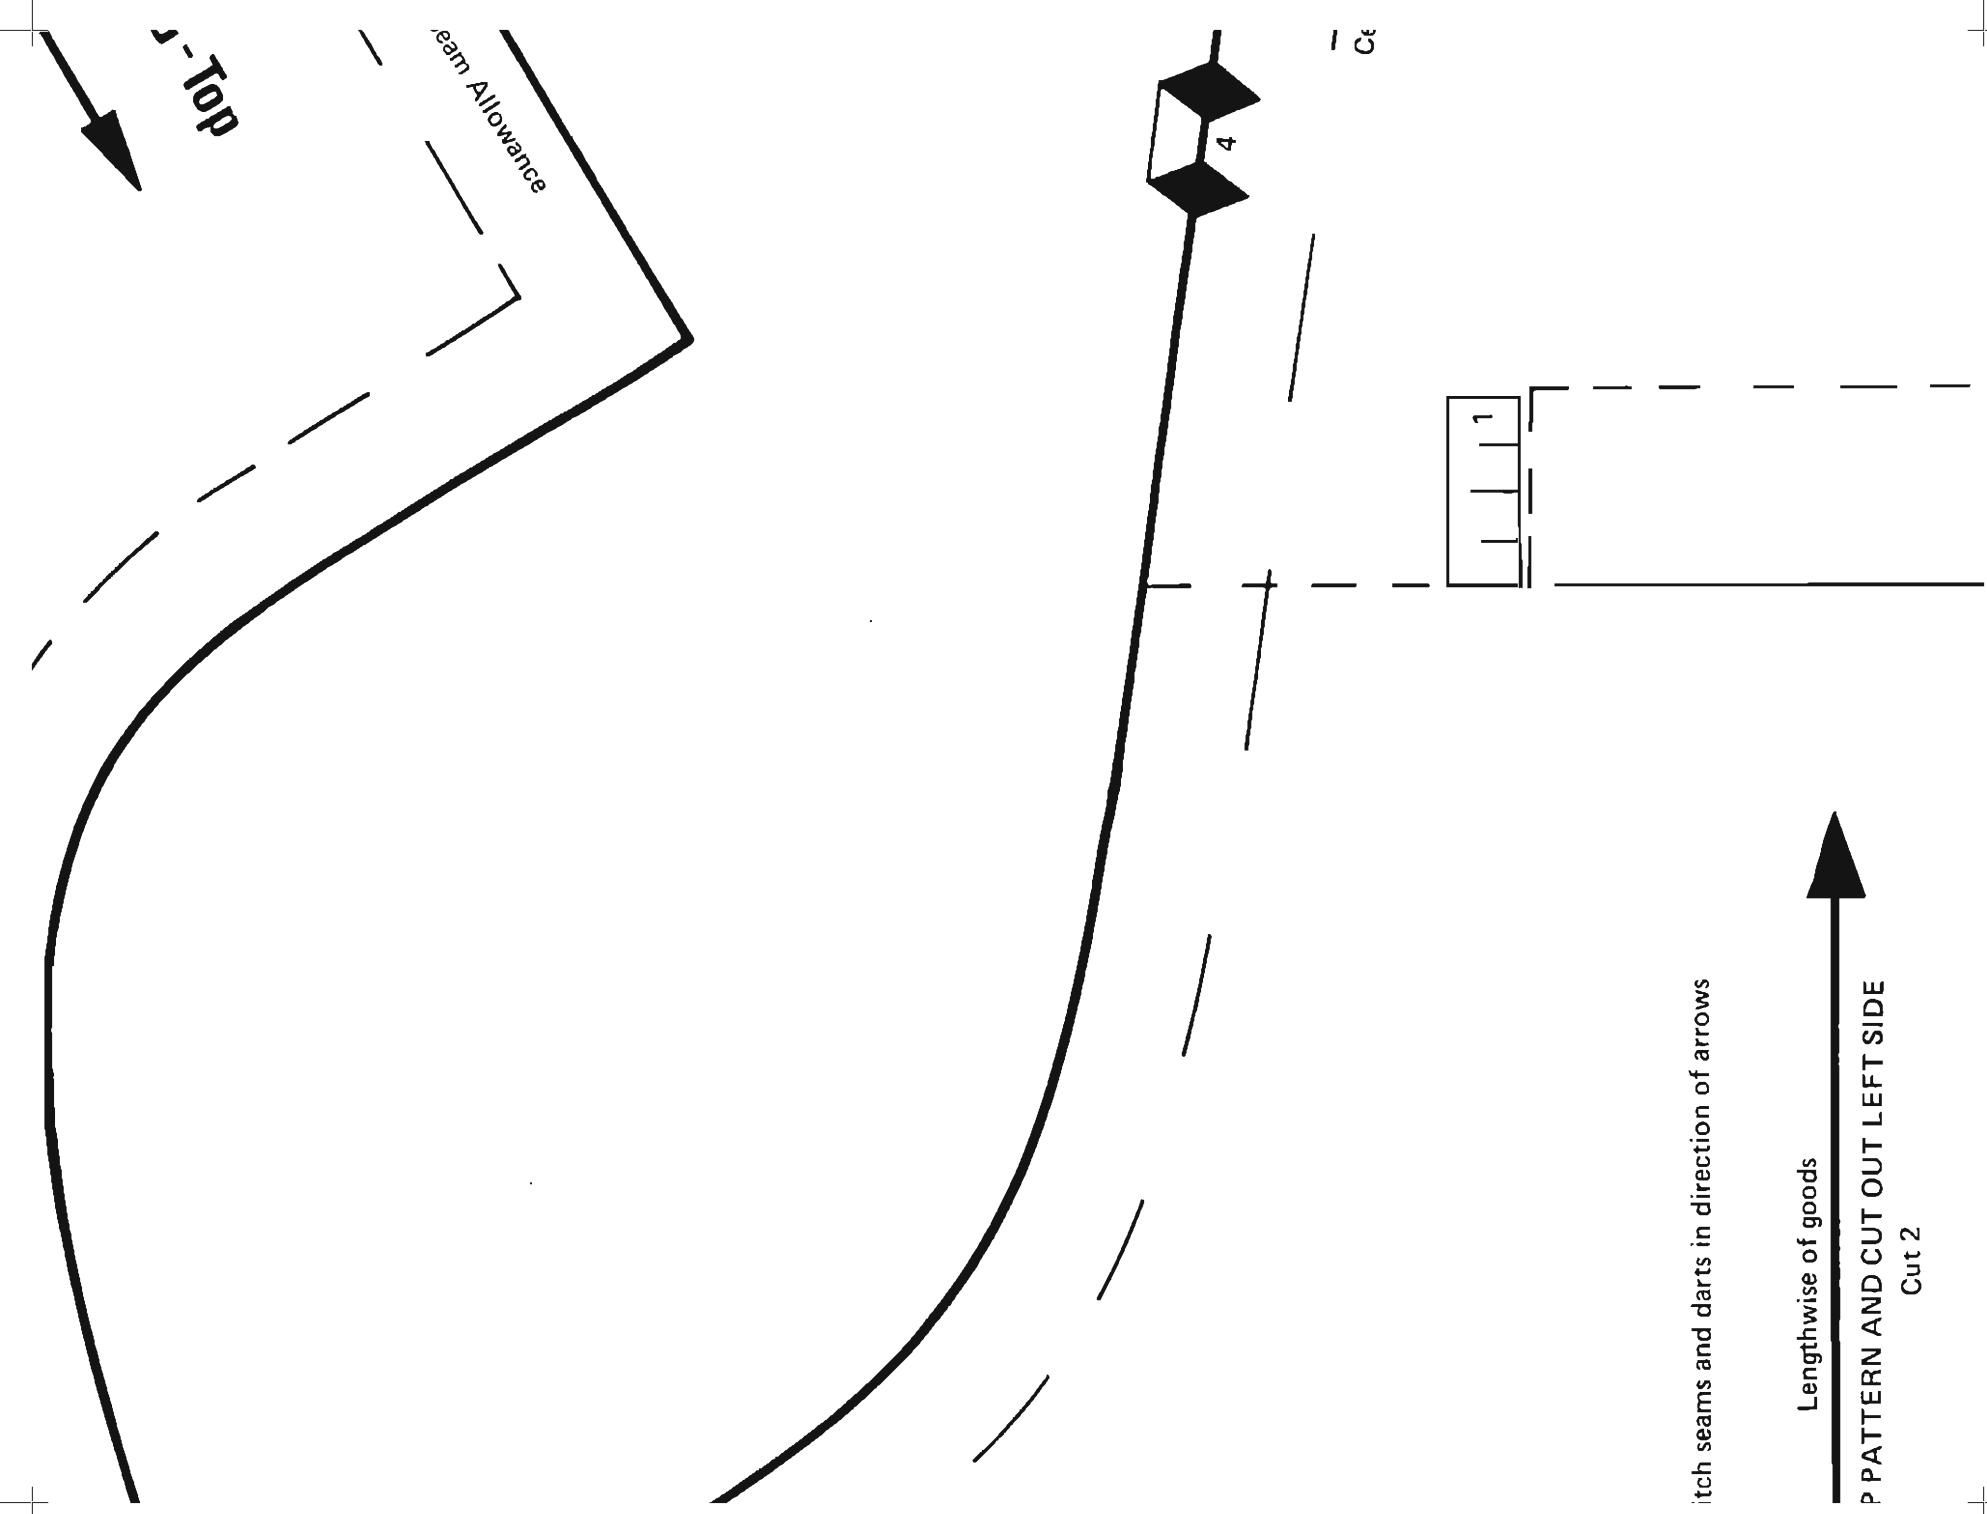

SHORTS BACK

To lengthen, cut along dotted lines

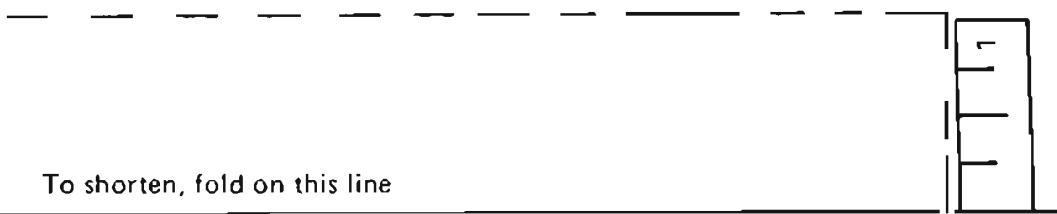


To shorten, fold on this line

INSTALL SNAPS ALONG THIS LINE (LEFT SIDE ONLY)

SEAM LINE FOR RIC

1

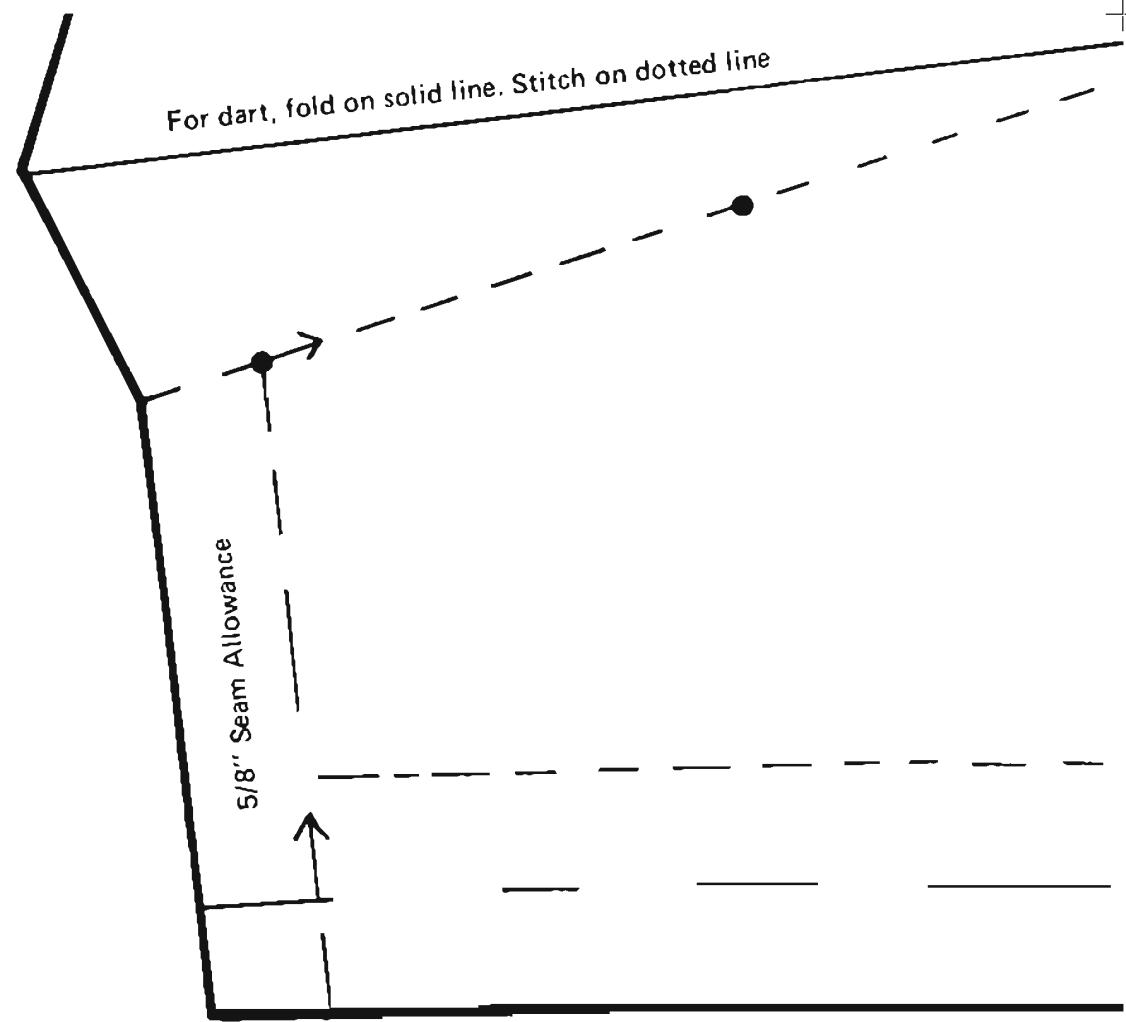

C1
FLOOR PATTERN AND

TOP FRI

Lengthwise of:



For casing, stitch on this line

ATTACH SNAPS ALONG




SIDE

For casing, stitch on this line

5/8" Seam Allowance

3

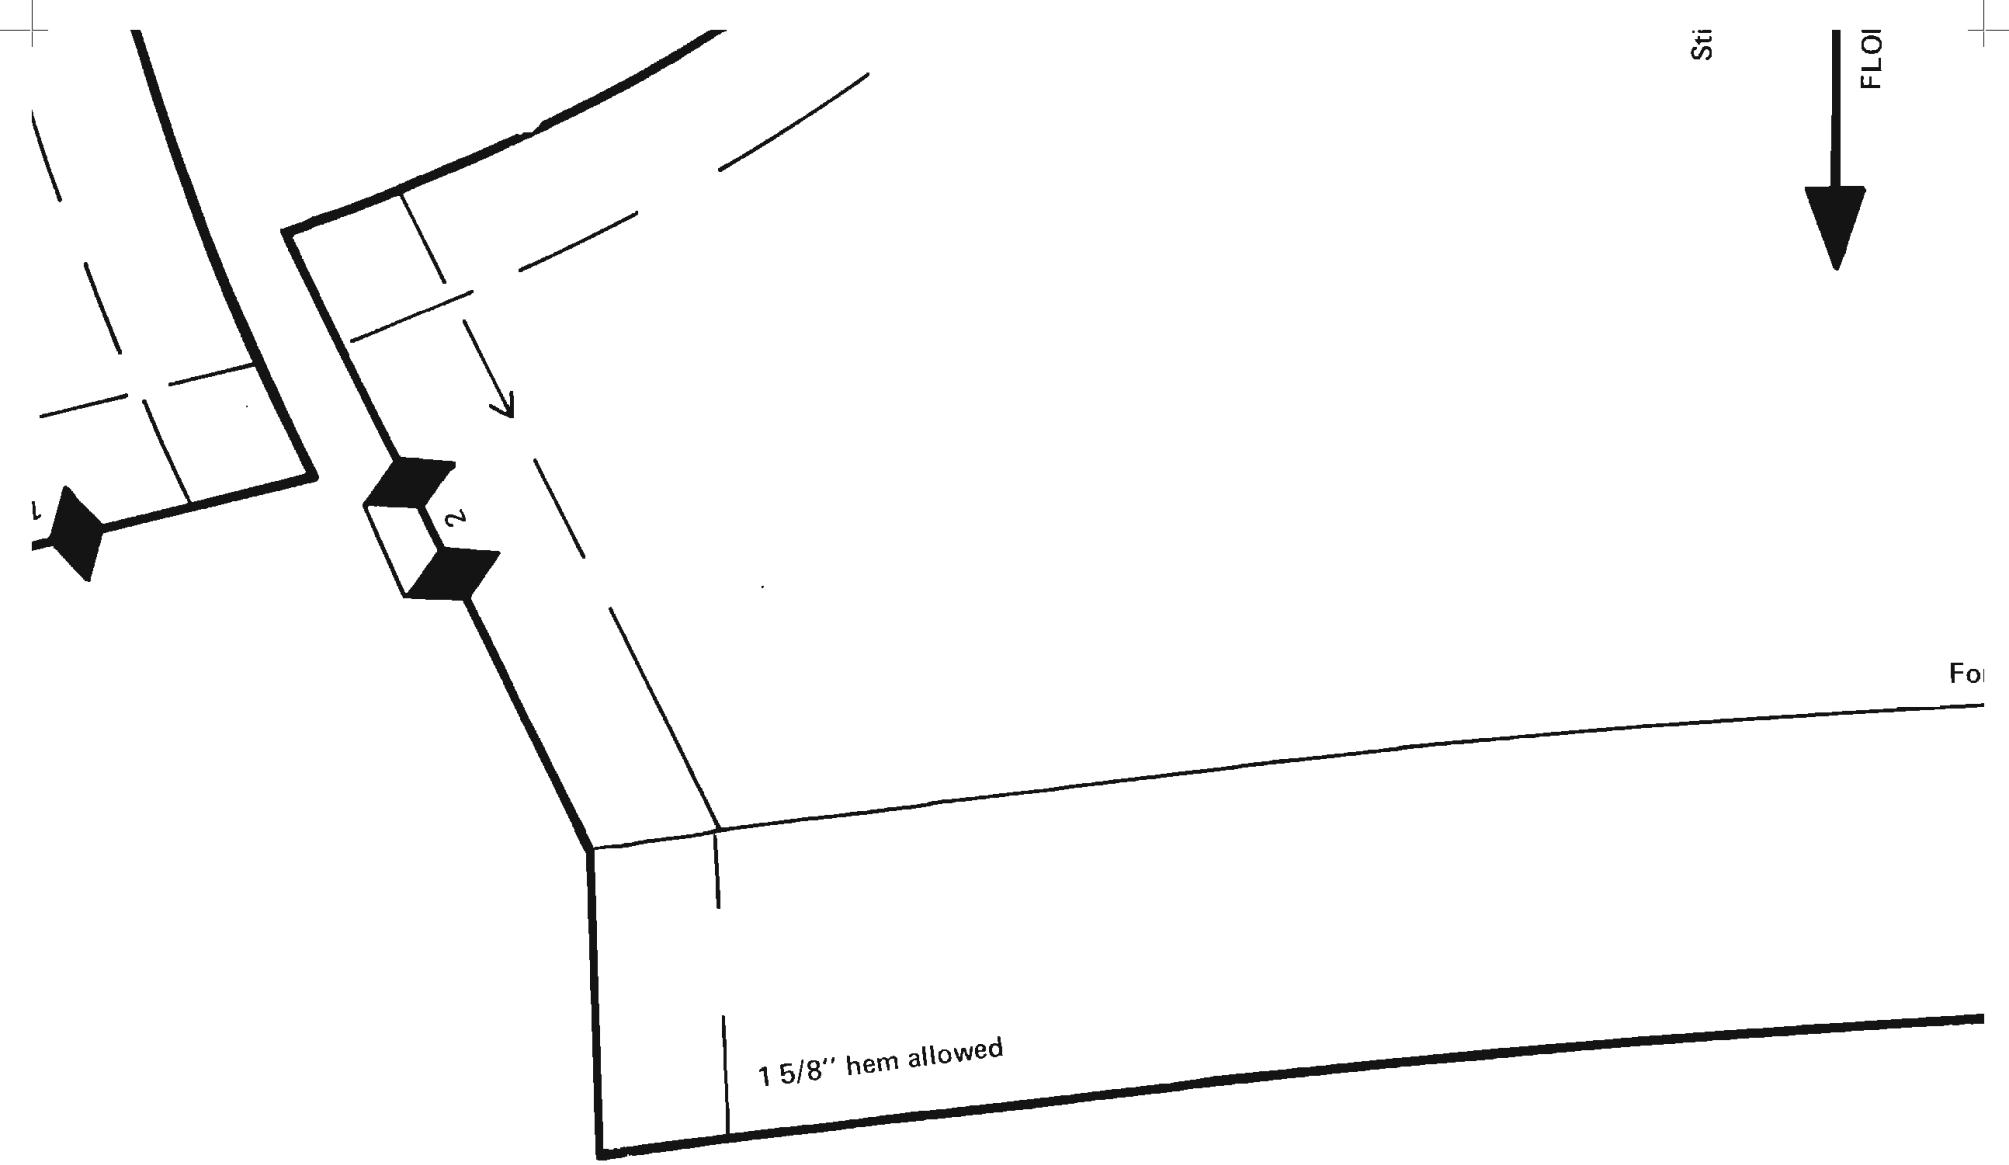

GHT SIDE ONLY

5/8" Seam Allowance

r hem, turn under here