

DISCO BAG

STOCK NO. 2697

PATTERN PAK



DISCO BAGS WERE DESIGNED TO BE STITCHED ON HOME SEWING MACHINE

YOU WILL NEED:

1½ TO 2 OZ. GARMENT LEATHER FOR THESE BAGS.

BAG NO. 1:
3/4" Bead

BAG NO. 2:
2 Small Rapid Rivets
Nos. 1, 2 & 4 Drive Punch


BAG NO. 3
No. 12 Drive Punch

BAG NO. 4
2 Knobby Rivets
9 1/2" Zipper




BAG NO. 1


READ ALL INSTRUCTIONS CAREFULLY BEFORE
BEGINNING PROJECT!

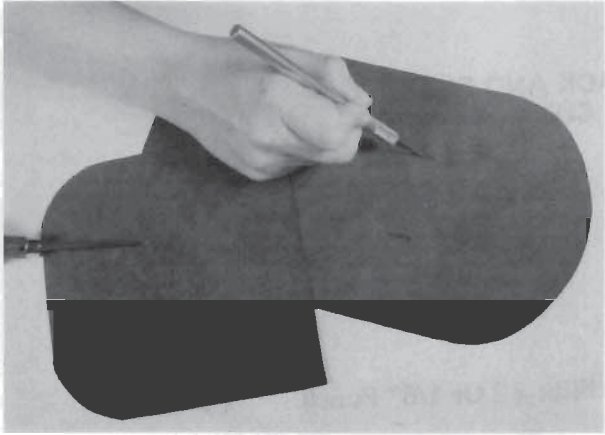


STEP 1. Cut 1 bag back and 1 bag front. Using an awl, punch holes indicated on pattern in bag front and then cut slits in back as indicated on pattern with sharp knife. Mark center of flap where shown on pattern.

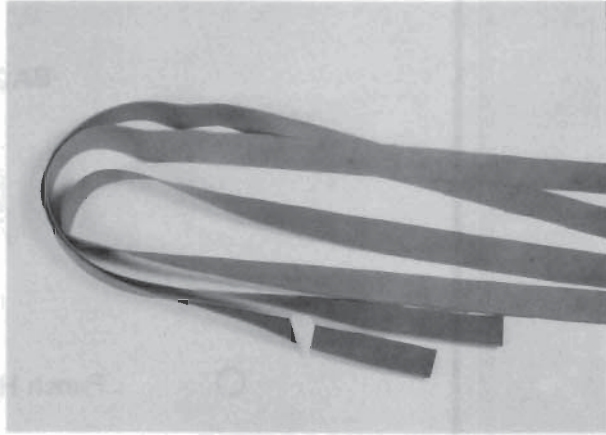


STEP 2. Cut 3 strips, 1" wide and 28" long out of contrasting leather for piping and handles. Cut 1 strip, 1" wide and 4" long for front loop.

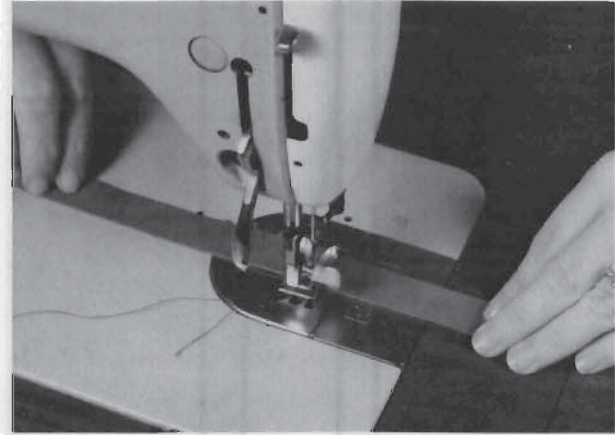


STEP 3. Take two of the strips and put them end to end. Overlap ends 1/4", flesh sides up, and stitch across them making 1 long strip.

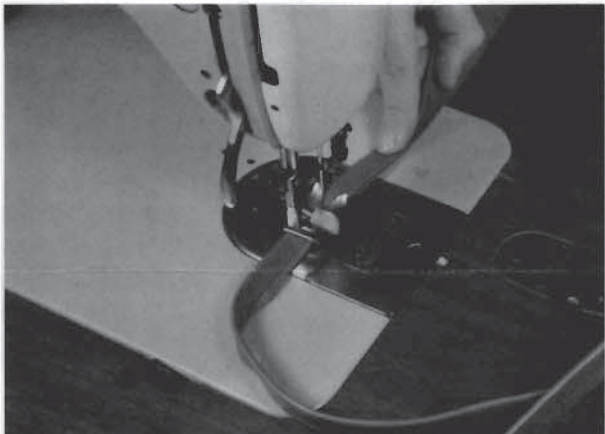


STEP 4. Fold this strip over lengthwise, flesh sides together, and stitch along raw edges.

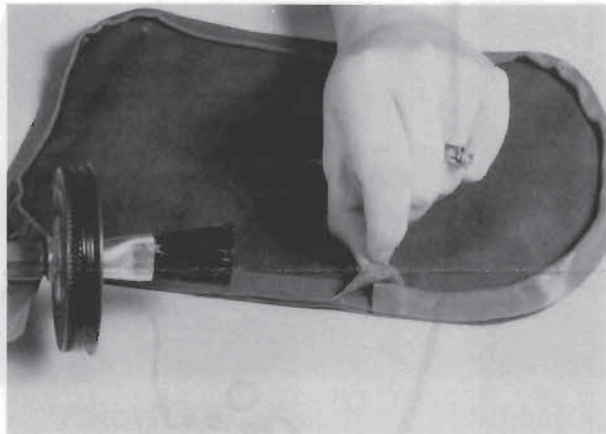


STEP 5. Take third strip and measure enough to go completely around back and flap of bag. Fold piping down lengthwise and align raw edges around edges of back and flap on grain side. Cement in place.

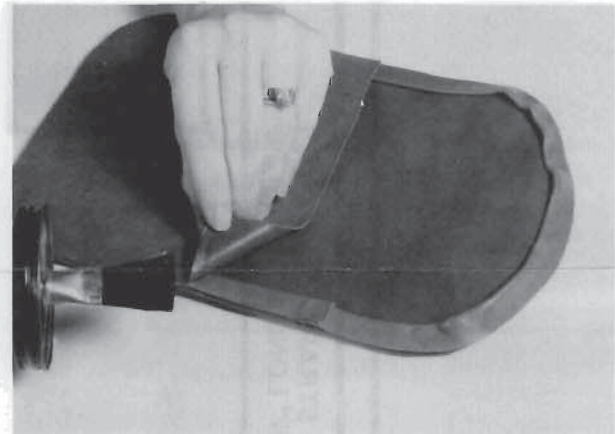


STEP 6. Now align bag front over piping, flesh side up and cement in place.

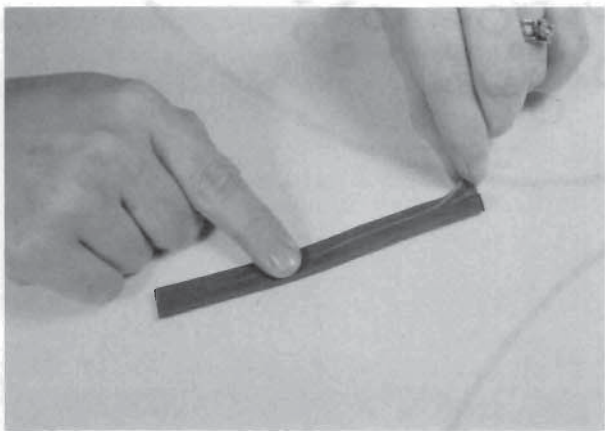


STEP 7. Take 4" strip and fold both edges over so that the raw edges are on the back side of the strip with the grain side out.

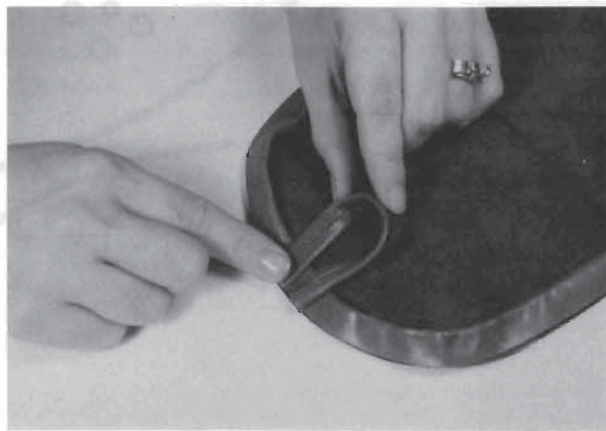

STEP 8. Locate center mark on bag flap. Position one end of loop on mark with end on edge of piping. Turn other end of loop so that it is next to other end and cement ends in place.

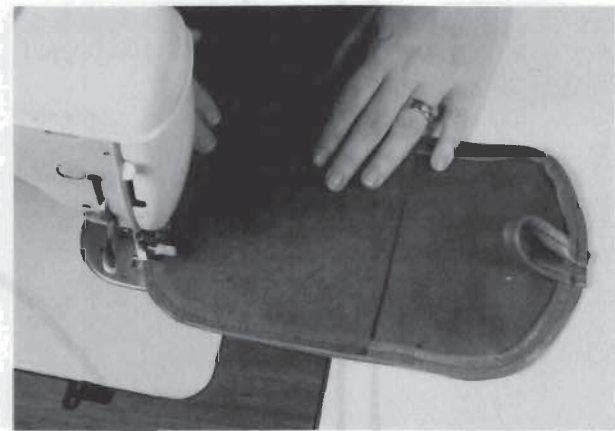

STEP 9. Stitch all around edges being sure to catch ends of loop in stitches.

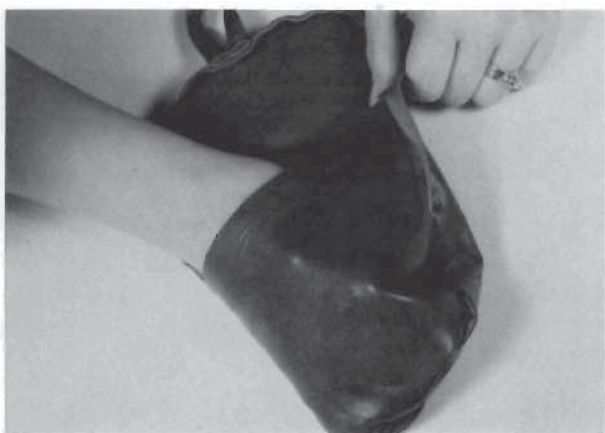


STEP 10. Turn bag right side out and fold edges of flap down and cement.



STEP 11. Using approximately 3" of lacing, thread a 3/4" wooden bead on lace and then thread each end of the lace through the two holes on bag front to inside of bag. Tie ends together with knot on inside of bag.




STEP 12. Take the stitched handle from Steps 3 and 4 and thread it through the slits on the bag flap. Tie ends together with overhand knot to length desired.

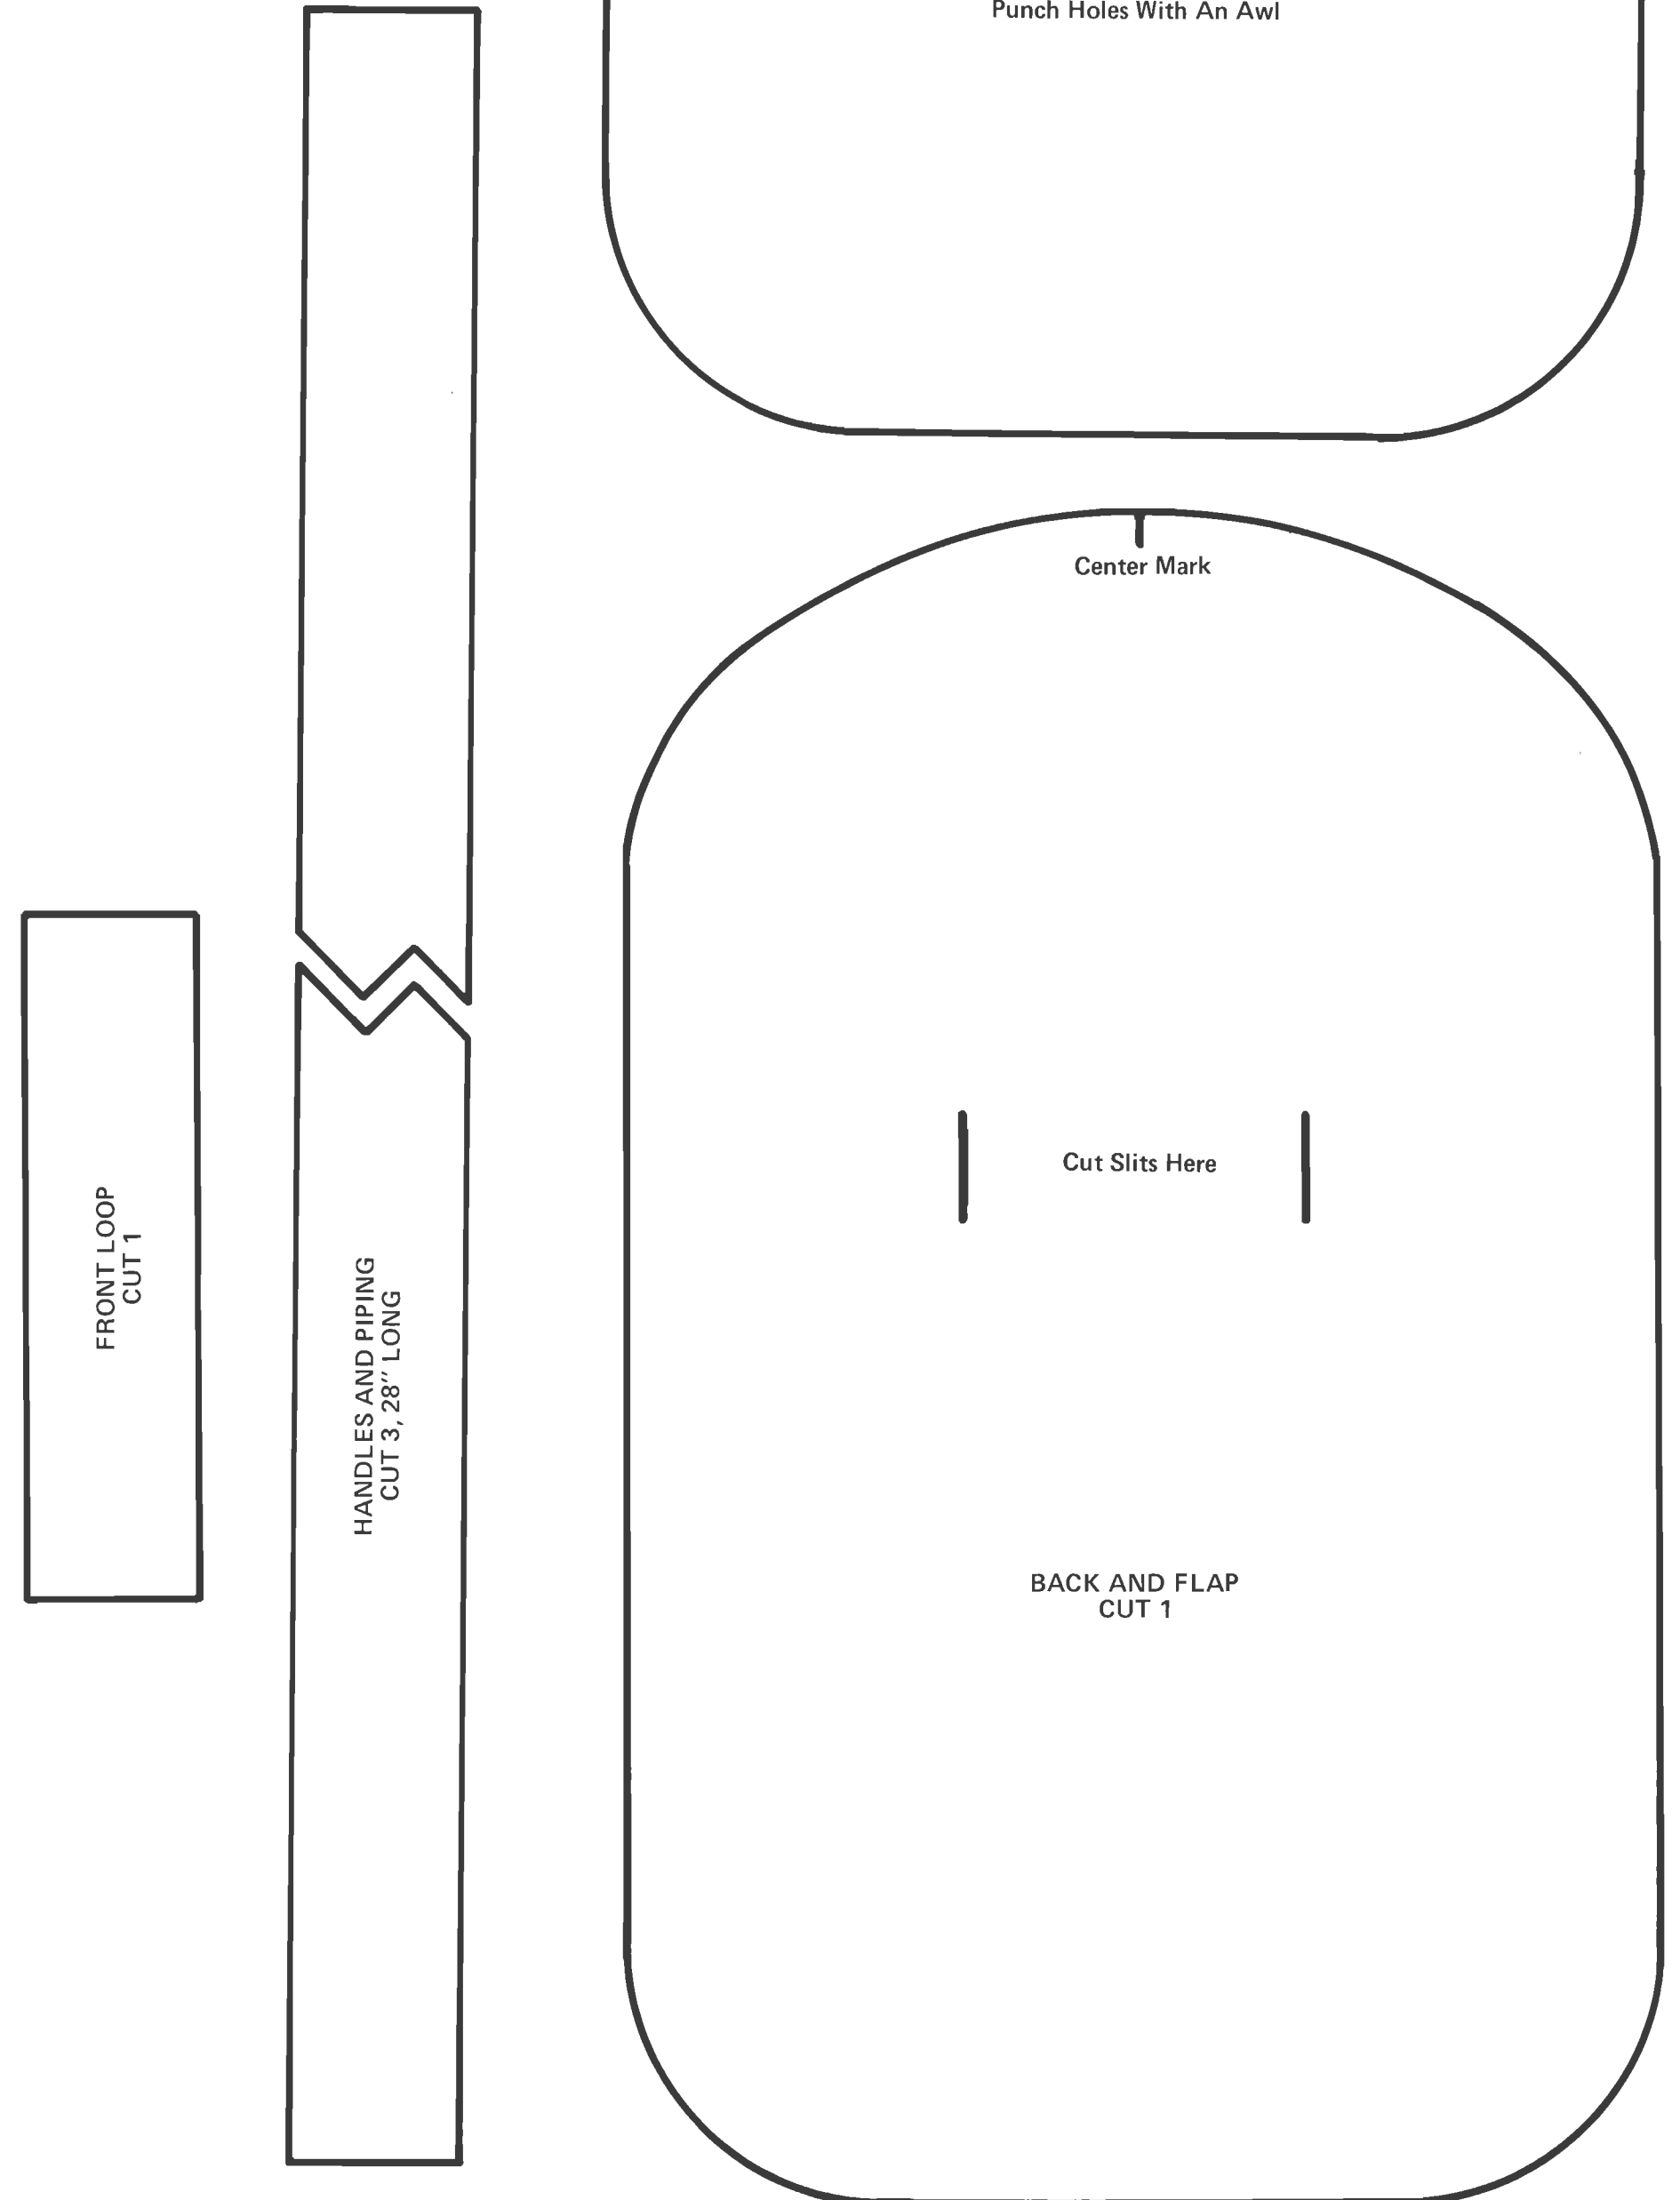




BAG

READ ALL INSTRUCTIONS CAREFULLY BEFORE BEGINNING PROJECT!

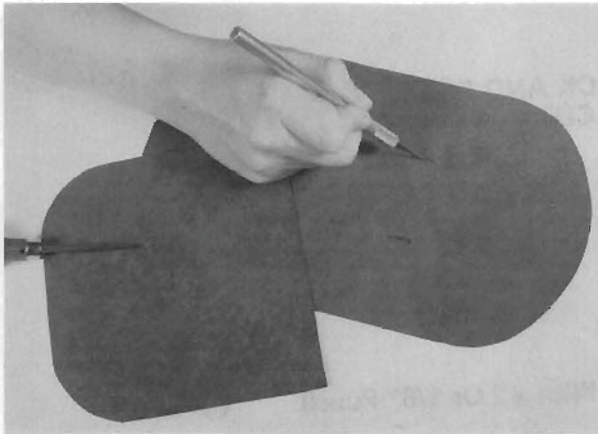

STEP 1. Cut 1 bag back and 1 bag front. Using an awl, punch holes indicated on pattern in bag front and then cut slits in back as indicated on pattern with sharp knife. Mark center of flap where shown on pattern.

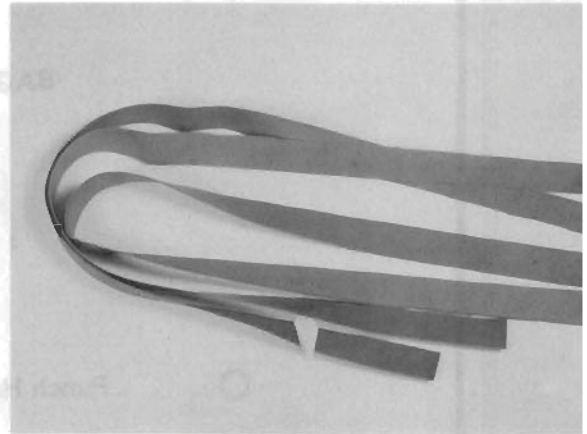


STEP 2. Cut 3 strips, 1" wide and 28" long out of contrasting leather for piping and handles. Cut 1 strip, wide and 4" long for front loop.






NO. 1

FORE

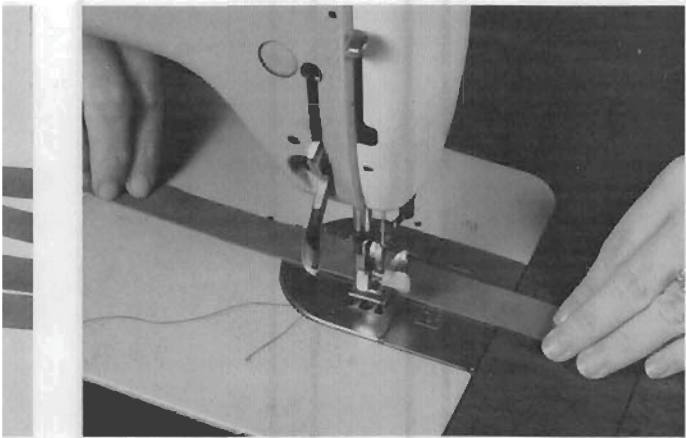

on-
1" STEP 3. Take two of the strips and put them end to end. Overlap ends 1/4", flesh sides up, and stitch across them making 1 long strip.

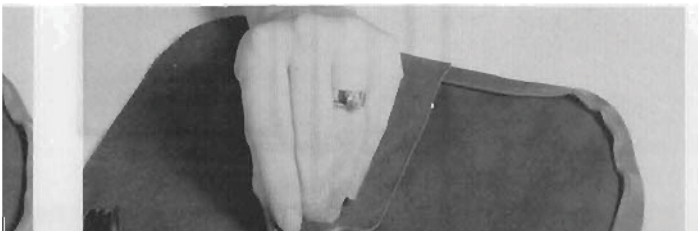


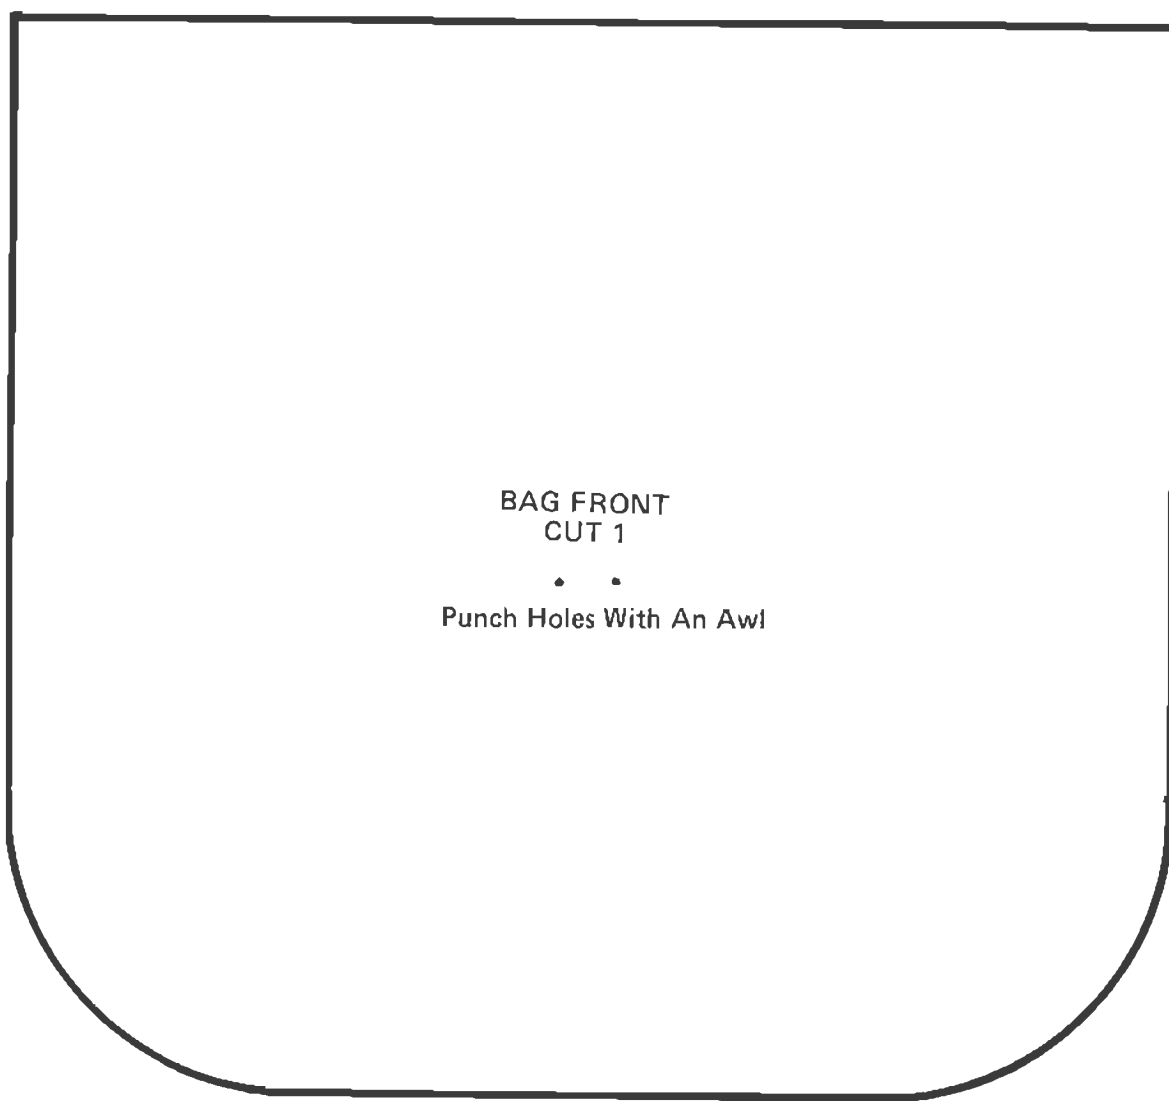


BAG FRONT
CUT 1



Punch Holes With An Awl

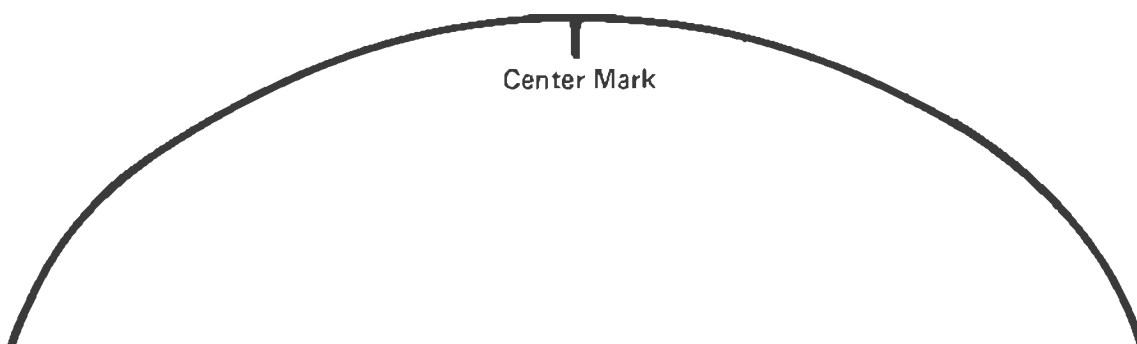


Center Mark

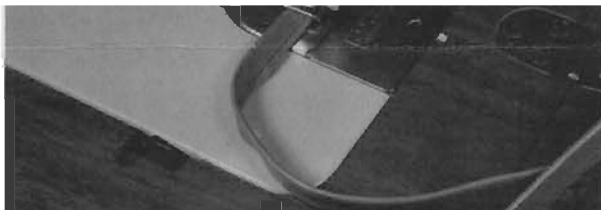

STEP 4. Fold this strip over lengthwise, flesh sides together, and stitch along raw edges.



STEP 5. Take third strip and measure enough to completely around back and flap of bag. Fold pip down lengthwise and align raw edges around edges back and flap on grain side. Cement in place.

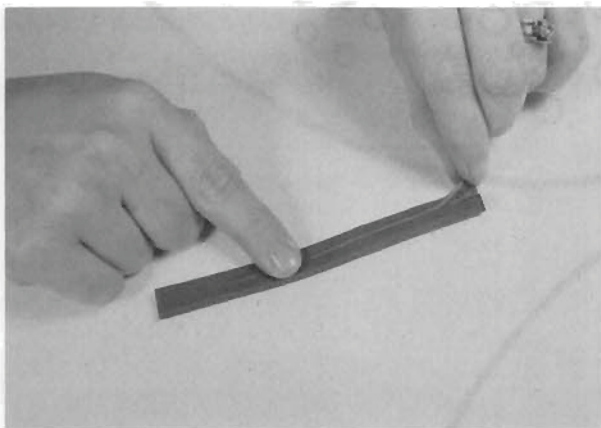


STEP 7. Take 4" strip and fold both edges over so that the raw edges are on the back side of the strip with the grain side out.



STEP 8. Locate center mark on bag flap. Position end of loop on mark with end on edge of piping. T other end of loop so that it is next to other end cement ends in place.



STEP 10. Turn bag right side out and fold edges of flap down and cement.

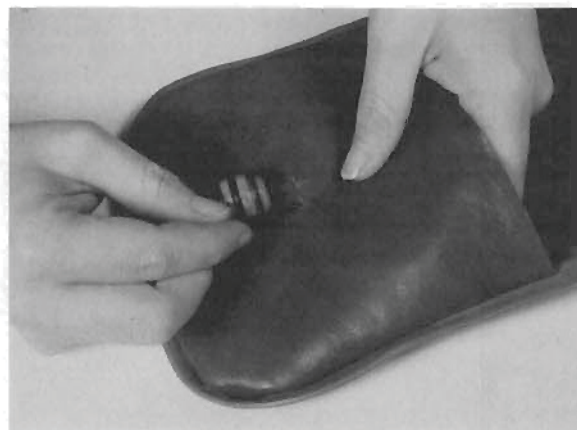


STEP 11. Using approximately 3" of lacing, thread 3/4" wooden bead on lace and then thread each end the lace through the two holes on bag front to inside bag. Tie ends together with knot on inside of bag.



go
ing
of

STEP 6. Now align bag front over piping, flesh side up and cement in place.

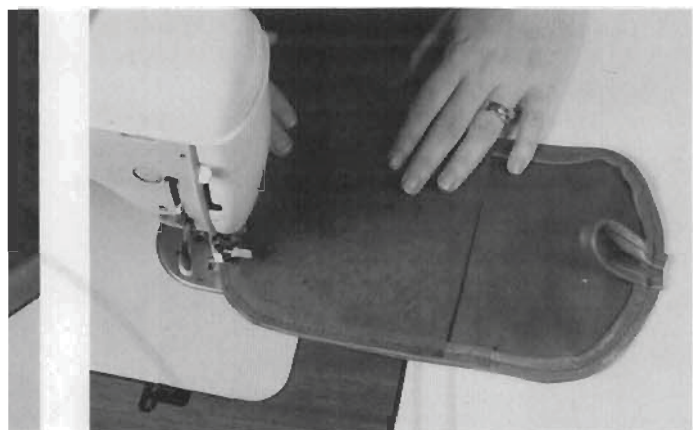

one
turn
and

STEP 9. Stitch all around edges being sure to catch ends of loop in stitches.



d a
l of
: of

STEP 12. Take the stitched handle from Steps 3 and 4 and thread it through the slits on the bag flap. Tie ends together with overhand knot to length desired.

FRONT LOOP
CUT 1

HANDLES AND PIPING
CUT 3, 28" LONG




Cut Slits Here

BACK AND FLAP
CUT 1



BAG NO. 2


READ ALL INSTRUCTIONS CAREFULLY
BEFORE BEGINNING PROJECT!

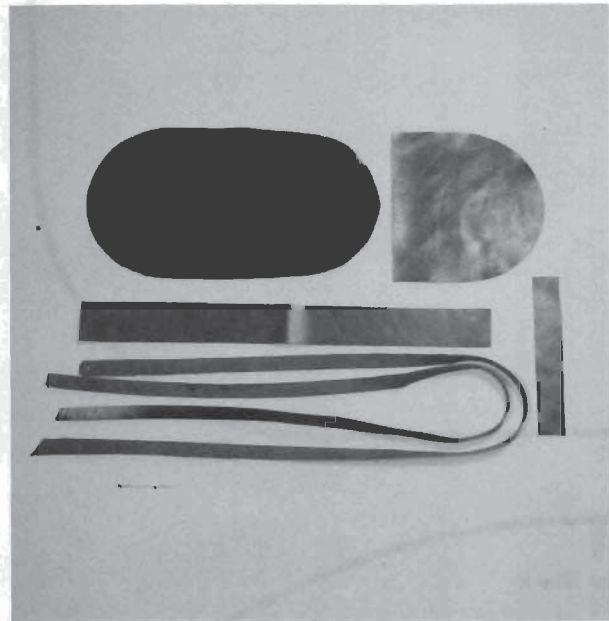

STEP 1. Cut 1 bag front, 1 bag back and flap, 1 gusset and 1 front strap, 1" wide and 6 1/4" long. Cut 2 handle straps, 1/2" wide and 36" long (or any desired length). Punch holes in bag back and in straps as indicated on pattern sheet, using #2 or 1/8" punch.



STEP 2. Mark and punch holes in bag flap for design using punches indicated on pattern.

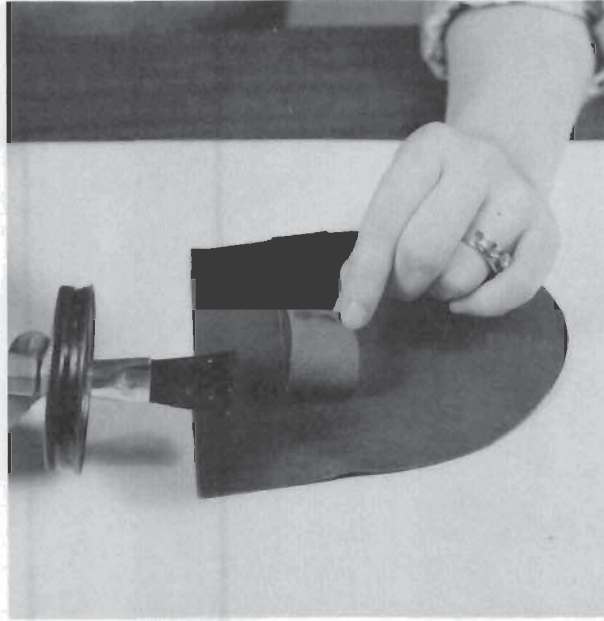


STEP 3. Measure 1 1/2" down from top of bag front on each side. Align top edge of front strap on these marks. Cement ends of strap to edges of bag front, grain sides up.



STEP 4. Align one edge of gusset with edge of bag front, grain sides together, and stitch gusset in place, being sure to catch ends of front strap in seam.




STEP 5. Align other edge of gusset with edges of bag back, grain sides together, and stitch gusset in place.

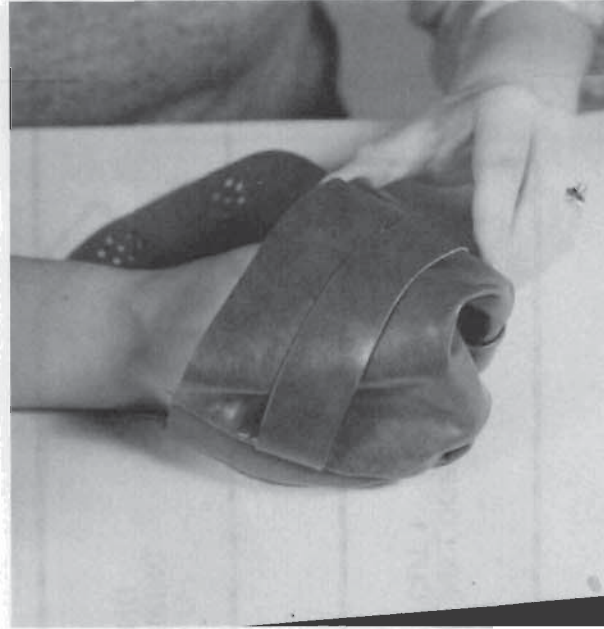


STEP 6. Turn bag right side out.



STEP 7. Take rivet stud and push it through one hole in bag back from inside bag. Now push hole in one strap over rivet stud on outside of bag back. Place cap of rivet over stud. Put the whole assembly on a solid surface. Place rivet setter on rivet cap and set rivet by striking setter sharply with a mallet. Repeat with other strap on other side of bag back.

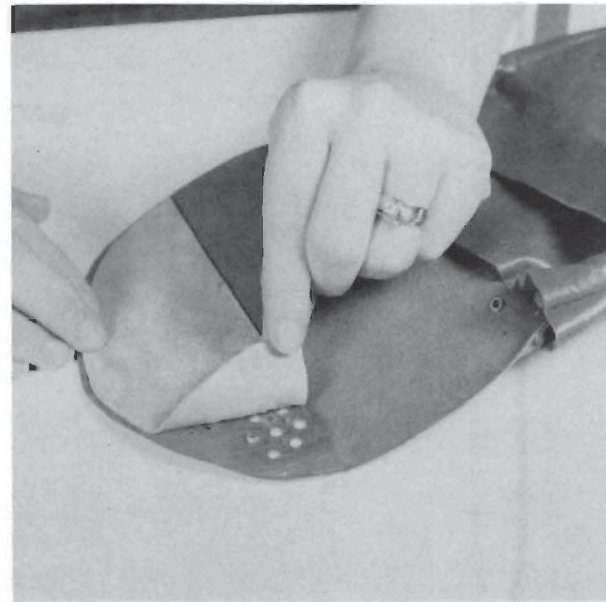


STEP 8. Tie ends of straps together with overhand knot to desired length. If you wish you may cement a small piece of contrasting leather under the holes on the front flap. Be careful not to get cement where it will show through the holes.

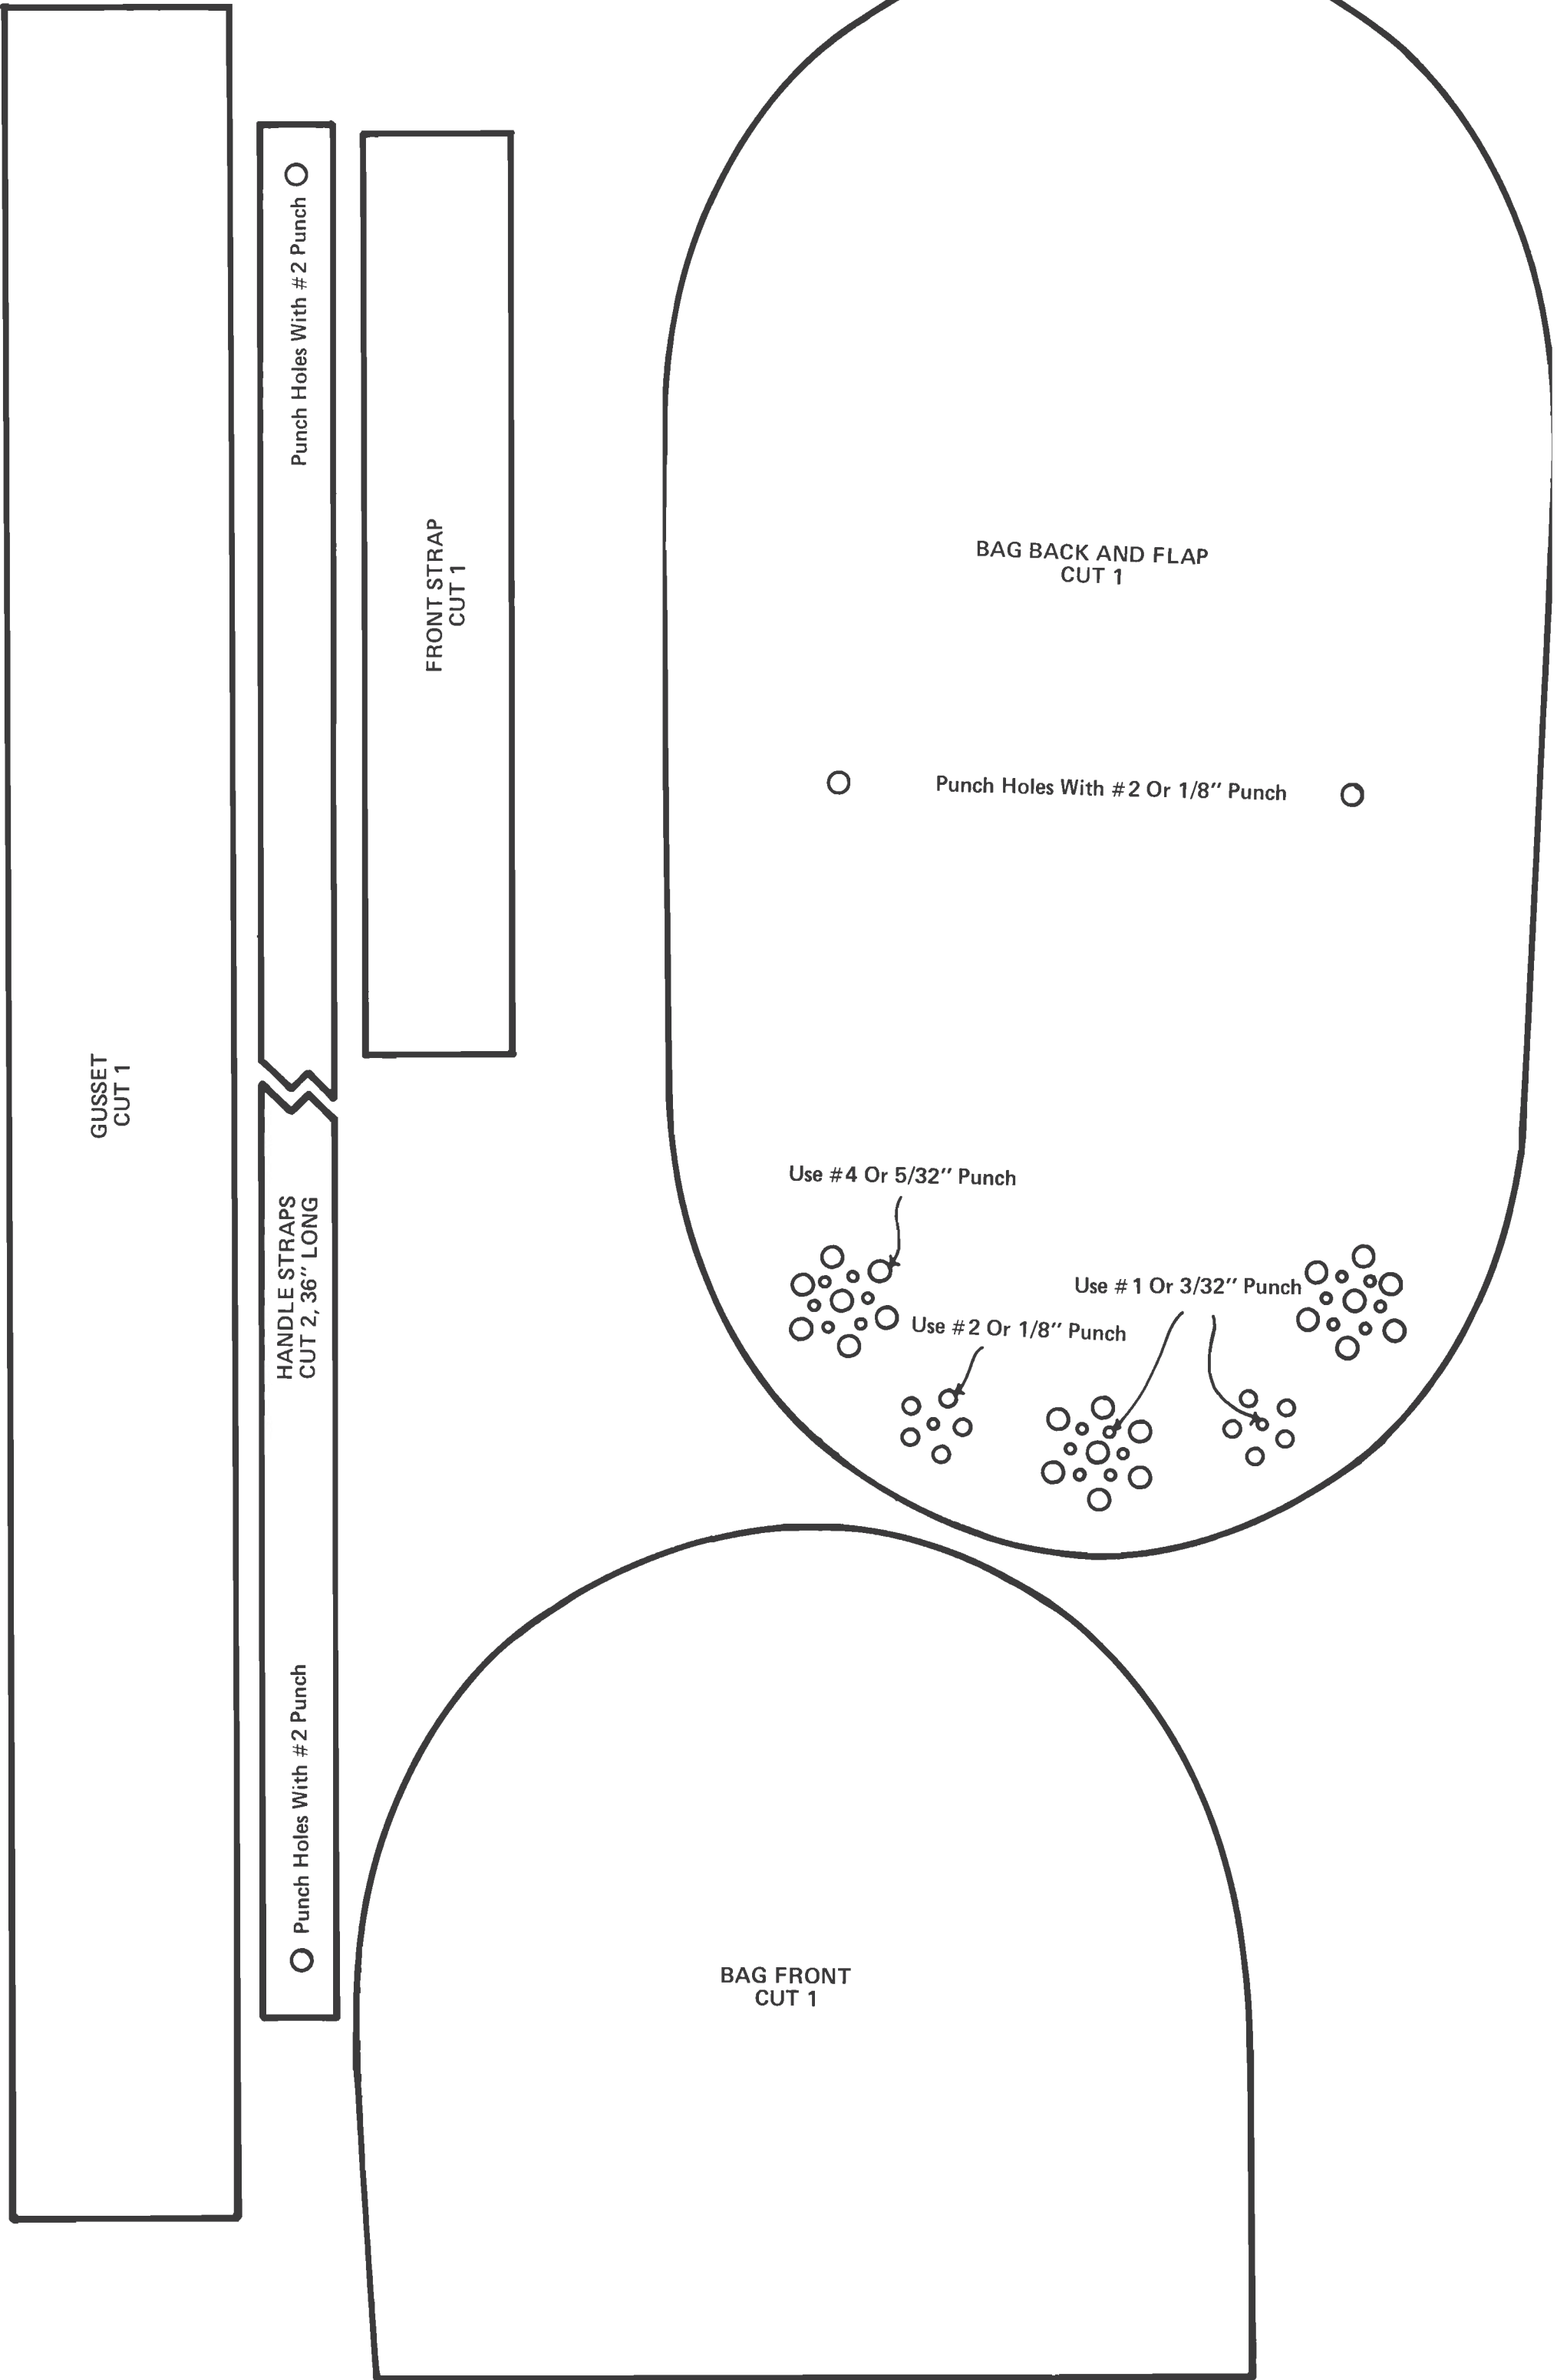




BAG

**READ ALL INSTRUCTIONS CAREFULLY
BEFORE BEGINNING PROJECT!**

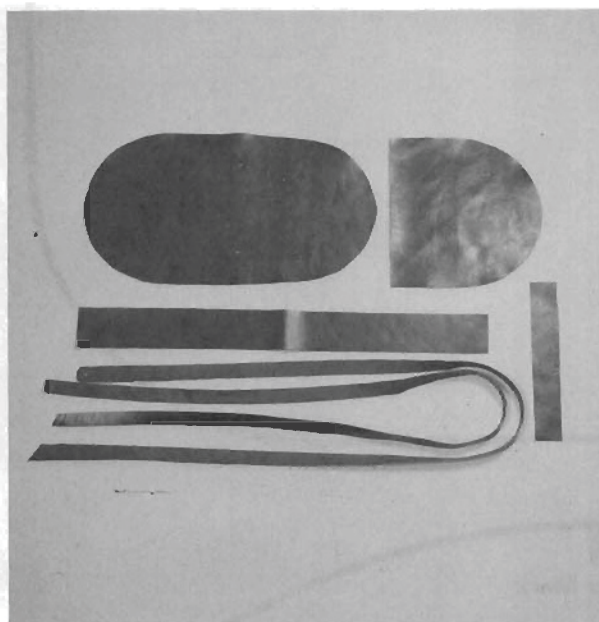


STEP 1. Cut 1 bag front, 1 bag back and flap, 1 gusset and 1 front strap, 1" wide and 6 1/4" long. Cut 2 handle straps, 1/2" wide and 36" long (or any desired length). Punch holes in bag back and in straps as indicated on pattern sheet, using #2 or 1/8" punch.

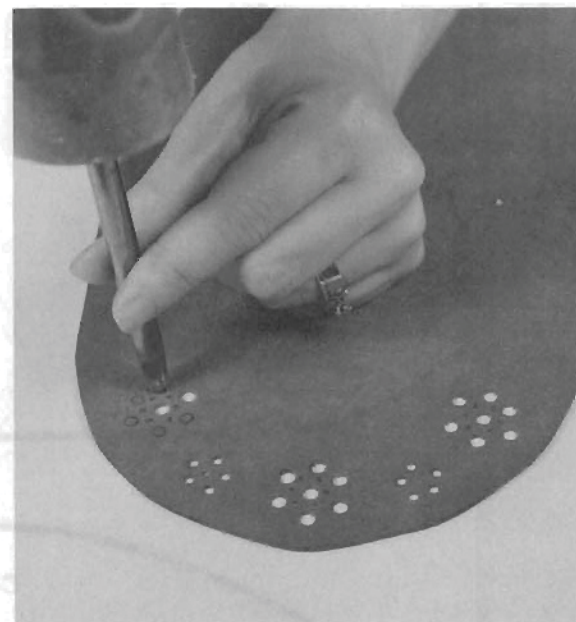



STEP 2. Mark and punch holes in bag flap for de using punches indicated on pattern.

NO. 2

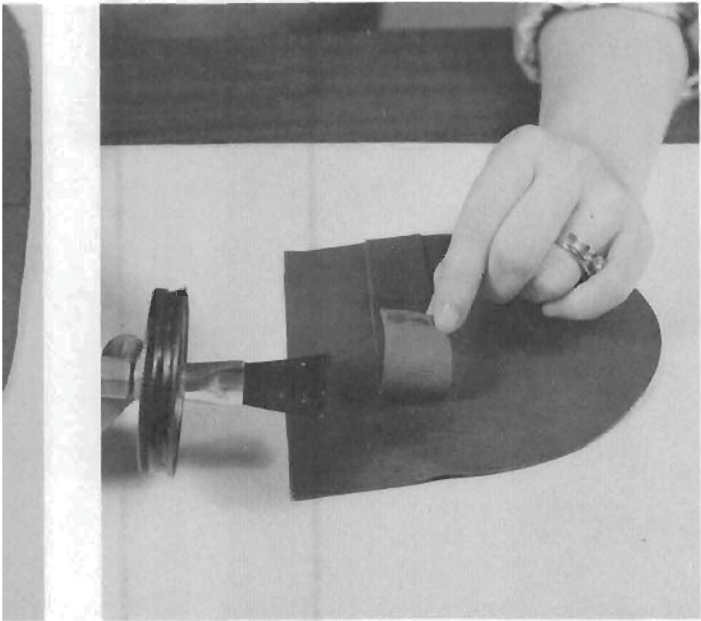

sign STEP 3. Measure 1 1/2" down from top of bag front on each side. Align top edge of front strap on these marks. Cement ends of strap to edges of bag front, grain sides up.

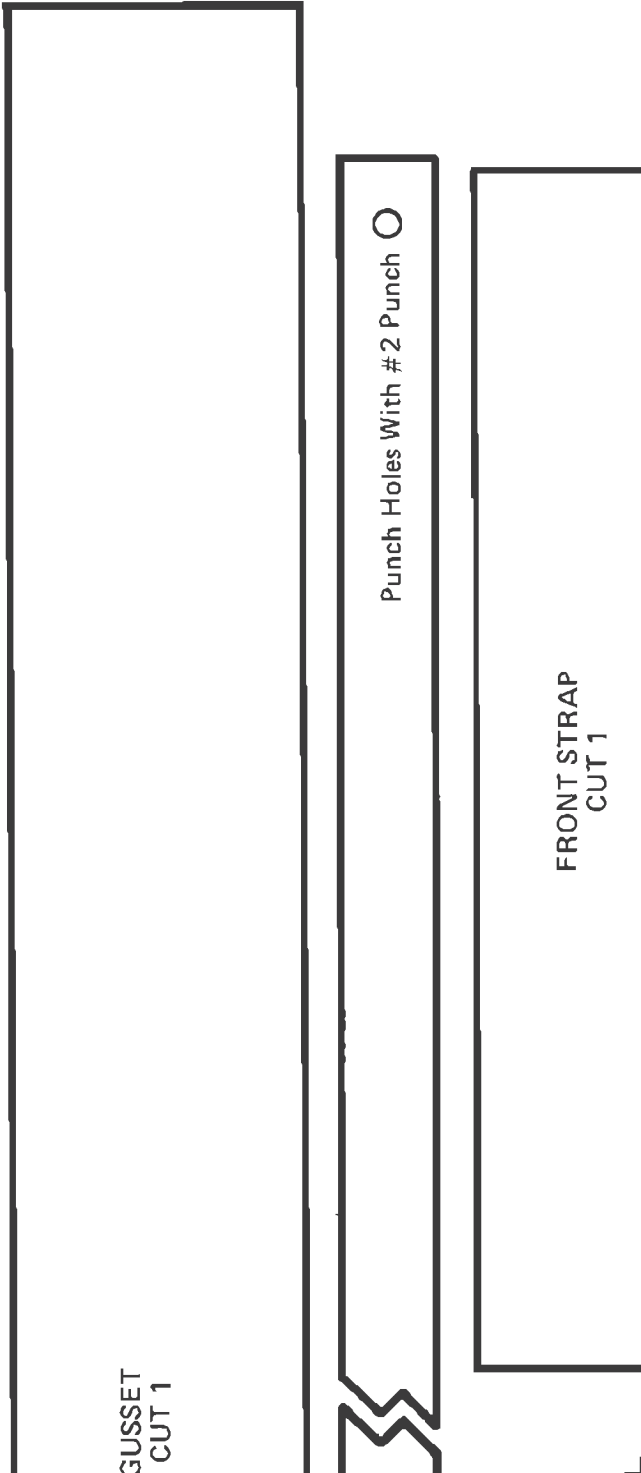

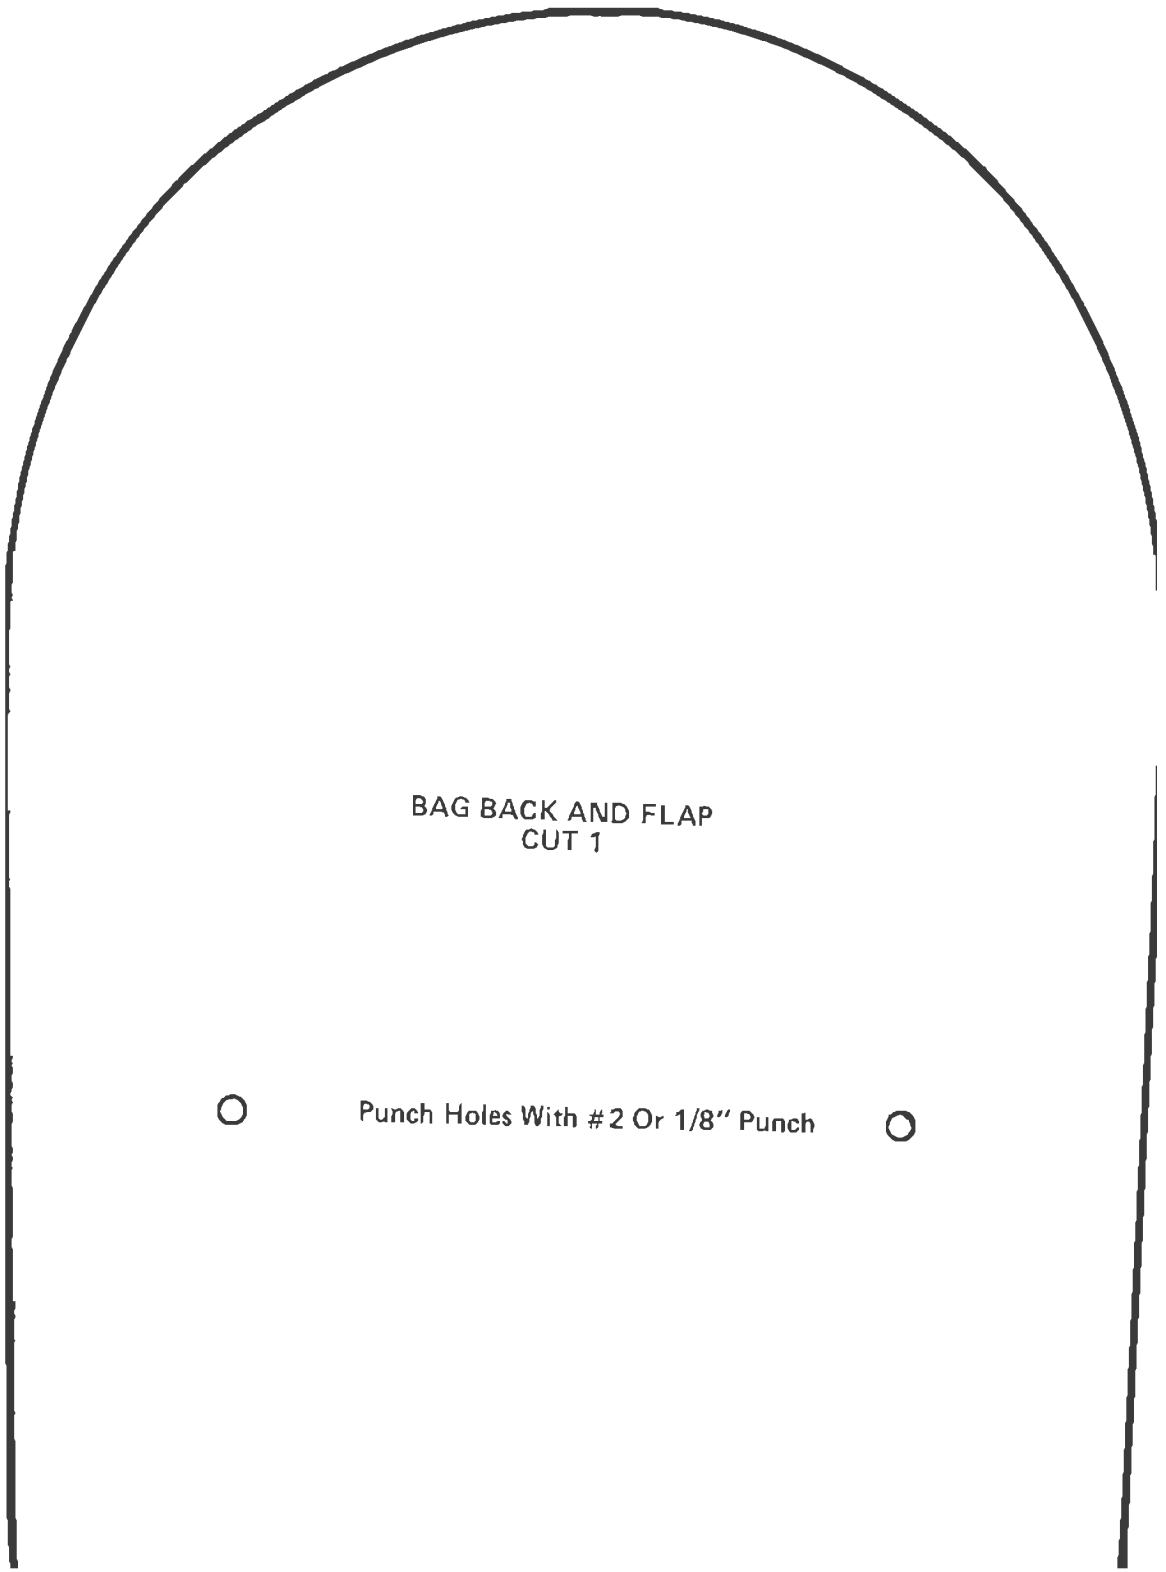

BAG BACK AND FLAP
CUT 1




Punch Holes With #2 Or 1/8" Punch






STEP 4. Align one edge of gusset with edge of bag front, grain sides together, and stitch gusset in place, being sure to catch ends of front strap in seam.

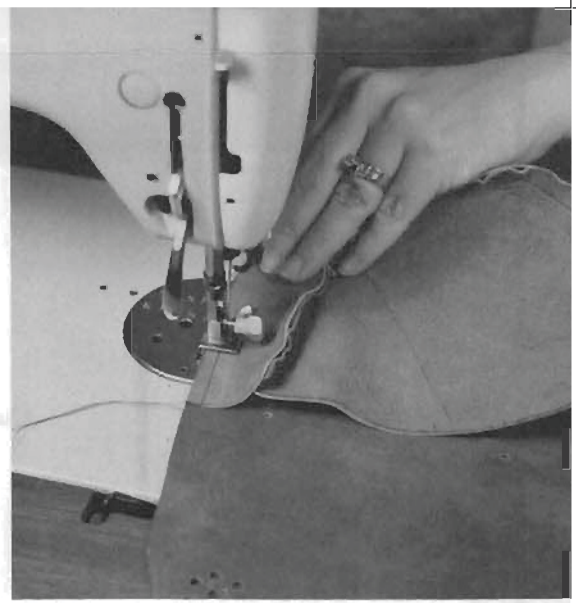


STEP 5. Align other edge of gusset with edges of back, grain sides together, and stitch gusset in place.



STEP 7. Take rivet stud and push it through one hole in bag back from inside bag. Now push hole in one strap over rivet stud on outside of bag back. Place cap of rivet over stud. Put the whole assembly on a solid surface. Place rivet setter on rivet cap and set rivet by striking setter sharply with a mallet. Repeat with other strap on other side of bag back.

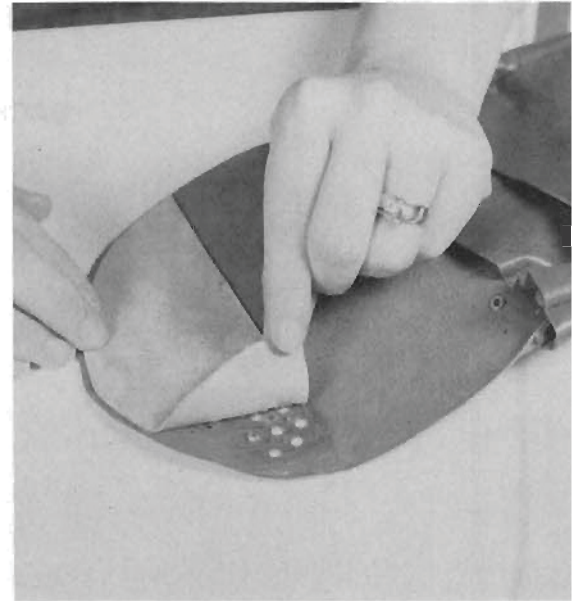


STEP 8. Tie ends of straps together with overhand knot to desired length. If you wish you may cement a small piece of contrasting leather under the holes on the front flap. Be careful not to get cement where it will seep through the holes.

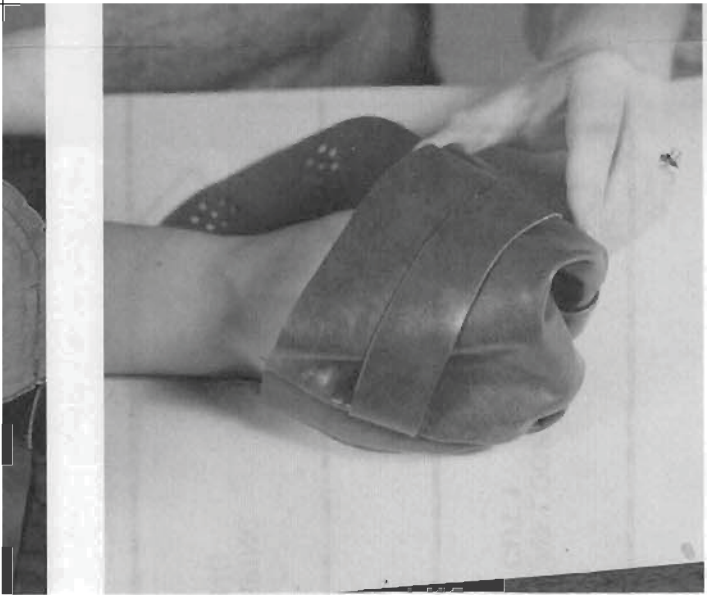

bag STEP 6. Turn bag right side out.



knot
small
front
show




○ Punch Holes With #2 Punch

HANDLE STRAPS
CUT 2, 36" LONG



Use #4 Or 5/32" Punch

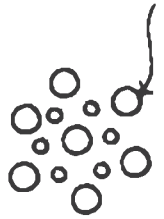

Use #1 Or 3/32" Punch




Use #2 Or 1/8" Punch




BAG FRONT
CUT 1




BAG NO. 3

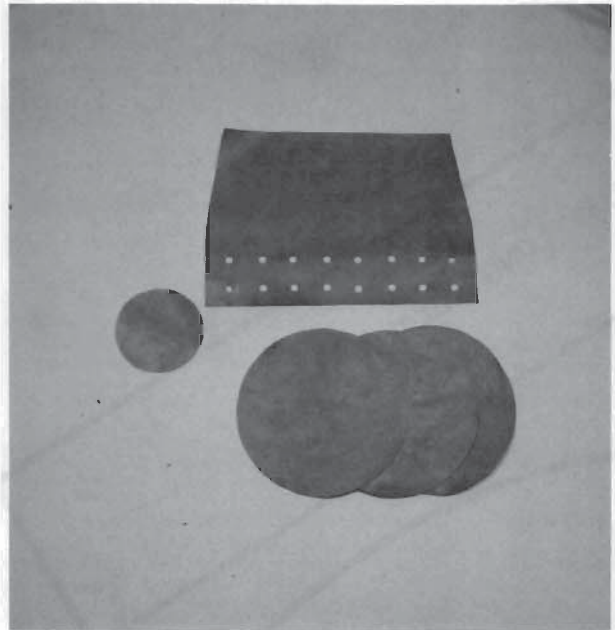


STEP 1. Cut 1 bag body and 1 bag bottom. Punch holes in bag body as indicated on pattern sheet using a #12 or 5/16" punch.

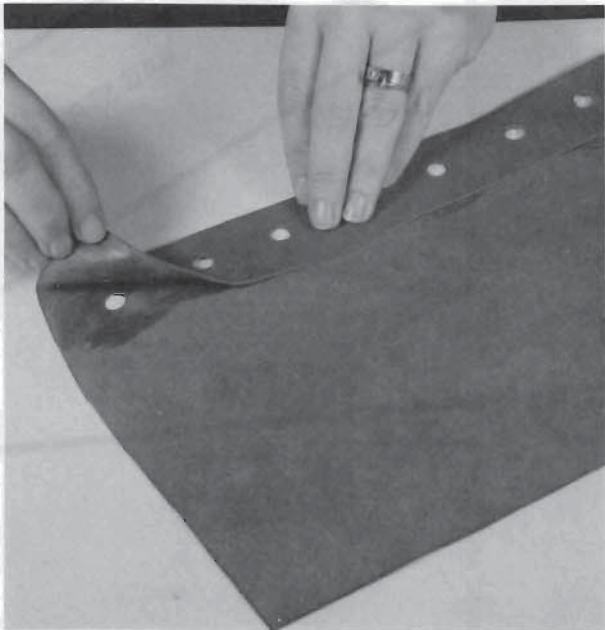


STEP 2. Fold top edge of bag body over, aligning the holes and cement in place.

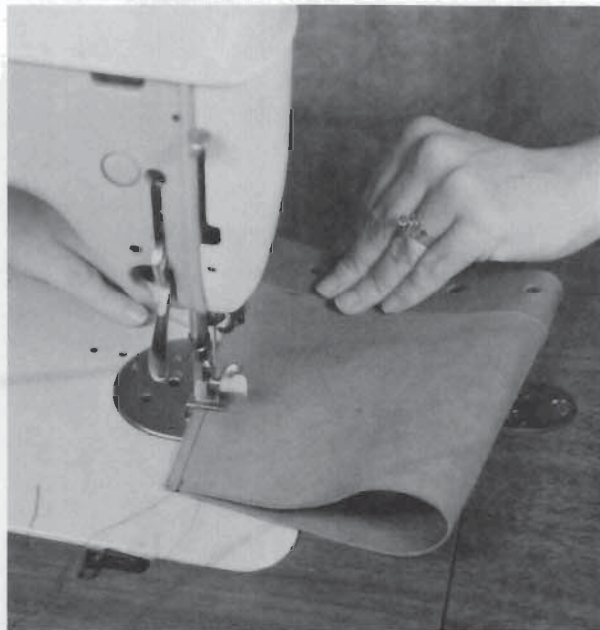


STEP 3. Align side edges of bag body, right sides together and stitch up the edge.

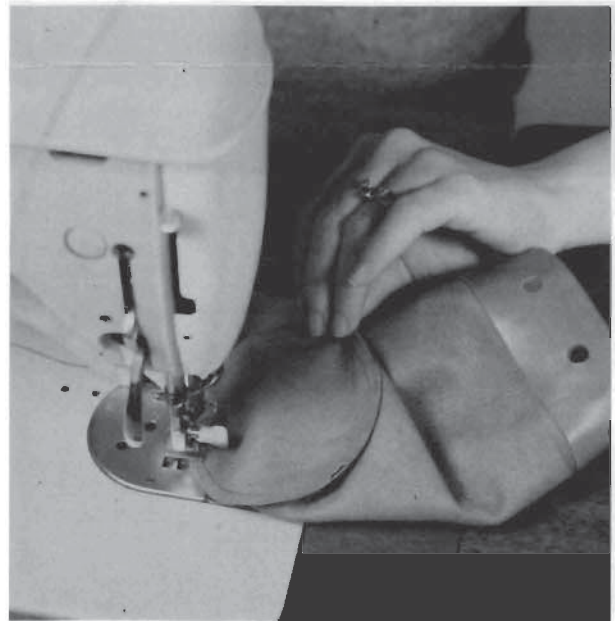

STEP 4. Align bottom of bag body with edges of bag bottom, right sides together, and stitch around bottom of bag. Turn bag right side out.

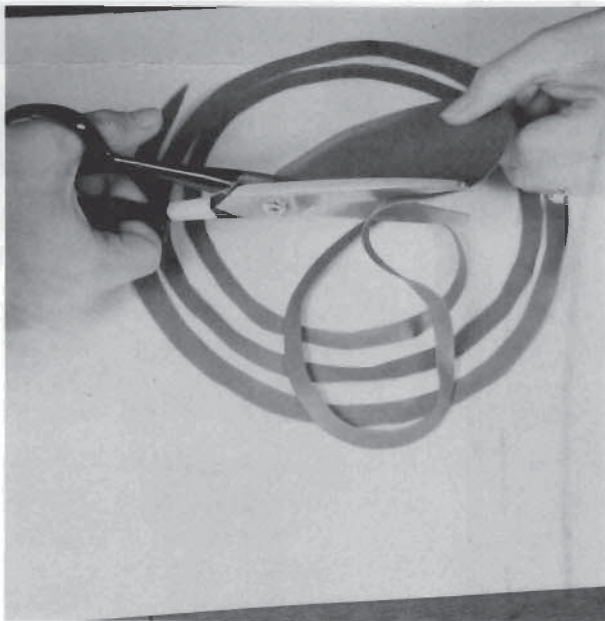


STEP 5. Cut 3 circles, 7" across. Begin cutting on outside of circle and cut around the circle in a 3/8" strip in a spiral design.

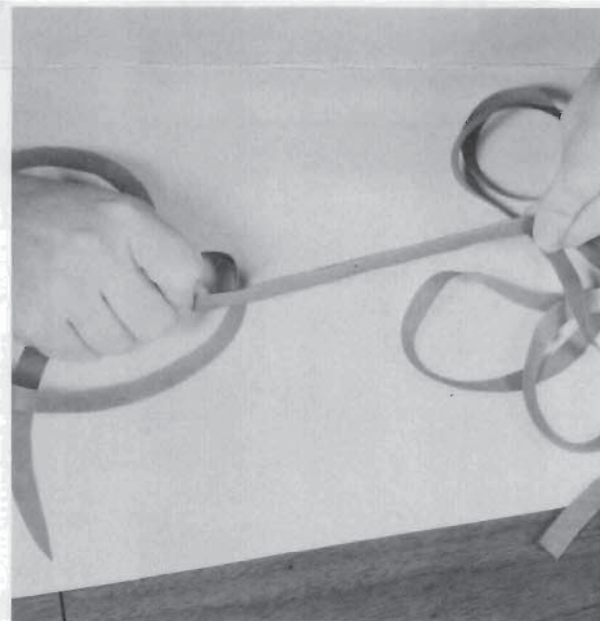



STEP 6. When you reach the center of the circle take the strip and stretch it out. Rub it over the edge of a table to flatten it.



STEP 7. Put the ends of the three strips together and tie one set of ends together with an overhand knot about 3" from ends. Braid strips together until you have only about 3" left at other end and tie another knot.

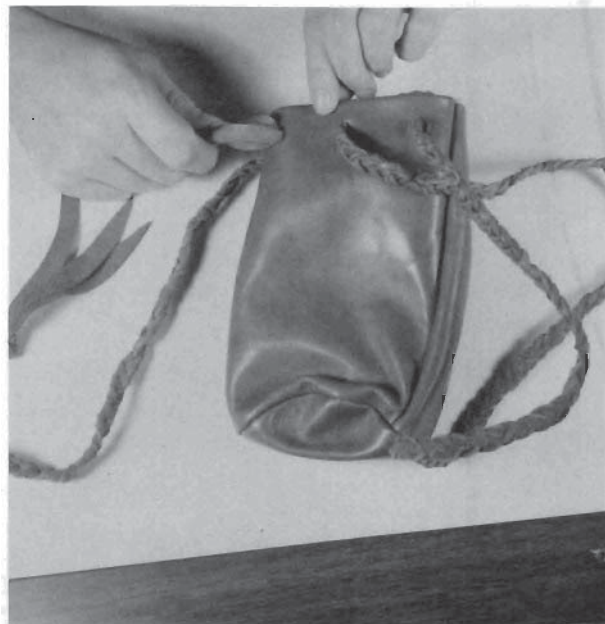


STEP 8. Thread braided strap through holes in top of bag with ends on outside of bag. Tie straps together with overhand knot to desired length.

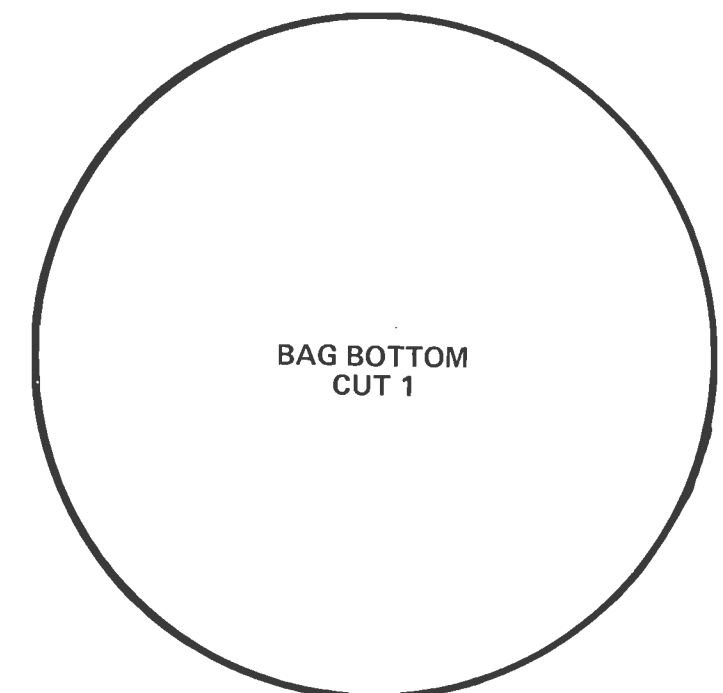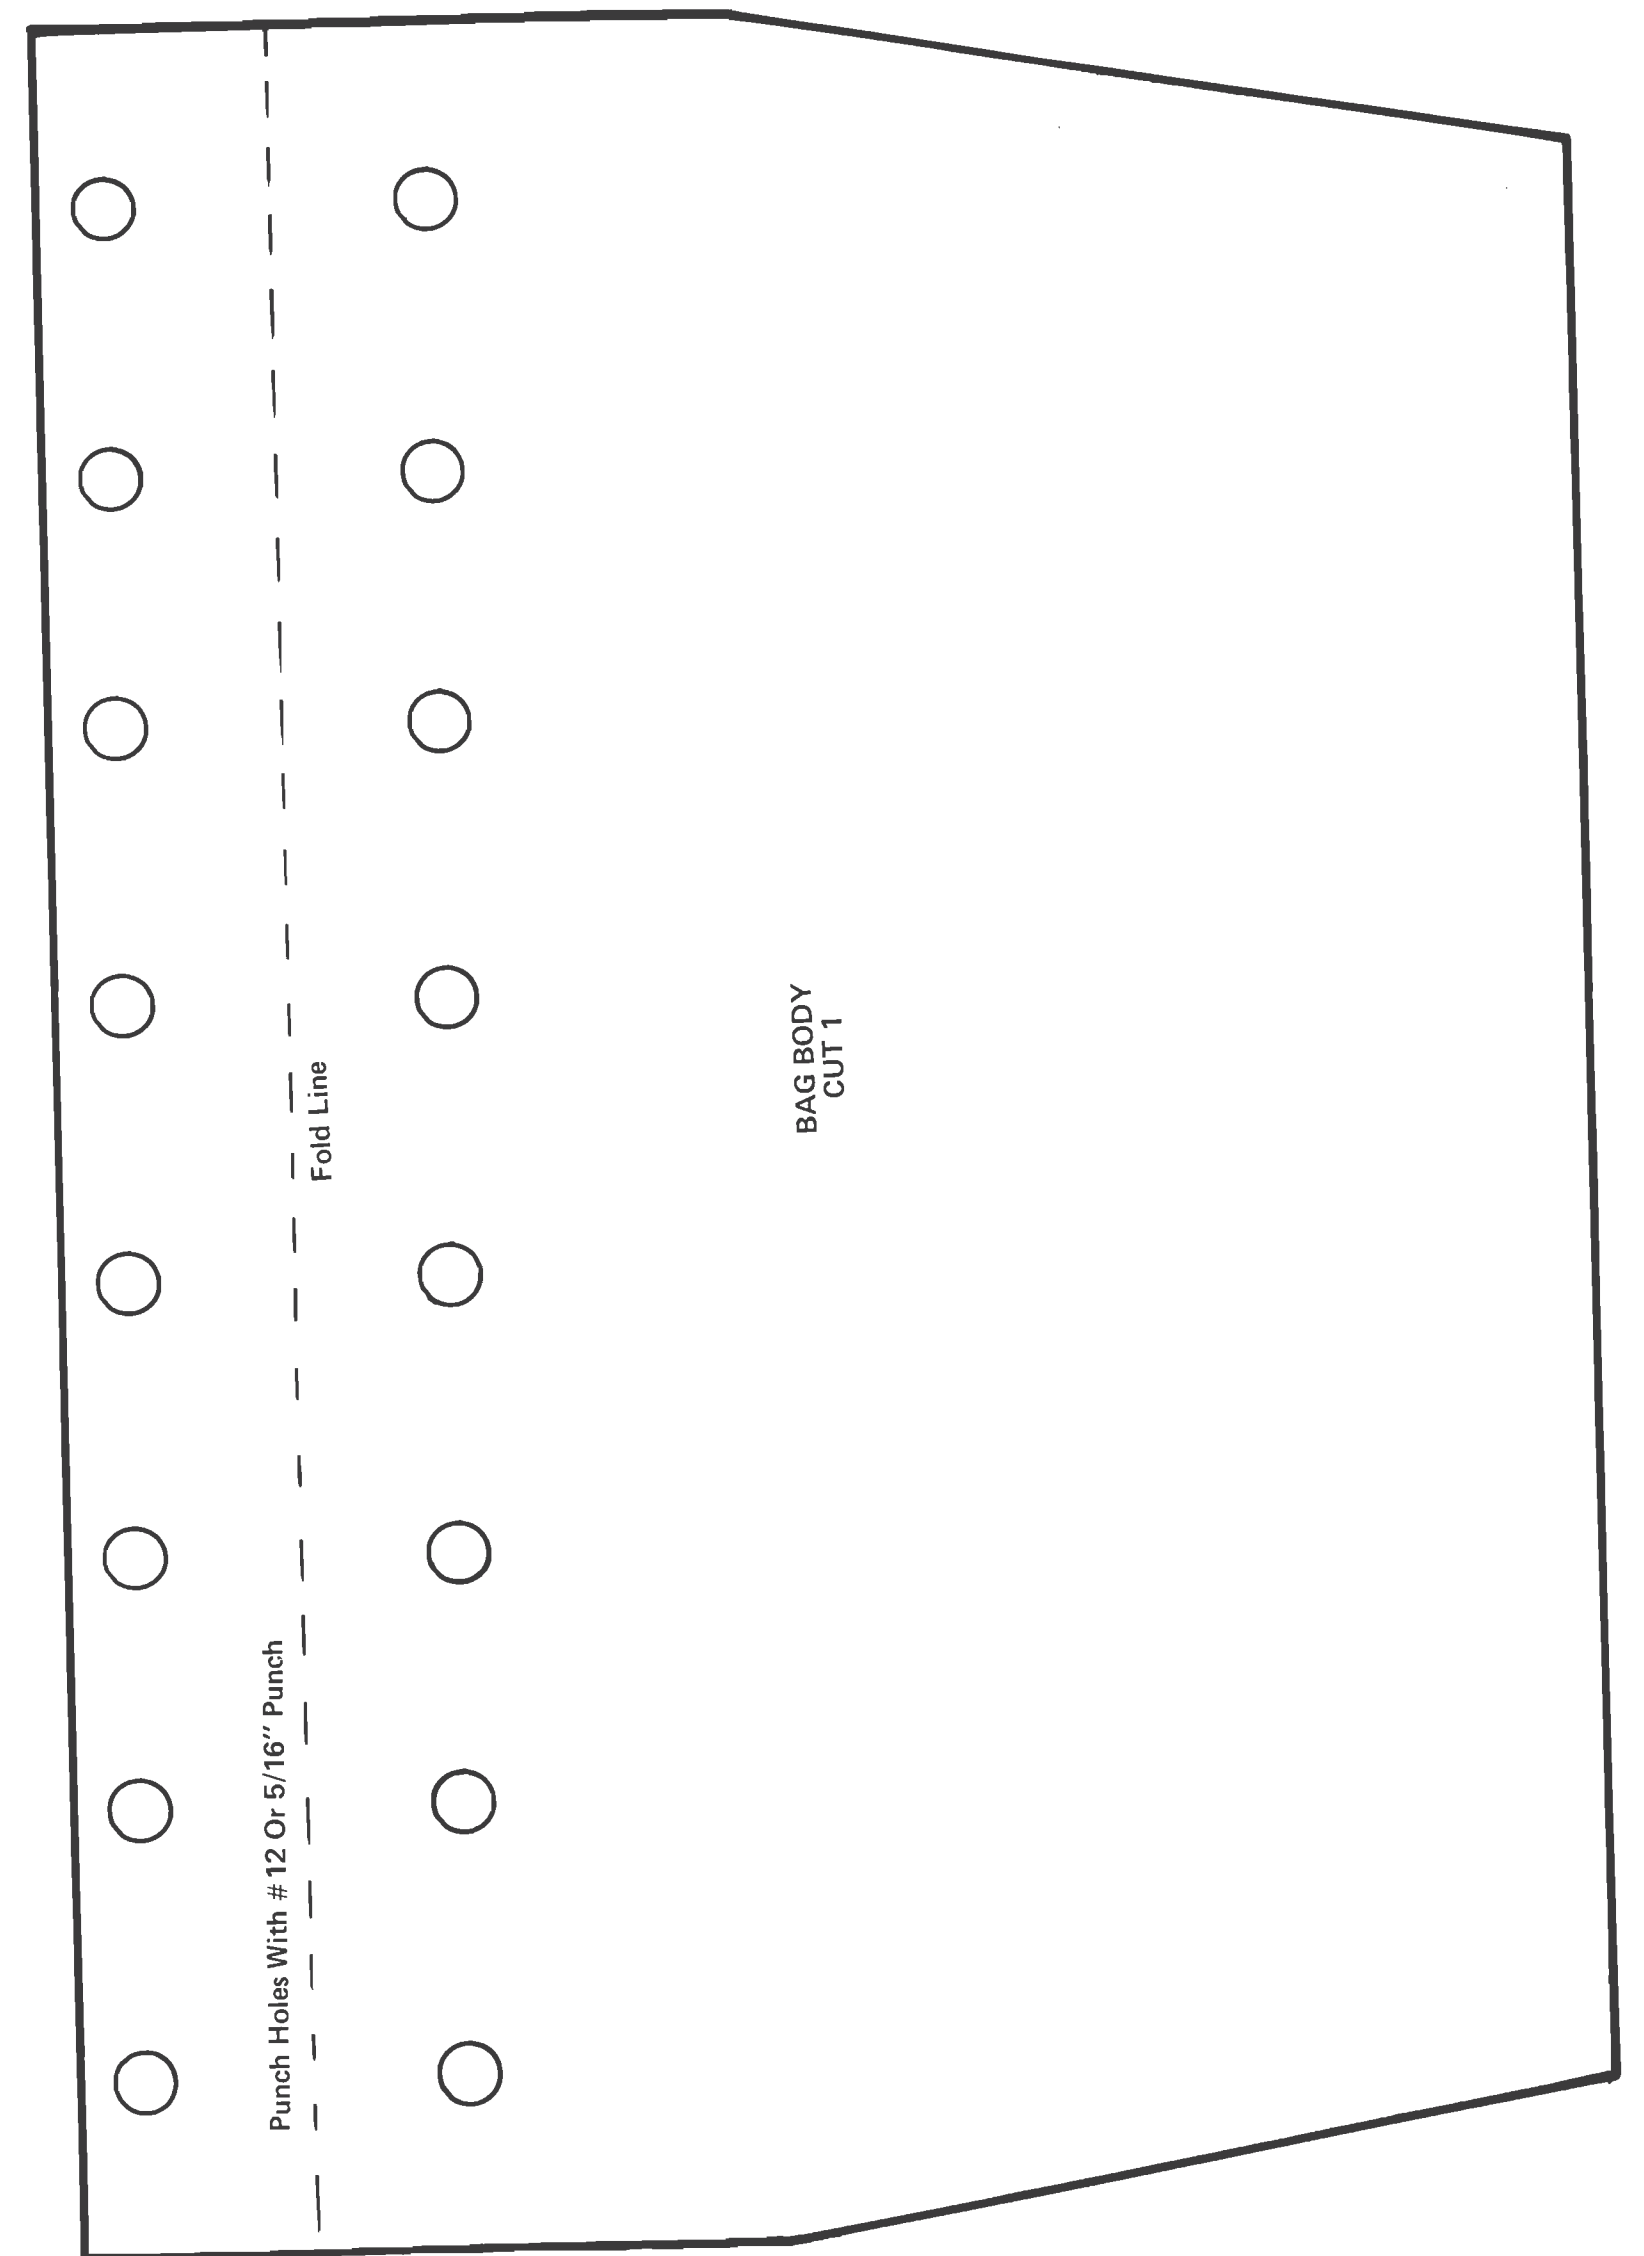




BAG 1

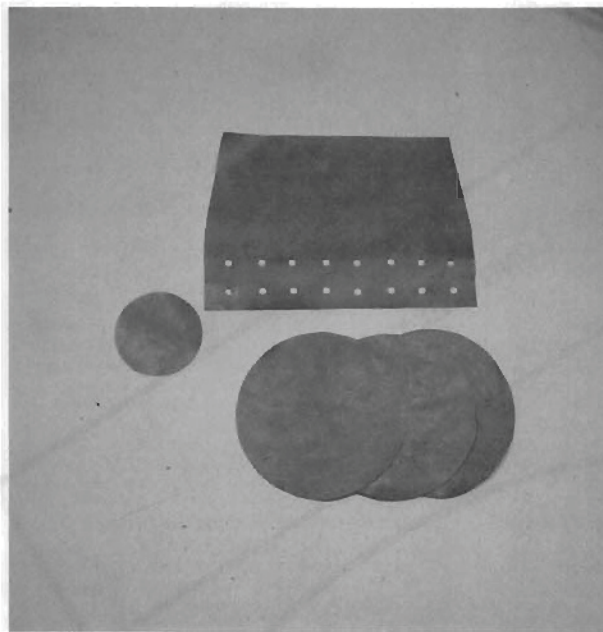


STEP 1. Cut 1 bag body and 1 bag bottom. Punch holes in bag body as indicated on pattern sheet using a #12 or 5/16" punch.

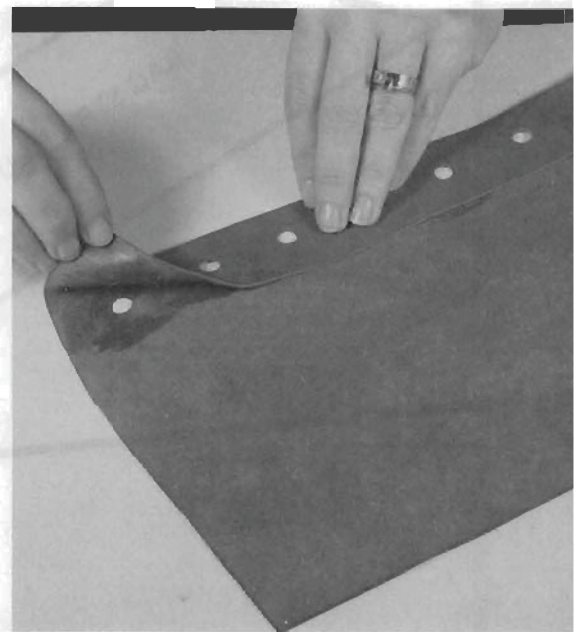


STEP 2. Fold top edge of bag body over, aligning holes and cement in place.

NO. 3

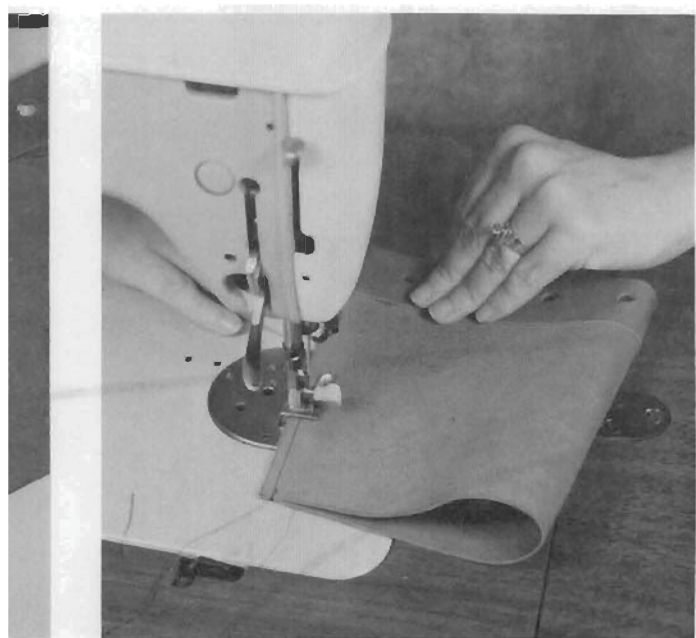


the STEP 3. Align side edges of bag body, right sides together and stitch up the edge.

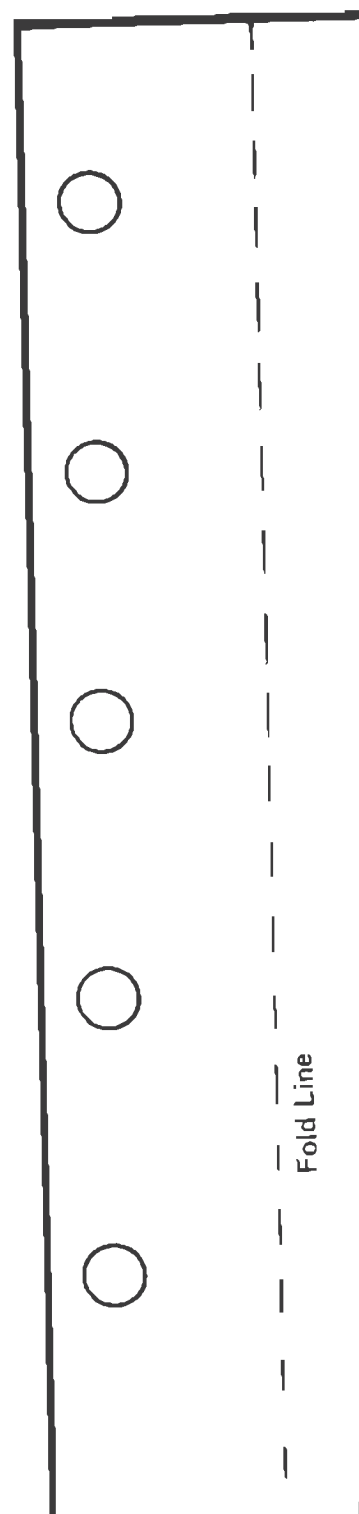


BAG BODY
CUT 1



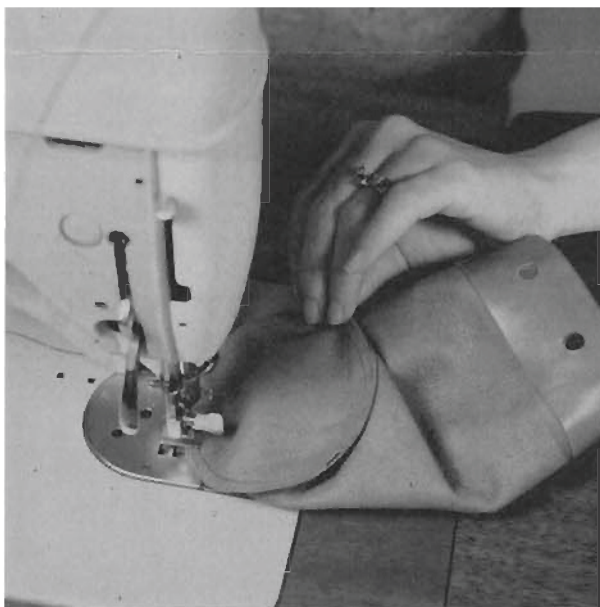


STEP 4. Align bottom of bag body with edges of bag bottom, right sides together, and stitch around bottom of bag. Turn bag right side out.

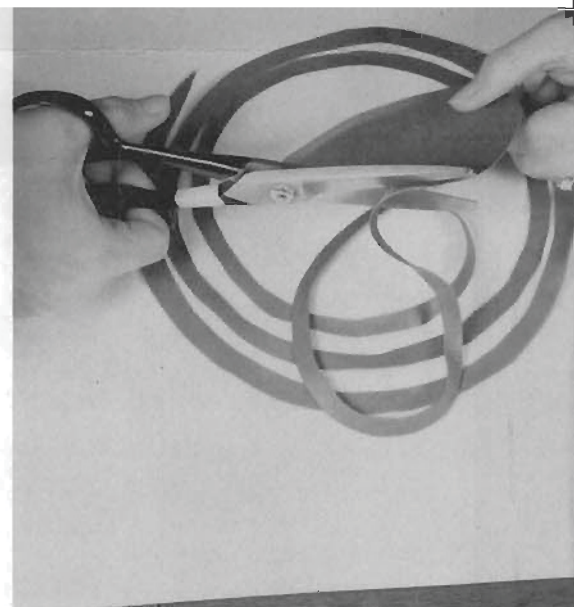


STEP 5. Cut 3 circles, 7" across. Begin cutting outside of circle and cut around the circle in a $\frac{3}{8}$ " in a spiral design.



STEP 7. Put the ends of the three strips together and tie one set of ends together with an overhand knot about 3" from ends. Braid strips together until you have only about 3" left at other end and tie another knot.

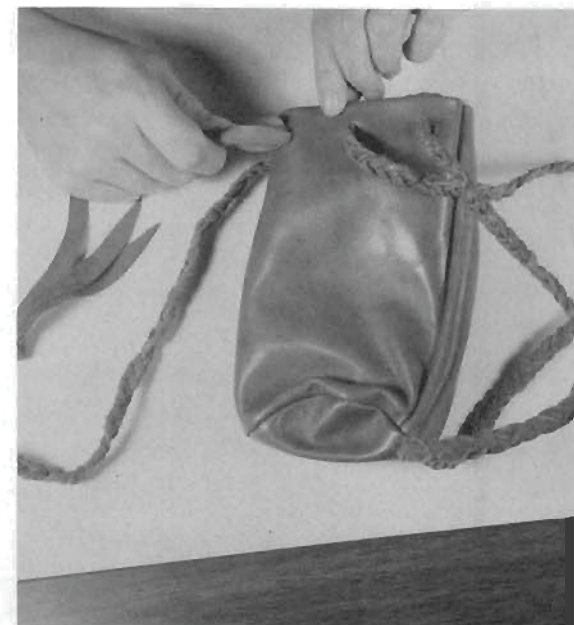

STEP 8. Thread braided strap through holes in to bag with ends on outside of bag. Tie straps together overhand knot to desired length.

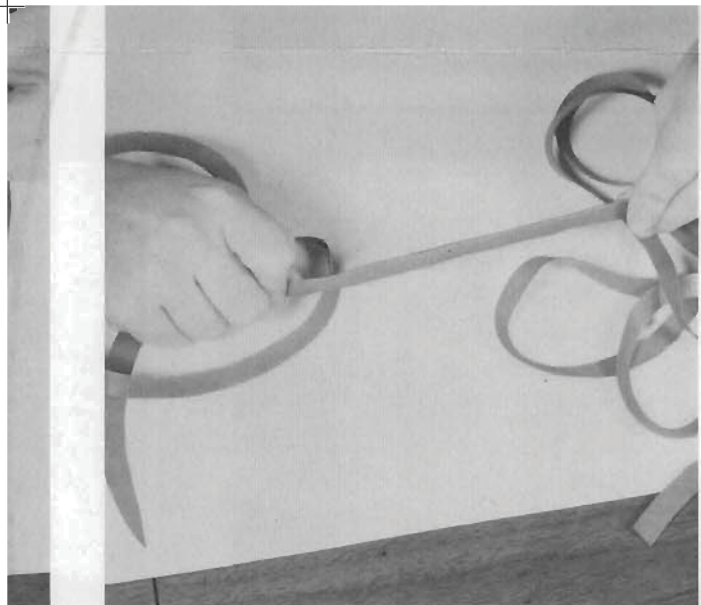

up on
strip

STEP 6. When you reach the center of the circle take the strip and stretch it out. Rub it over the edge of a table to flatten it.



up of
with




Punch Holes With #12 Or 5/16" Punch




BAG BOTTOM
CUT 1




BAG NO. 4

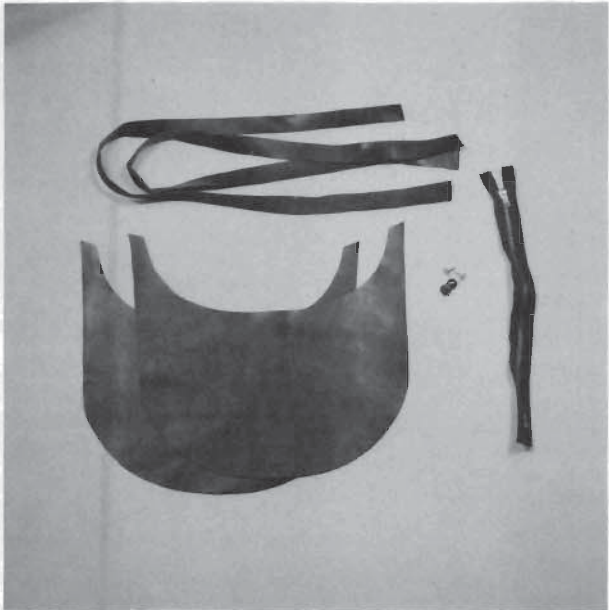


STEP 1. Cut 2 bag bodies. Cut 2 straps, 1 yard long and 1" wide.

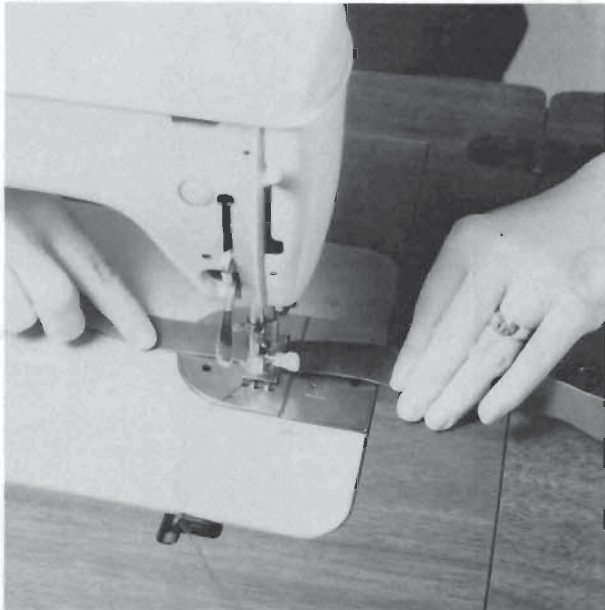


STEP 2. Take the two straps and put them end to end. Overlap ends 1/4", flesh sides up, and stitch across them making one long strap.

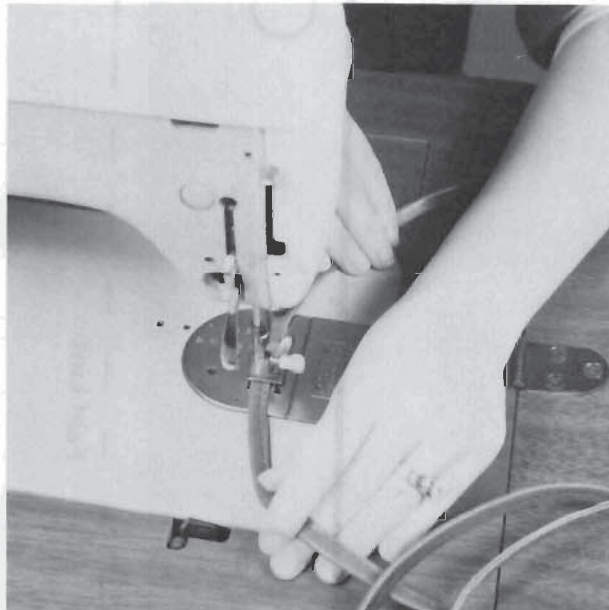


STEP 3. Fold strap lengthwise, flesh sides together, and stitch along raw edge.

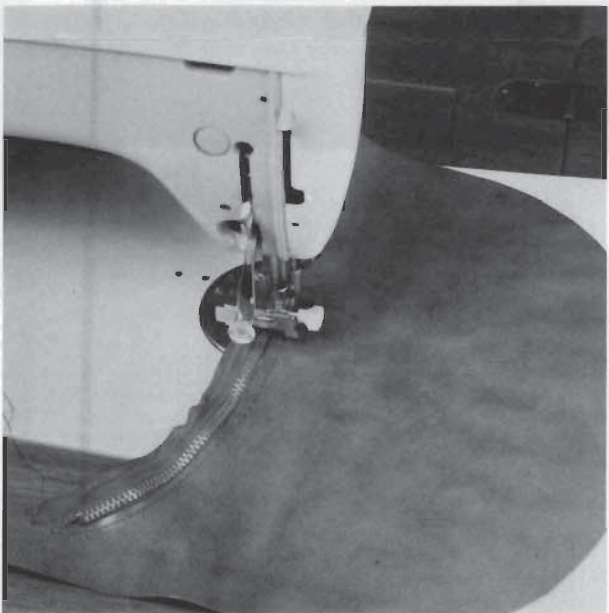


STEP 4. Cement zipper in place, as indicated on pattern sheet, on one bag body and stitch in place. Repeat on other side of zipper and other bag body.

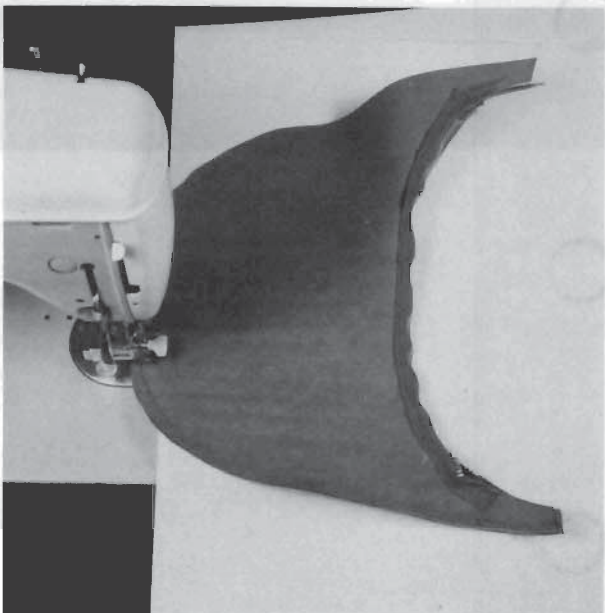


STEP 5. With grain sides together, align the bag bodies and stitch around edges. Turn bag right side out.

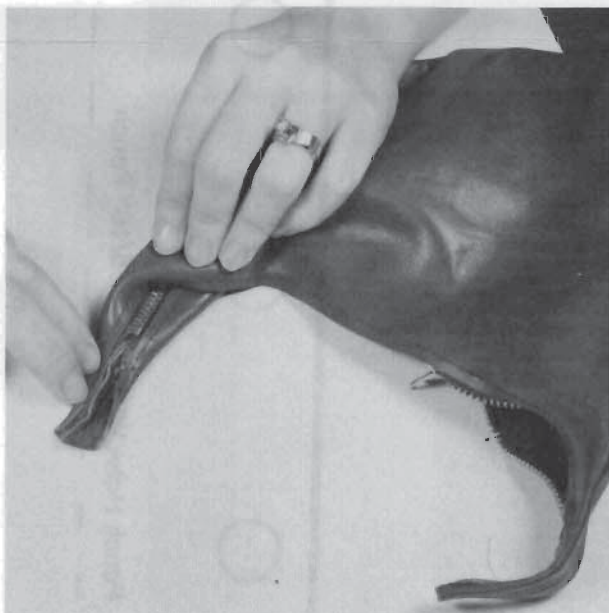


STEP 6. Fold edges of handle tabs over and cement.

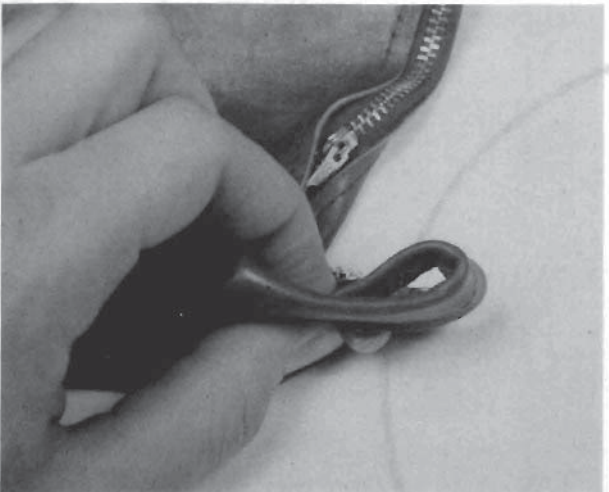



STEP 7. Fold end of handle tab over toward zipper about 1". You are now ready to set the knobby rivet. Push rivet tack through both sides of the tab from the zipper side. Because of the varying thicknesses and number of leather pieces knobby rivets are installed through, height of tack (extending above surface of leather pieces) must be checked each time. If height of tack exceeds height of button, tack must be trimmed so it will not penetrate top of button when installed. Trim tack about 1/16" shorter than height of button and then press button against leather. Repeat on other handle tab.

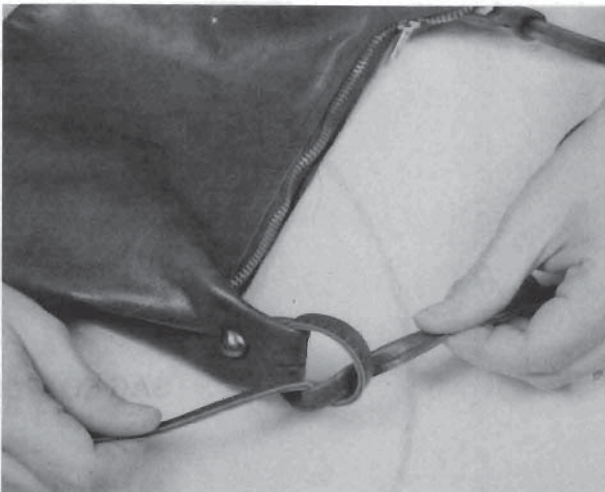

STEP 8. Slip one end of handle through the loop just made in handle tab, about 6". Tie a knot around the tab and then tie a knot in the end of the strap. Repeat with other end of strap on other handle tab.

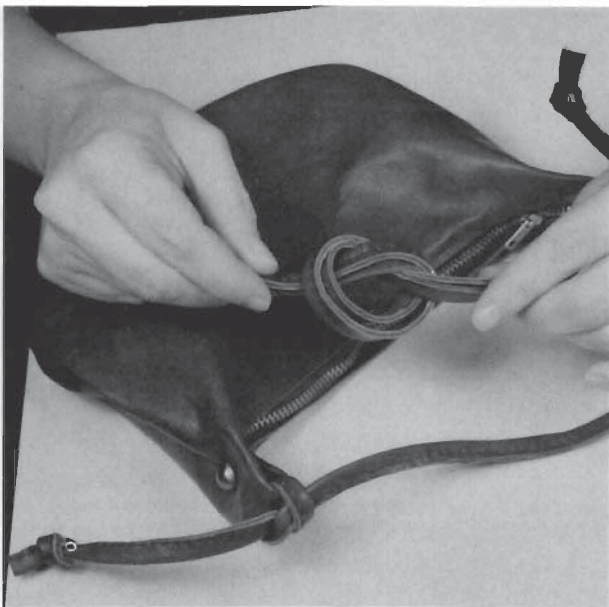

STEP 9. Fold handle in half and tie an overhand knot at desired length.

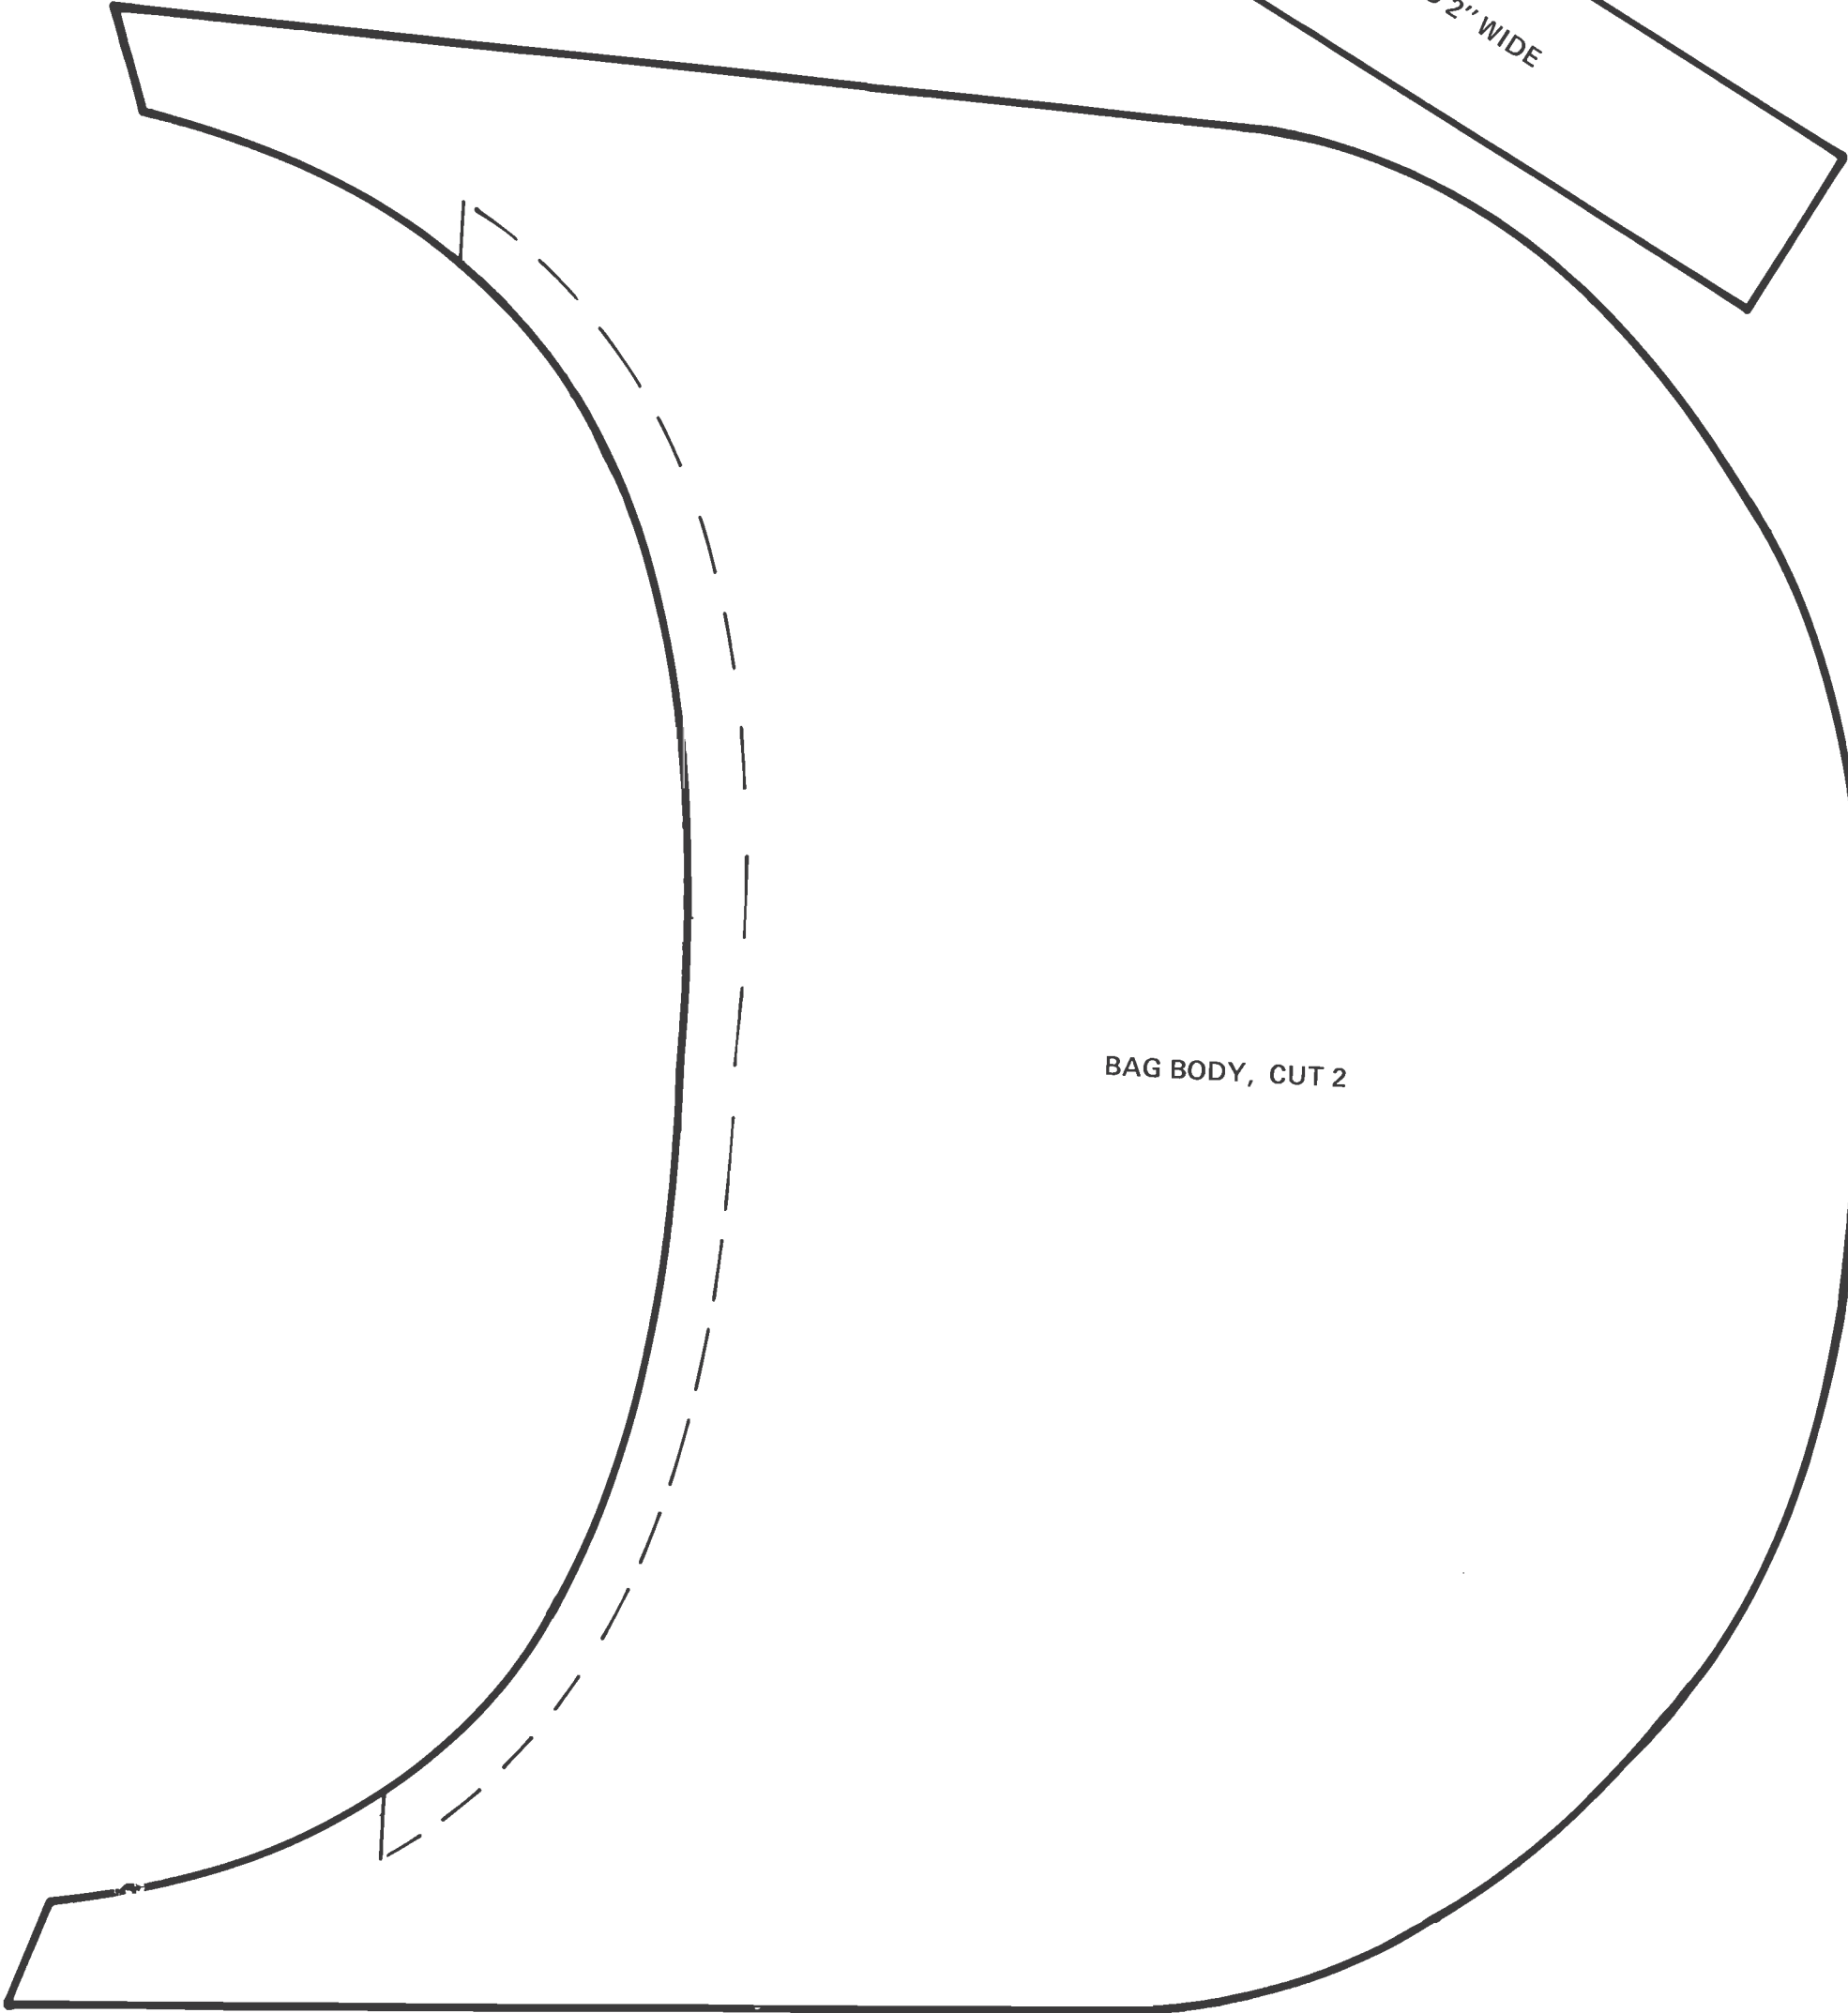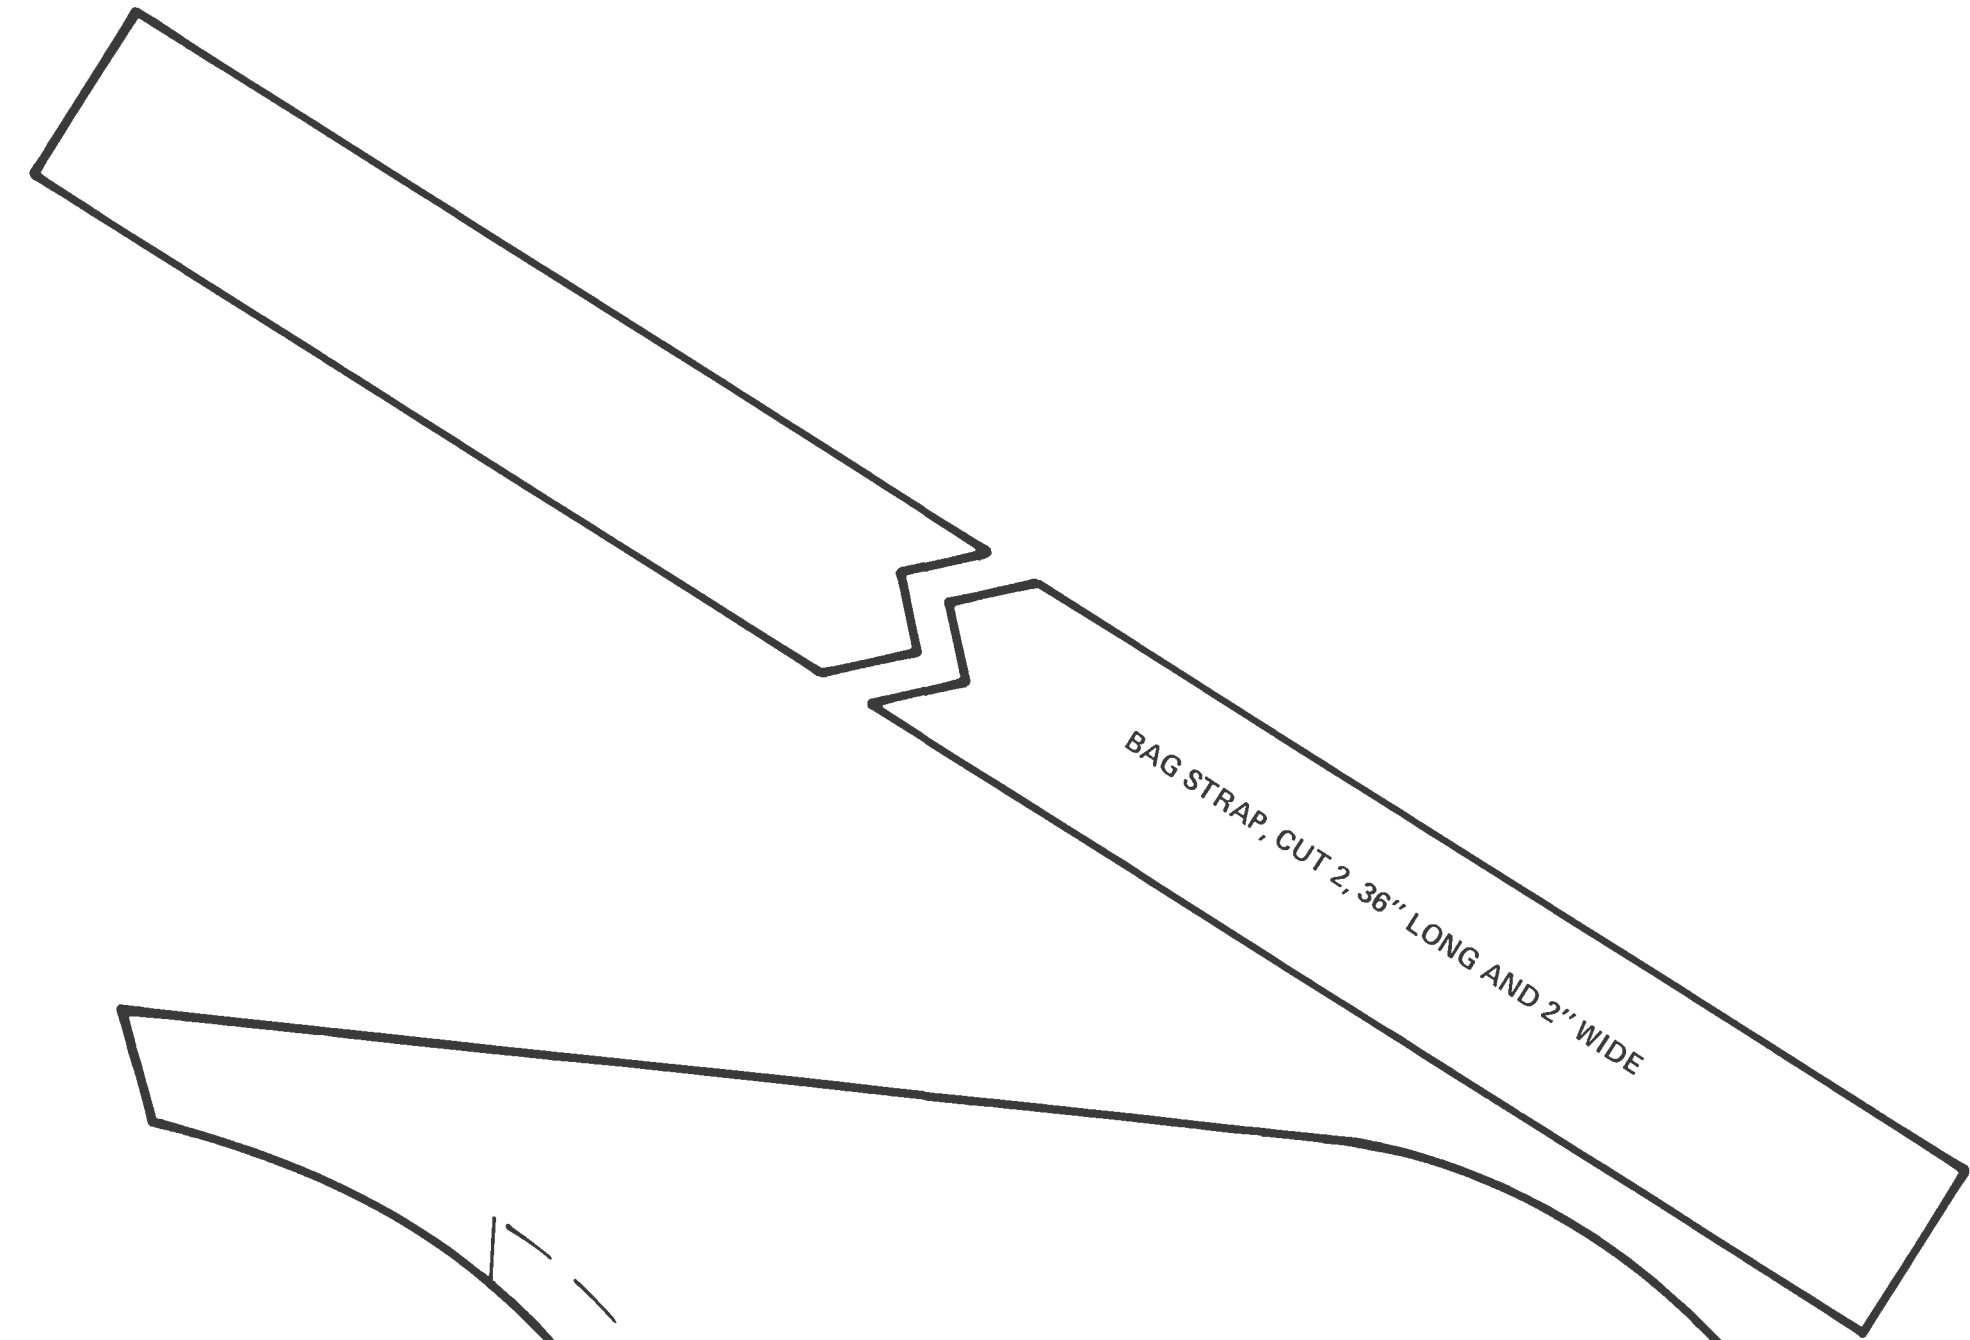




BAG N





STEP 1. Cut 2 bag bodies. Cut 2 straps, 1 yard long and 1" wide.

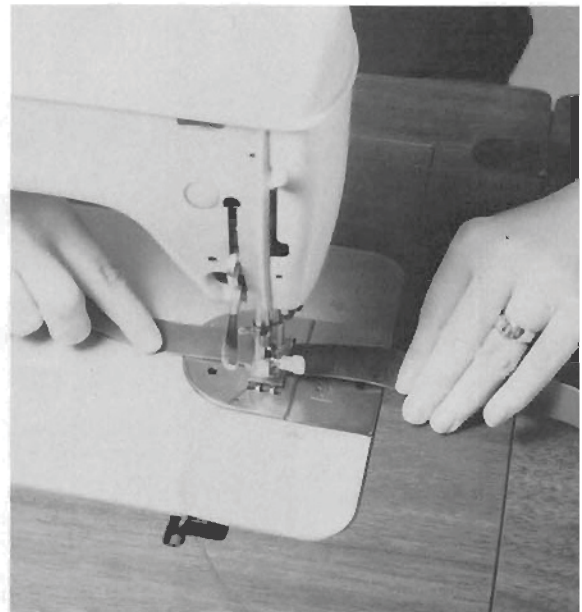



STEP 2. Take the two straps and put them end to end. Overlap ends 1/4", flesh sides up, and stitch across them making one long strap.

10. 4

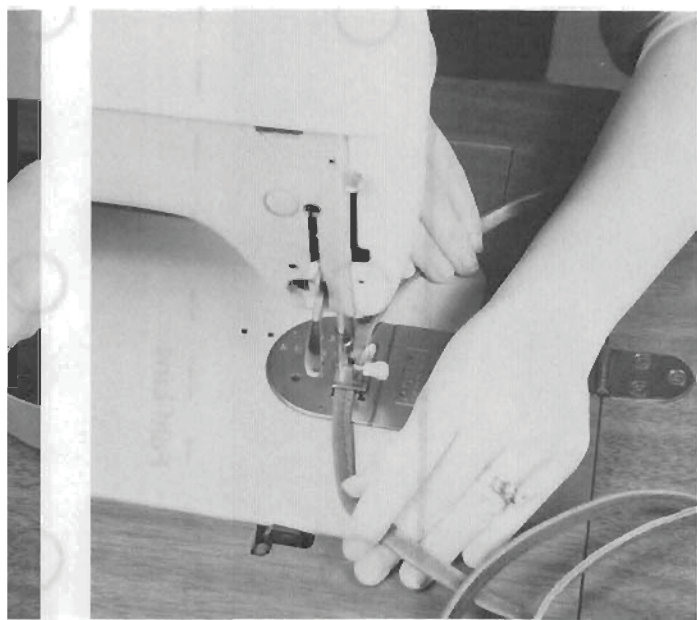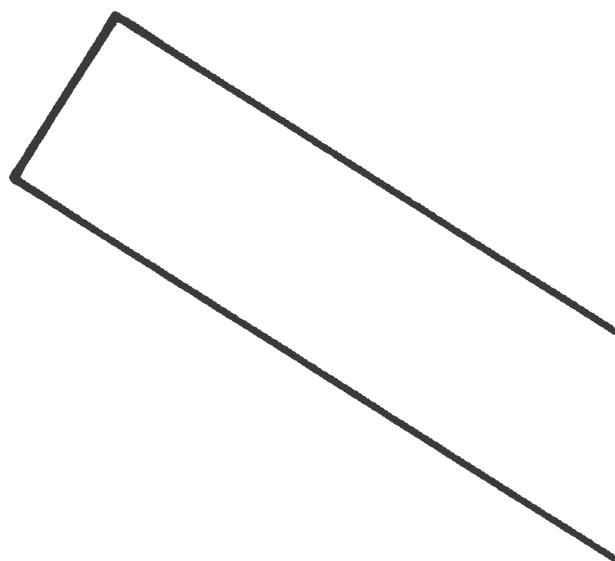


STEP 3. Fold strap lengthwise, flesh sides together, and stitch along raw edge.

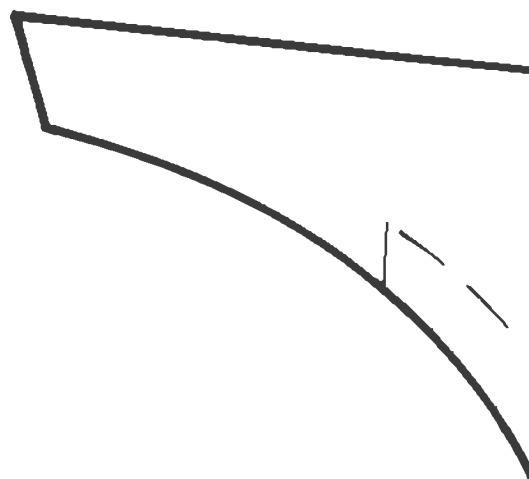


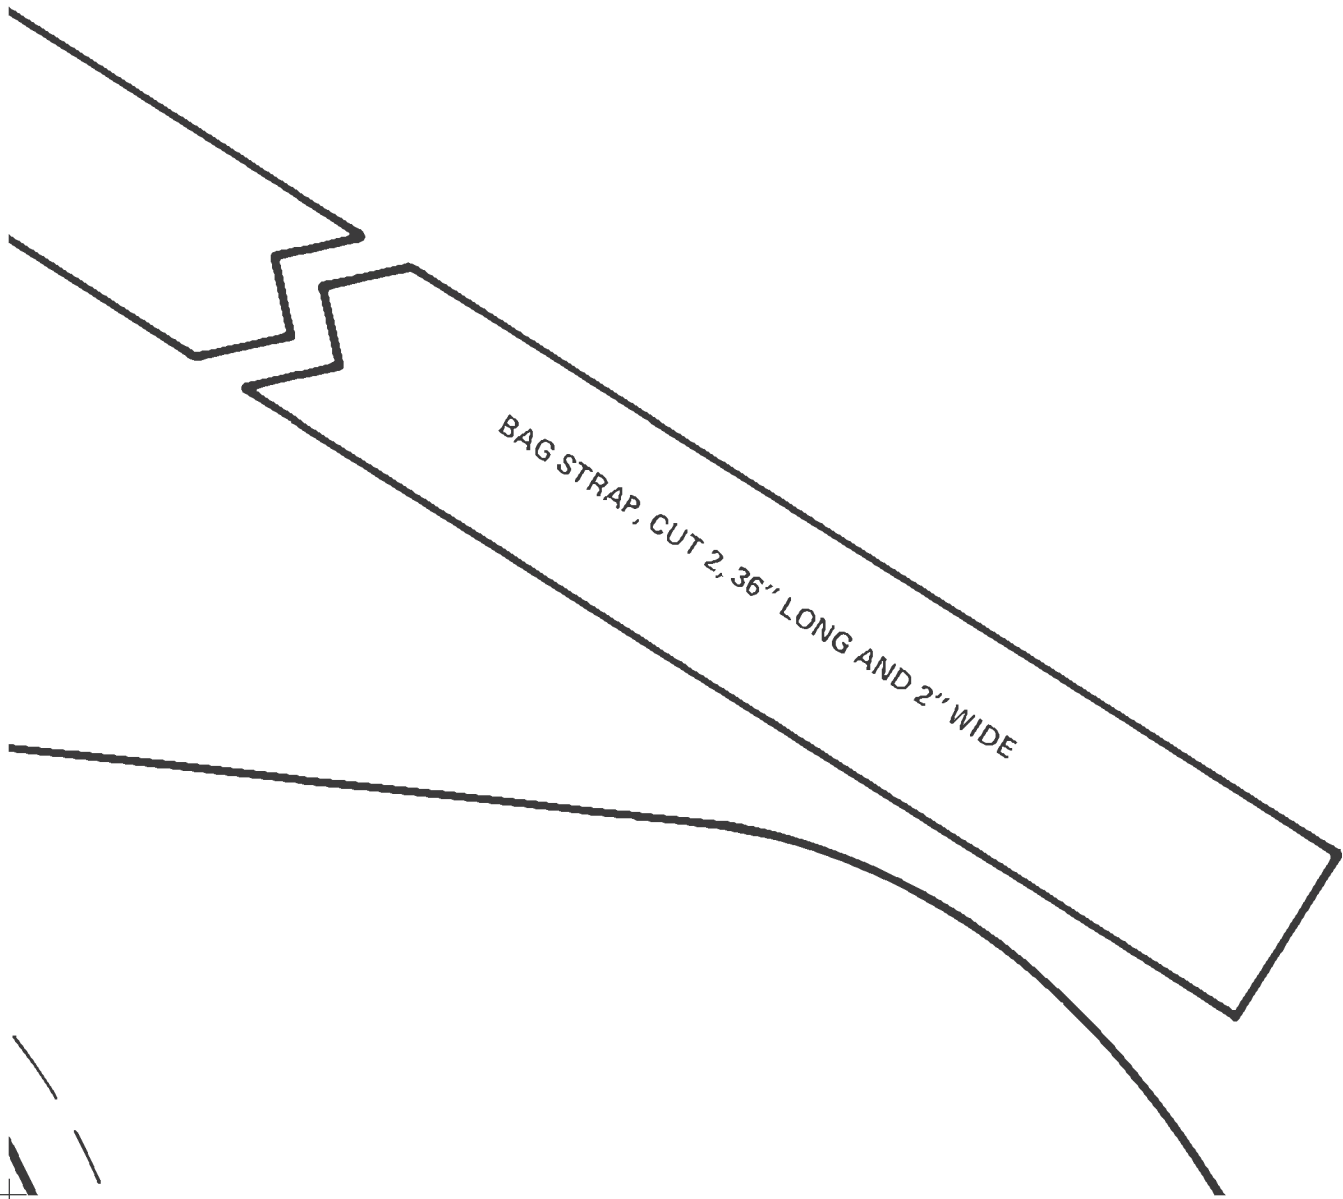


BAG STRAP, CUT 2, 36" LONG AND 2" WIDE

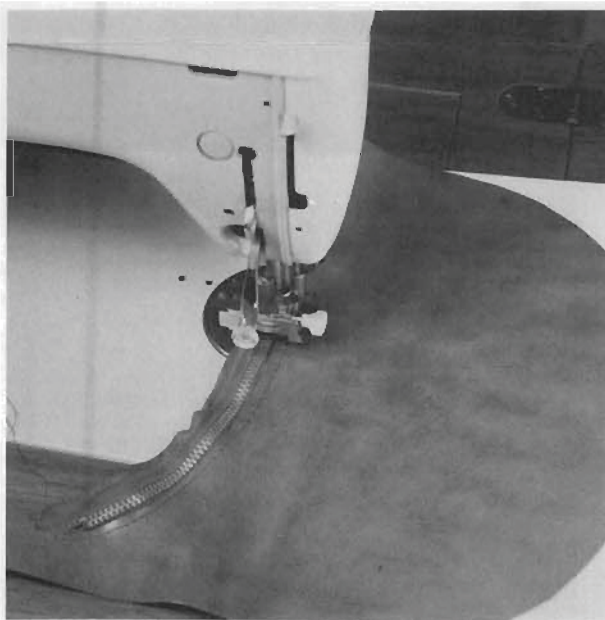


STEP 4. Cement zipper in place, as indicated on pattern sheet, on one bag body and stitch in place. Repeat on other side of zipper and other bag body.

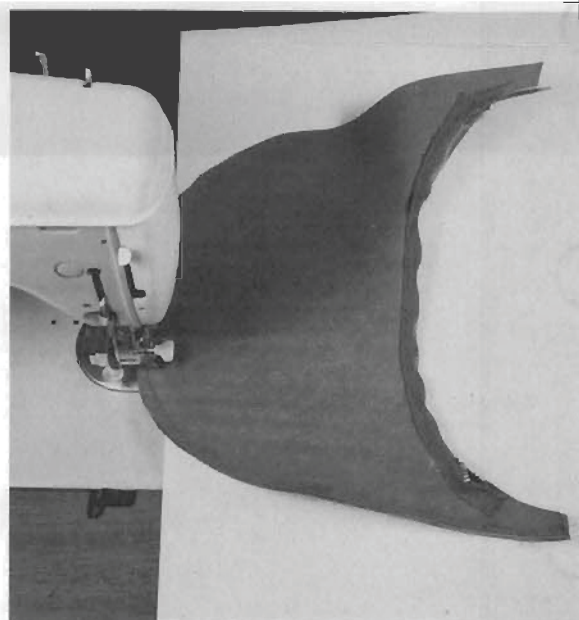


STEP 5. With grain sides together, align the bag body and stitch around edges. Turn bag right side out.

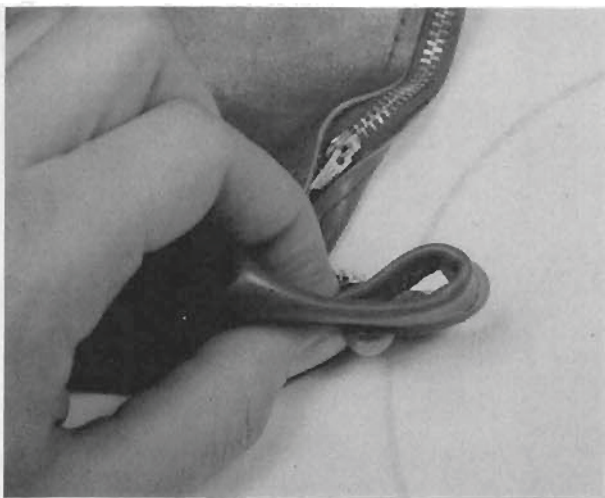


STEP 7. Fold end of handle tab over toward zipper about 1". You are now ready to set the knobby rivet. Push rivet tack through both sides of the tab from the zipper side. Because of the varying thicknesses and number of leather pieces knobby rivets are installed through, height of tack (extending above surface of leather pieces) must be checked each time. If height of tack exceeds height of button, tack must be trimmed so it will not penetrate top of button when installed. Trim tack about 1/16" shorter than height of button and then press button against leather. Repeat on other handle tab.

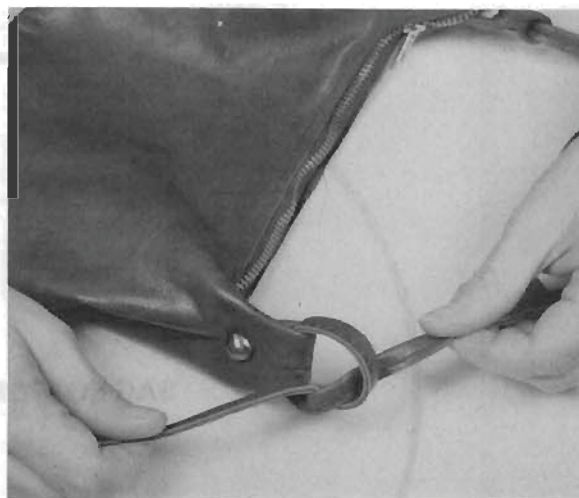


STEP 8. Slip one end of handle through the loop made in handle tab, about 6". Tie a knot around the and then tie a knot in the end of the strap. Repeat v other end of strap on other handle tab.

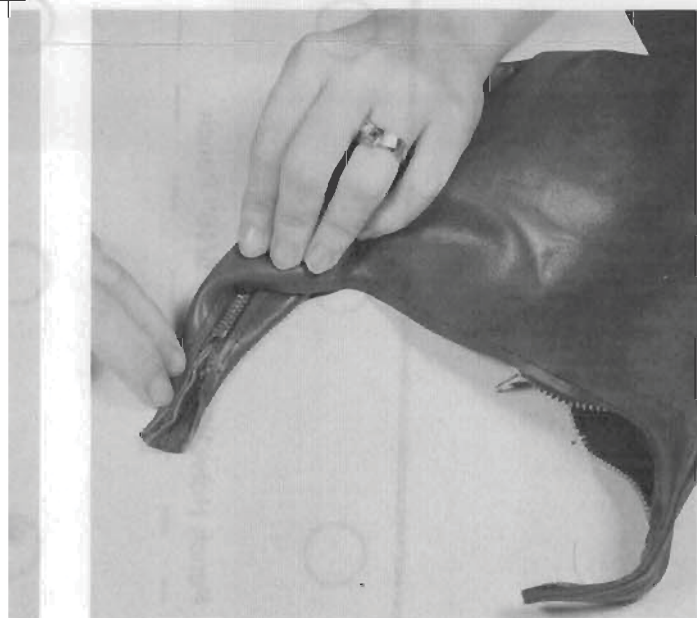

lies STEP 6. Fold edges of handle tabs over and cement.

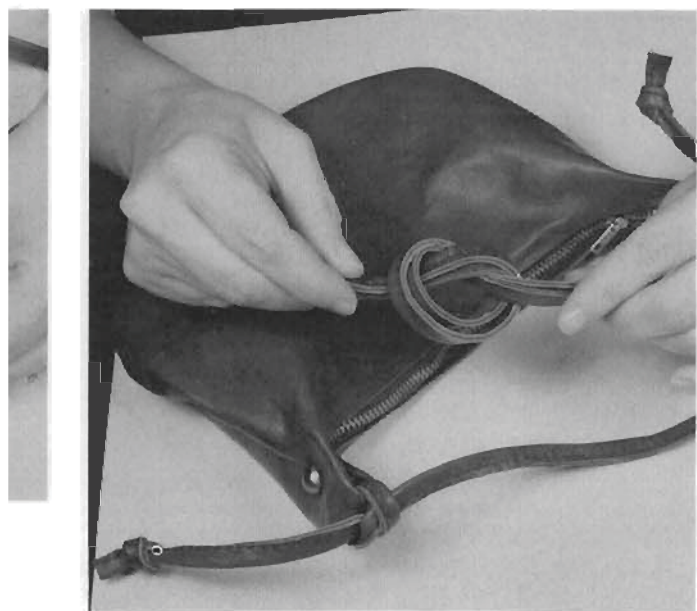

just tab STEP 9. Fold handle in half and tie an overhand knot at
vith desired length.

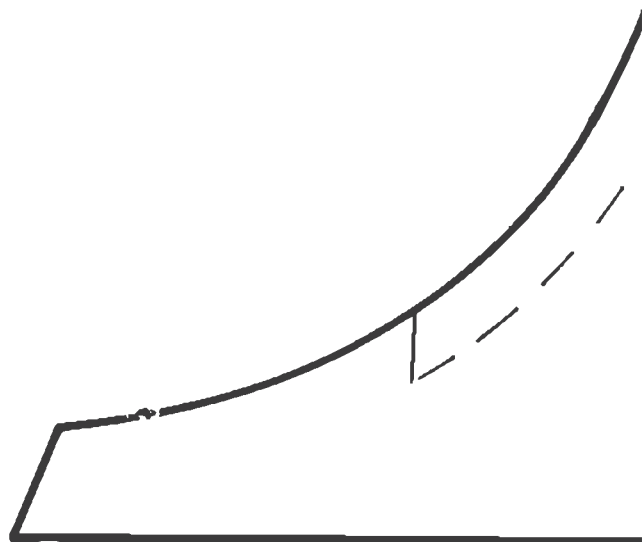

BAG BODY, CUT 2