
HOW TO ASSEMBLE . . .

PRINTED IN U.S.A.

Place parts together as shown below and secure with brass eyelets. Use standard eyelet setter to set eyelets.

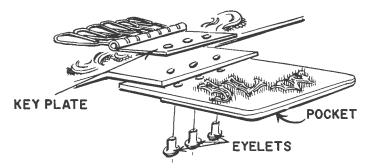

NEW YORKER KEY CASE KIT

COMPLETE • READY-TO-ASSEMBLE



Kit Contains:

Pre-Cut Genuine Leather
Pre-Stitched leather pocket
Pre-Set Snap Fastener
Nichol Key Plate
Complete Instructions
Brass Eyelets




TRADITIONAL PHOTOCARVE PATTERN . . .


Fandy

(No part of this or any other page may be re-printed without written permission.)

AND TRACING PATTERN

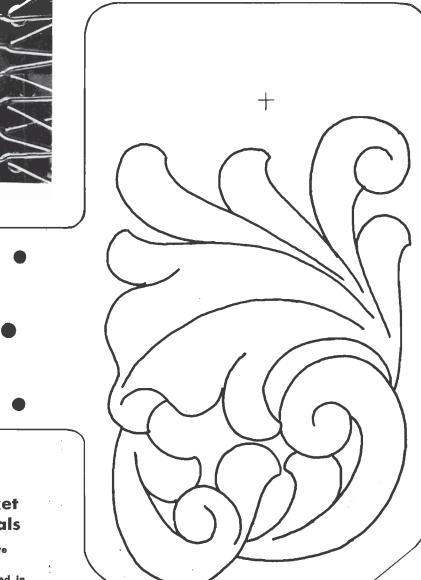



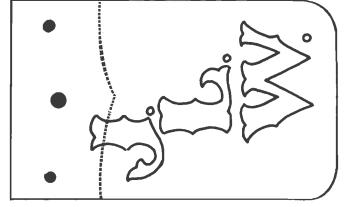

Pocket Initials

Complete
Initials
Contained in
Craftaid #2540

TO CARVE YOUR LEATHER PROJECT

PREPARING THE LEATHER

- A. Use a sponge to dampen leather.
- B. Spread the leather to be decorated grain or smooth side up on a smooth board. Dampen the entire piece. Do not get leather sopping wet.
- C. Use tracing paper to trace design outlines from pattern. Clip tracing to damp



Step 1—Tracing Design
Trace the outline of the design on leather
with tracing tool or sharp pencil. If leather
becomes dry, dampen it again, When it turns
back to its natural color, resume work.



Step 2—Carving
Use swivel knife to carve design. Cut outlines in the following order: flowers, stems, leaves, scrolls, etc.



Step 5—Beveling
Use beveler to stamp down one side of cut only. Push beveler along inside of swivel cut. Smooth even bevel is very important.





Step 6-Veiner - and Seeder Use veiner to add decorative effect on scrolls and flowers. Seeder to complete flower centers.

Step 3—Camouflage
Use camouflage to add roundness to scrolls,
Toaves, stems, etc.



Step 7—Background

Use background tool to stamp down background areas, dark areas on pattern. Add decorative cuts with your swivel knife.

When all tooling and stamping have been completed, clean and polish leather with Tan-Kote. Then apply a protective coating of Neat-Lac—Tandy's special leather finisher containing essential oils and waxes to preserve and protect leather.



(No part of this or any other page may be re-printed without written permission.)



MODERN PHOTOCARVE PATTERN TRACING PATTERN 461

