




From Tony Laier's Bench:

Border Designs Using D444 & S706

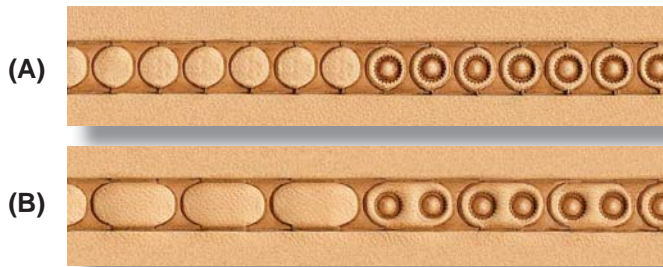

You will need stamps D444 & S706, straight edge, stylus and swivel knife. (Optional 8039-01 modeling tool or smooth beveler.) For alternate sizes use: D443 & S705 or D445 & S864.

A) First make a light #1 guideline on your cased leather at desired distance from edge of your project. Use a straight edge and stylus.



B) Measure face of tool as shown.




C) Using measurement above, scribe #2 guideline.



D) Cut guidelines with a swivel knife run along a straight edge.

Bevel inside lines with a modeling tool or smooth beveler.

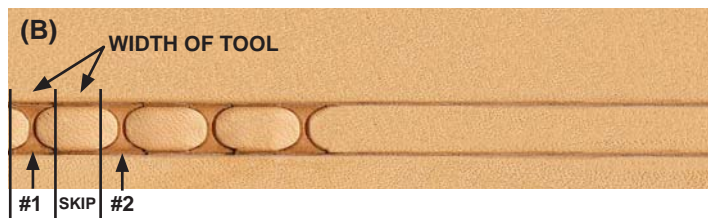

E) Begin by aligning stamp between guidelines as shown for either (A) or (B) designs.



F) Add S706 for a different look.

