


Bowling Bag Kit Pattern #4429

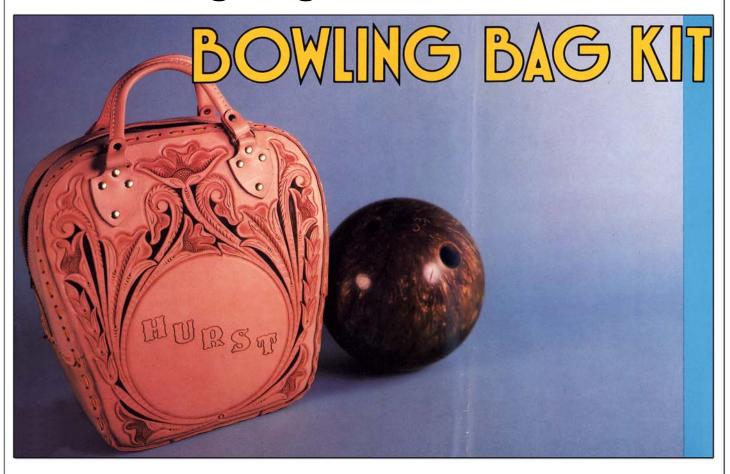









Kit Pattern Digital Download

This PDF file contains 1 (one) full Kit Pattern. The PDF has been put together to give you options when it comes to printing. Pages and patterns that have a side longer than 11 inches have been provided in two formats:

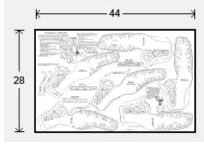

1) Full Size

If you would like to have a full size print out, take the full size pages to your local print shop and they can print it for you.

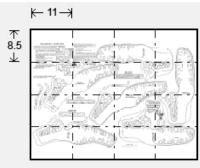


2) Tiled

The tiled pages give you the option of printing the larger patterns at home. You print the tiled pages and then assemble them to make the larger patterns.

These digitized patterns do not include any kit parts that they may mention.


Please note: When printing on a home printer, use the settings seen on the image to the right in the Page Handling area of the Adobe Reader print dialogue box. If your printer is cutting edges off, set "Page Scaling" to "Shrink to Printable Area". This will, however, decrease the size of the pattern a very small amount.

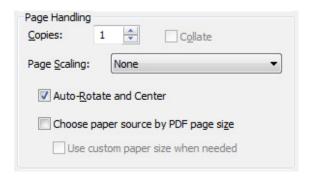


You may take this PDF file to your local print shop to have the full-size pages printed for your own personal use.

STOCK NO.4429

BOWLING

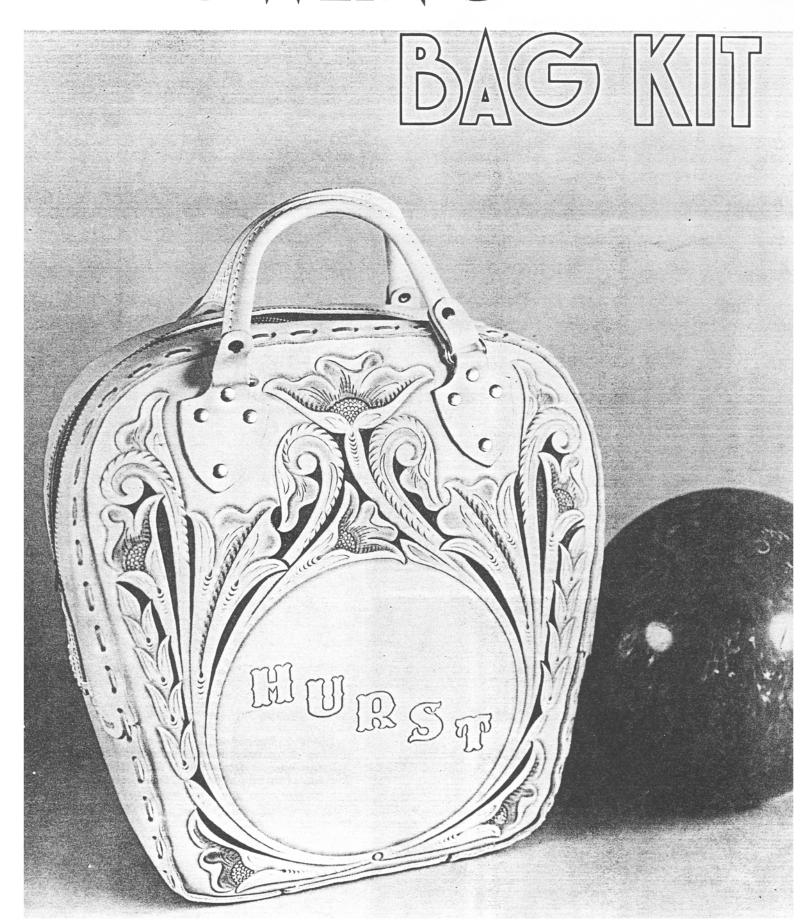

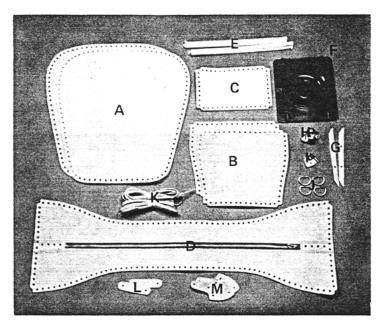

KIT PARTS:

A-Bag Front & Back B-Side Gussets


C-Bottom Gusset
D-Zipper Gusset
E-Handle Straps
F-Ball Cup
G-Bleed Knot
H-Feet

I-Metal Strap Reinforcements


J-Dee Rings

K-Latigo Lace L-Handle Tabs M-Bag Tabs

N-Rivets (not shown)

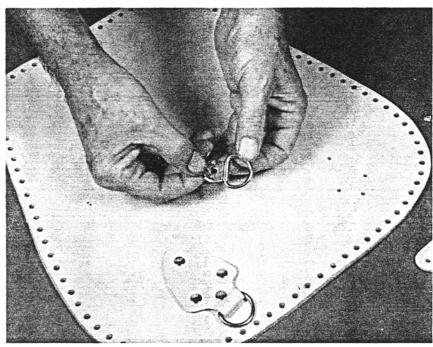


STEP 1. Slip Metal Reinforcement through Dee Rings and pinch closed.

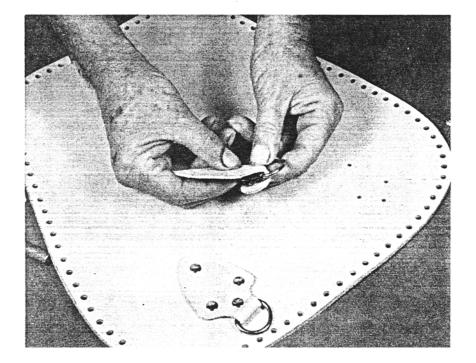


STEP 2. Slip narrow end of Bag Tab through Dee Rings (over Metal Reinforcements) and align holes in narrow end of Bag Tab on both sides of the hole in the Metal Reinforcement.


STEP 3. Align these three aligned holes over the top rivet hole in Bag Back as shown. Push long rivet stud up through all 4 holes from flesh side of Bag Back. Place rivet cap on end of stud on grain side of Bag Tab. Place assembly on firm, solid surface. Place concave end of rivet setter on rivet cap and strike setter sharply with a mallet to set rivet.

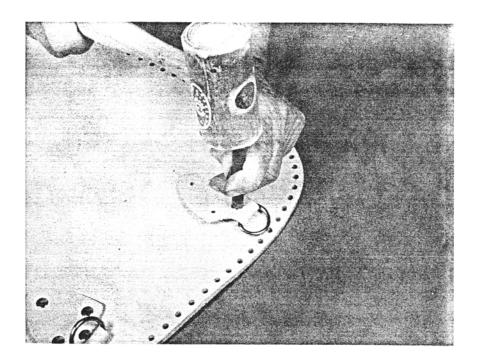


STEP 4. Using medium rivets, set rivets in other three holes in Bag Back and Bag Tab. Repeat steps 1-4 on other 3 Bag Tabs.

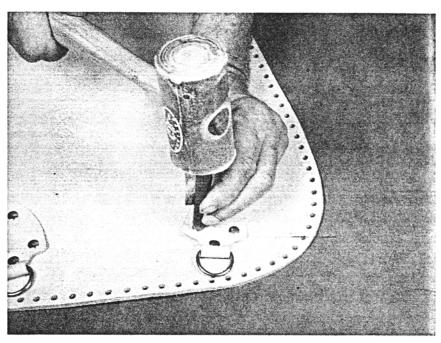


STEP 5. Using 14" of lace, begin lacing in second hole from end in Bottom Gusset. Push lace through second hole from end in Bottom Gusset from grain side, leaving about 1/2" of lace in hole. Align holes in Bottom Gusset over holes in narrow end of Side Gusset, flesh sides up. Push lace through first aligned holes in both pieces of leather.

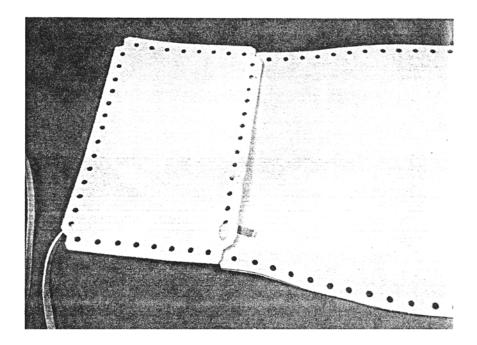


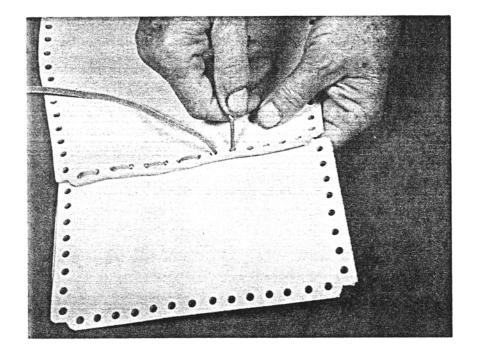

STEP 6. Come up through second pair of holes and go back down through third. Continue lacing in this manner to end hole.

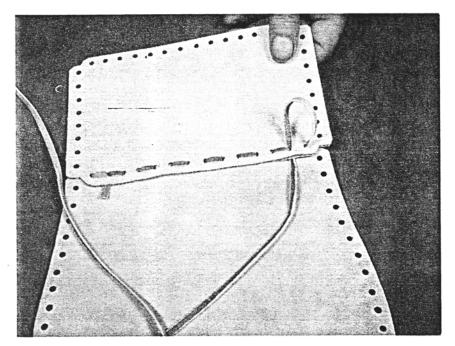



STEP 7. When you reach the end hole go back through next to last hole in Bottom Gusset only; bring lace out between the leathers and trim off. Repeat on other side of Bottom Gusset with other Side Gusset.

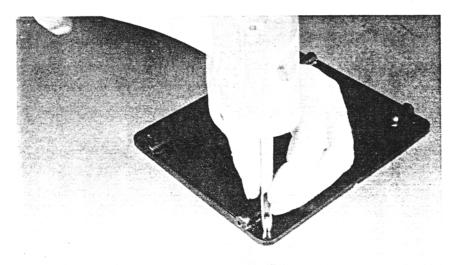


STEP 8. Measure 1/4" from corner on Ball Cup. Using #5 punch, punch a hole on all 4 corners.

STEP 9. Center Ball Cup over flesh side of Bottom and Side Gussets. Mark position of holes in Ball Cup on Gussets with pen.

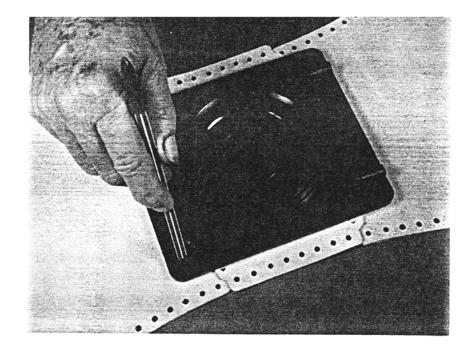


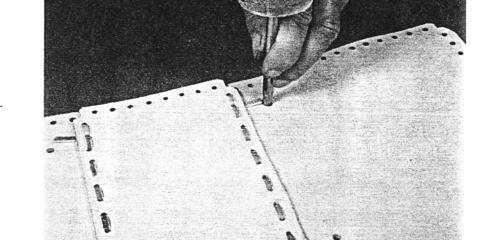


STEP 10. Using #5 punch, punch holes in Gussets at marks.

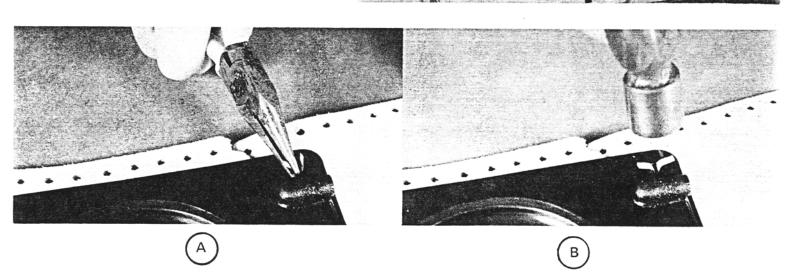


STEP 11. Align holes in Ball Cup over holes just punched in Gussets. From grain side of Gussets, insert prongs of Feet up through holes. Using pliers, bend prongs out and down over Ball Cup. Tap with hammer to flatten.

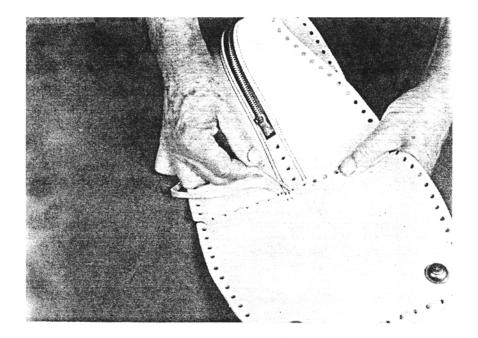

STEP 12. Using 26" of lace, stitch ends of Zipper Gusset to ends of Side Gussets. Follow instructions in step 5. Stitch to 8th hole.

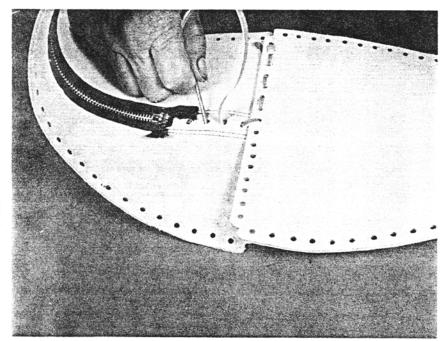


STEP 13. Now from 8th hole stitch up through 1st hole in vertical row of holes as shown. Stitch to last hole in vertical row.

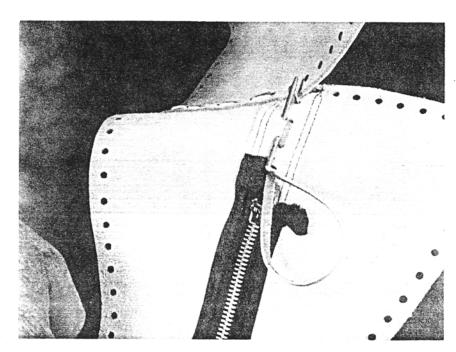


STEP 14. When you reach the last hole, stitch back through next to last hole in one layer of leather only and come out next hole in same layer of leather. Pull stitch tight and trim off.


STEP 15. Using lace left from last step, lace the remaining holes in Zipper Gusset and Side Gusset following steps 5-7. Repeat on other side of gussets.

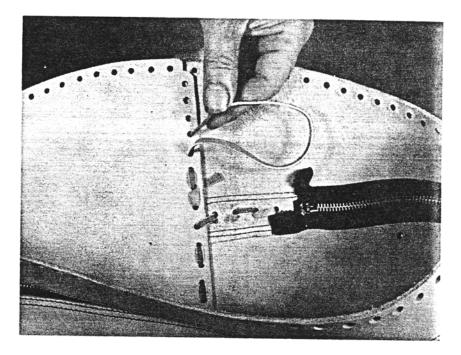


STEP 16. Mark holes on flesh sides of Front and Back of bag as shown on pattern sheet. Align the top marked hole in Bag Back under the last hole in Zipper Gusset and the bottom marked hole under the first hole in Side Gusset. Using 60" of lace, begin lacing 2 holes down from bottom marked hole. Follow steps 5-7 and stitch completely around Bag Back and Gusset Assembly.

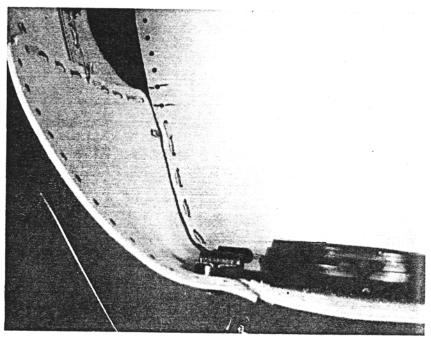


STEP 17. Following step 16, attach Bag Front to other side of Gusset.

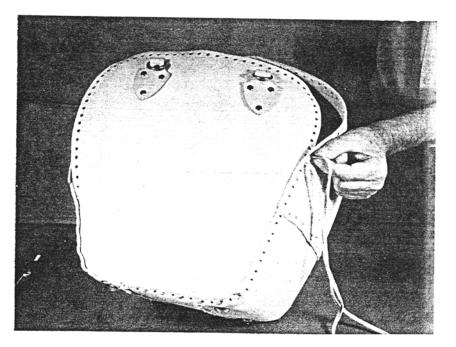


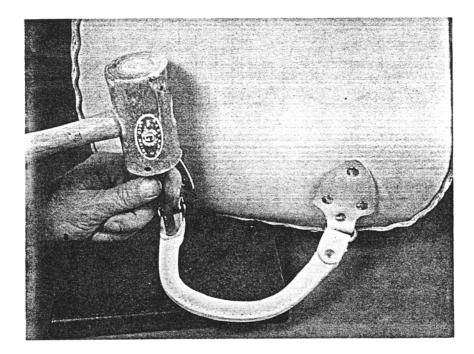


STEP 18. Insert Handle Tabs through Dee Rings and align the holes in tabs on either side of hole in end of Handle. Set rivet in hole as in step 3. Repeat on other 3 ends of Handles.

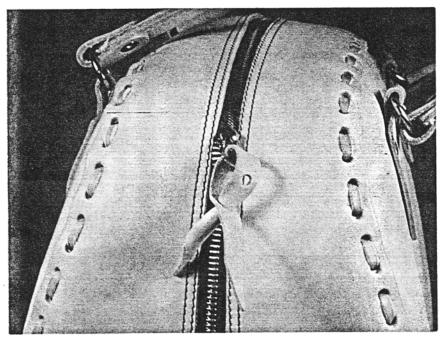



STEP 19. Thread Bleed Knot through Zipper Tab and insert one end through hole. Pull end through hole until it is tight against the Zipper Tab.

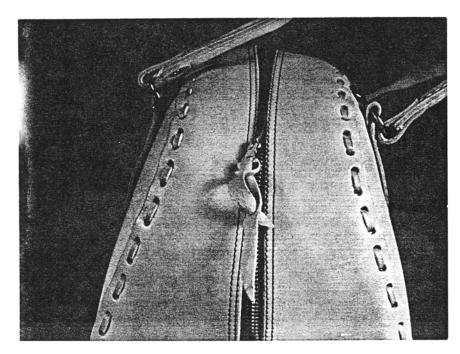



STEP 20. Insert other end through other hole in Bleed Knot and pull down tight.

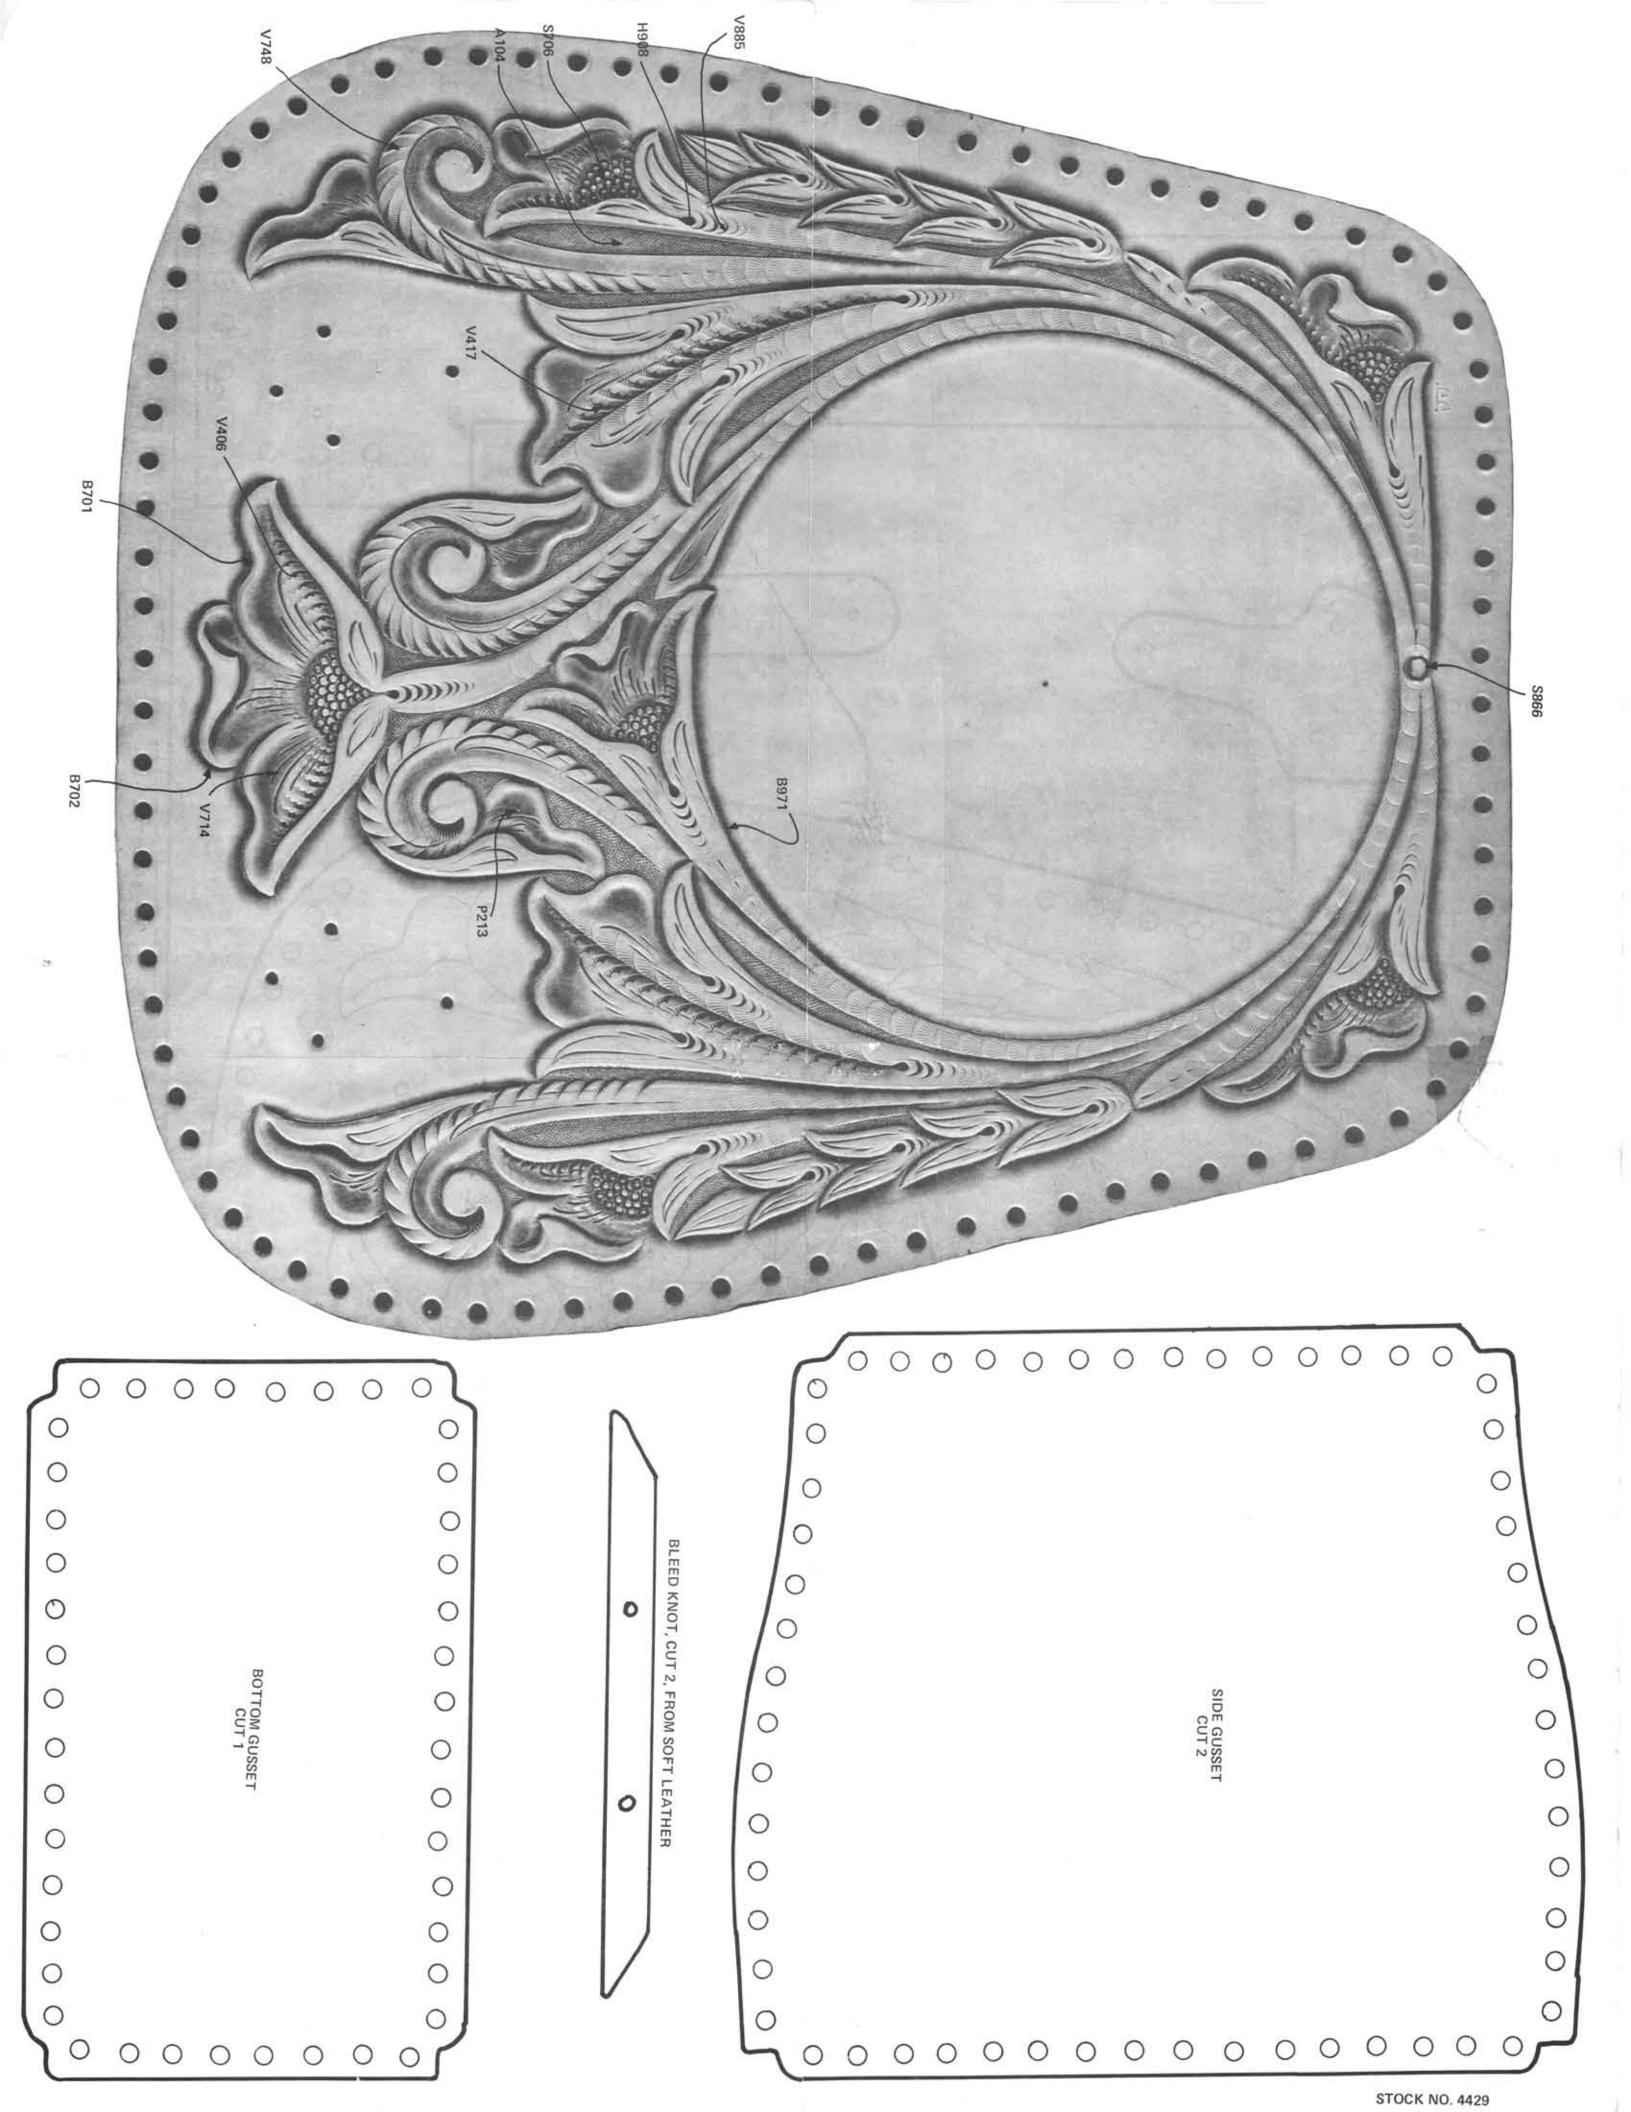


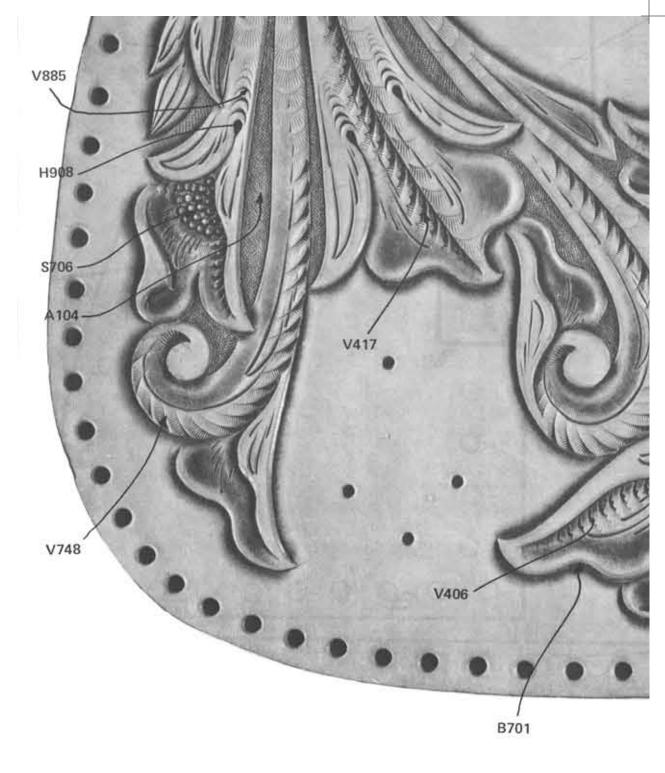


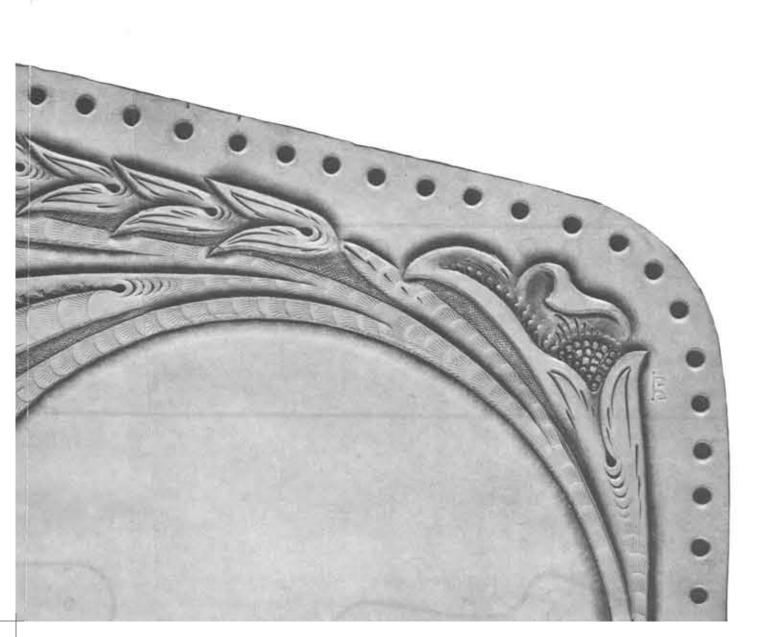

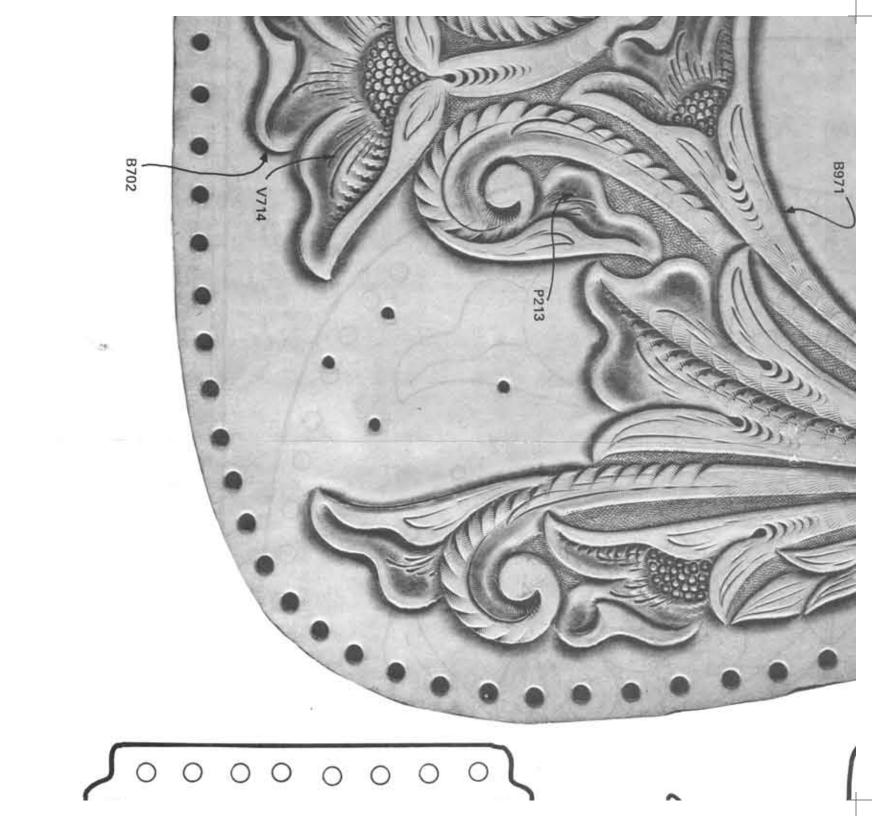

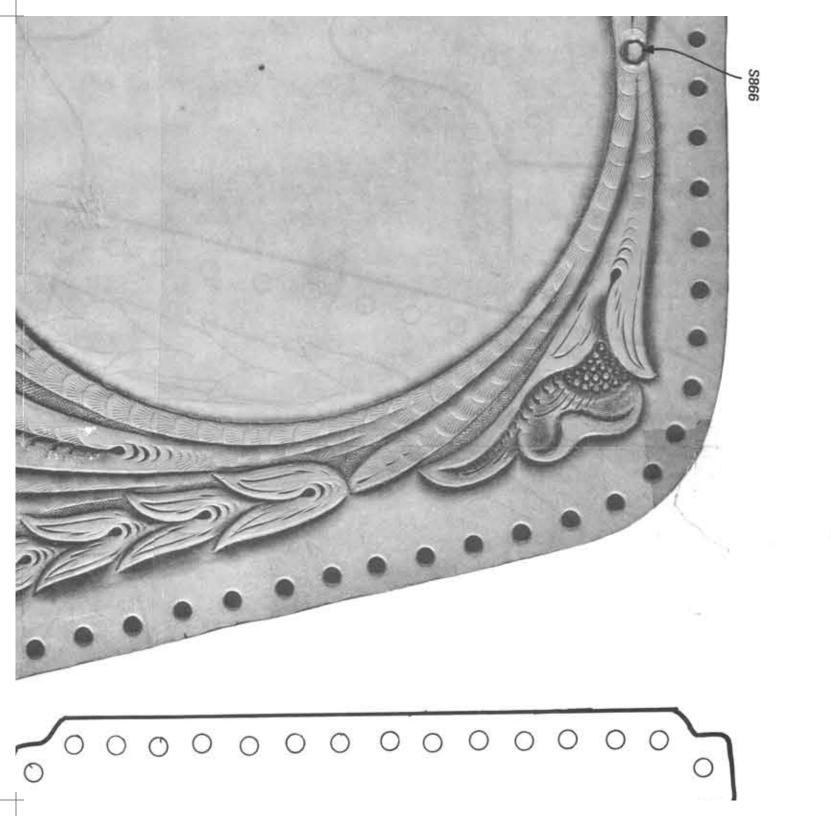

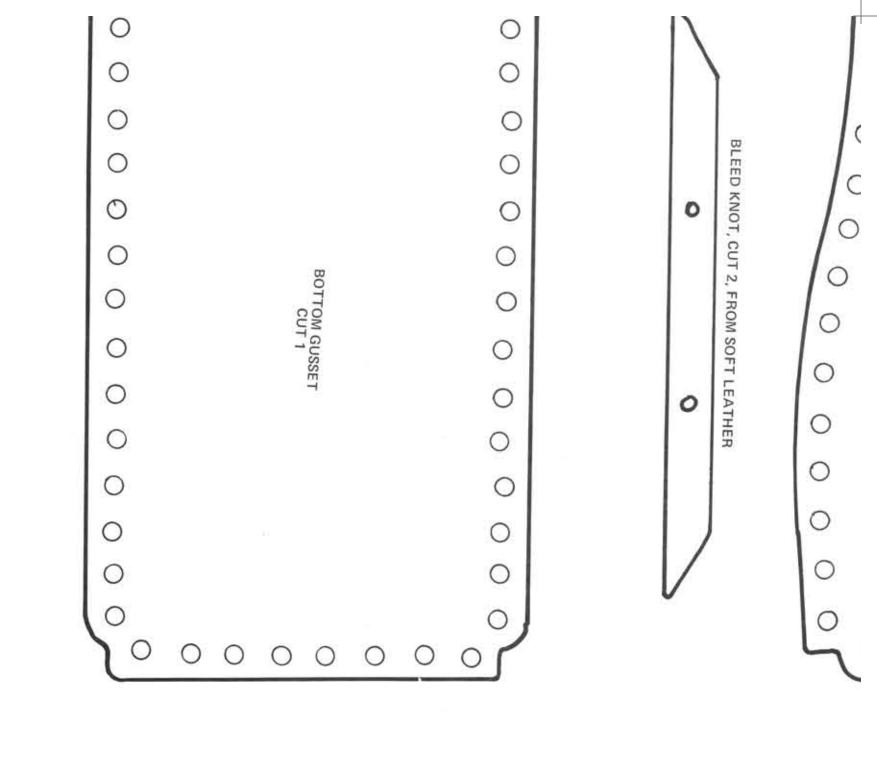

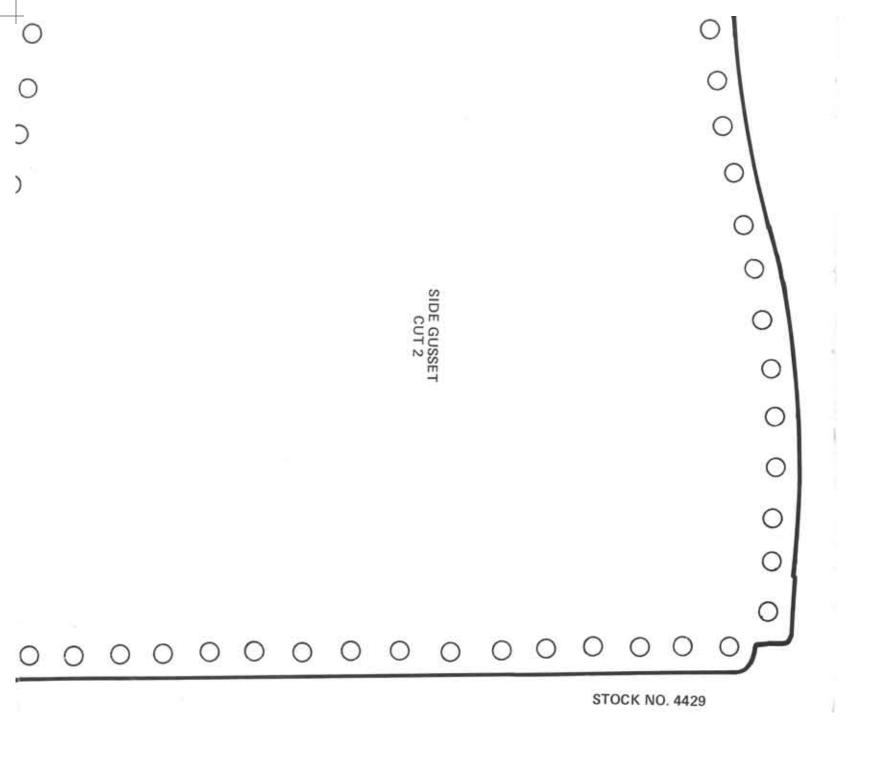



STOCK NO. 4429

