


From Tony Laier's Bench:

Geometric & Border Designs Using
D444 (D443 or D445) & D436

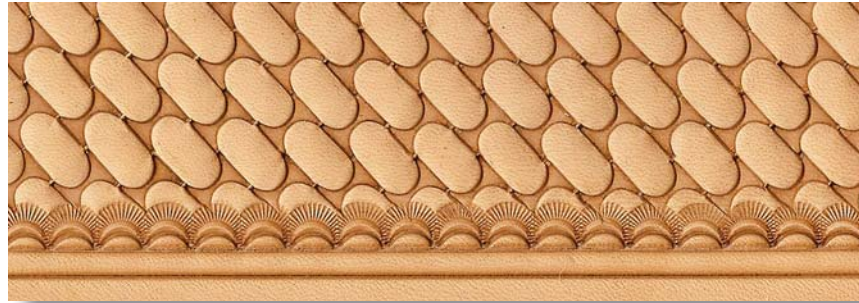

You will need stamps D444 (optional sizes D443 or D445) & D436, straight edge, stylus, modeling tool and swivel knife.

A) First make a light #1 guideline on your cased leather at desired distance from edge of your project. Use a straight edge and stylus. Then cut lines with swivel knife.

B) Scribe #2 guideline 1/8" from #1.

C) Measure scallop height of border tool D436. Scribe guideline #3 that distance from #2 guideline.



D) Scribe very light #4 guideline at an angle off line #3.

E) Begin stamping D444 with base on #4 guideline as shown.

F) Move D444 below line resting head on #4 guideline aligning it with base of first impression, as shown.

G) Add more very light guidelines through stamped D444 impression heads and bases to keep lines straight. Continue stamping until space is filled.

H) Add border stamp D436.
OPTION: For another look, found border with a modeling tool.

