


Doodle Page Digital Download

This PDF file contains 1 (one) Doodle Page. The PDF has been put together to give you options when it comes to printing. Pages and patterns that are larger than 8½x11 have been provided in two formats:



1) Full Size

If you would like to have a full size print out, take the full size pages to your local print shop and they can print it for you. All full size Doodle Pages are 11x17

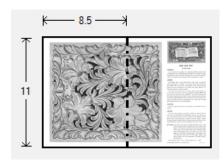

amount.


2) Tiled

The tiled pages give you the option of printing the full sized Doodle Pages at home. You print the tiled pages and then assemble them to make the larger patterns.

The Doodle Page PDF files are typically laid out like this:


Front – full sized, front – tiled, back – full sized, back – tiled (Some Doodle Pages do not have backs)

Please note: When printing on a home printer, the edges may get cut off. To avoid this, make sure "Page Scaling" is set to "Shrink to Printable Area" in the Adobe Reader print dialogue box. This will decrease the size of the Doodle Page a very small

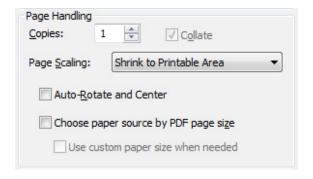


You may take this PDF file to your local print shop to have the full-size pages printed for your own personal use.


HAWAIIAN BAG ASSEMBLY INSTRUCTIONS




1. CUT GUSSET FROM 3½ TO 4 OZ. LEATHER.
GOUGE FLESH SIDE ON DOTTED LINES AND SKIVE EDGES OF
GUSSET.
CEMENT STIFFENER TO GUSSET AND FOLD EDGES OF GUSSET
AT DOTTED LINES.

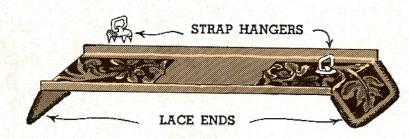


- 2. INSTALL STRAP HANGERS. SEE POSITION SHOWN ON PHOTO CARVE PATTERN.
- 3. PUNCH LACING HOLES AND LACE ENDS AS SHOWN.

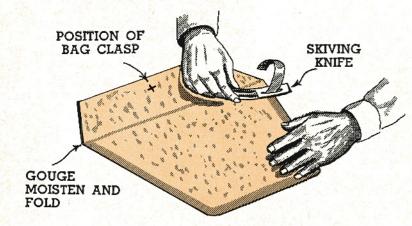


4. SKIVE LOWER SIDES AND BOTTOM EDGES AS SHOWN. INSTALL MALE PART OF BAG CLASP. SEE POSITION SHOWN ON PHOTO CARVE.

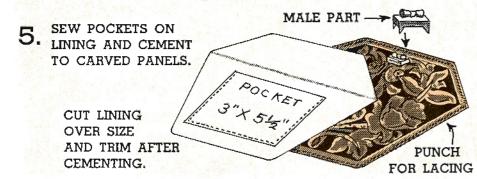


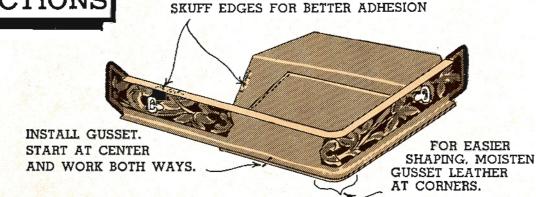


- 6. FIT GUSSET TO PANELS AND CEMENT IN PLACE. USE GREAT CARE IN FITTING.
- 7. PUNCH HOLES THROUGH GUSSET USING A BLOCK OF WOOD AS SHOWN.

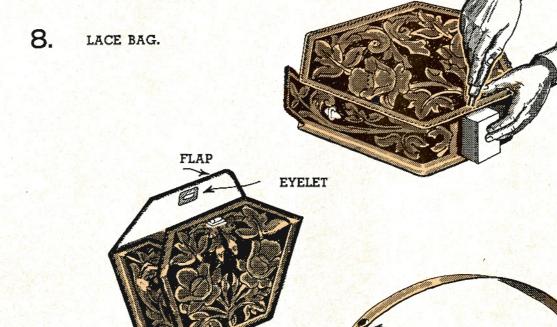

9. CLOSE BAG AND PULL DOWN FLAP. CENTER POSITION OF EYELET IS DETERMINED BY CENTER OF BAG CLASP. MARK POSITION ON FLAP AND INSTALL EYELET.



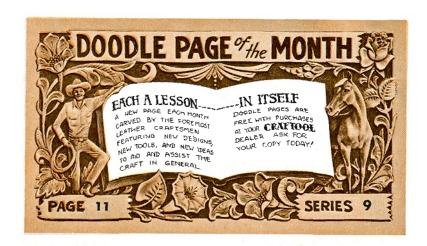




Craftool Co., 4921 Exposition Blvd. Los Angeles 16, Calif.



HAWAIIAN BAG ASSEMBLY INSTRUCTIONS



1. CUT GUSSET FROM 3½ TO 4 OZ. LEATHER.
GOUGE FLESH SIDE ON DOTTED LINES AND SKIVE EDGES OF
GUSSET.
CEMENT STIFFENER TO GUSSET AND FOLD EDGES OF GUSSET
AT DOTTED LINES.





INSTALL GUSSET. START AT CENTER

AND WORK BOTH WAYS.


SKUFF B

- 7. PUNCH HOLES THROUGH GUSS




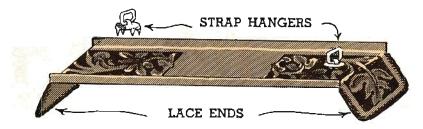


- 2. INSTALL STRAP HANGERS. SEE POSITION SHOWN ON PHOTO CARVE PATTERN.
- 3. PUNCH LACING HOLES AND LACE ENDS AS SHOWN.

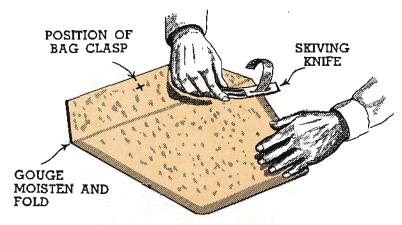


4. SKIVE LOWER SIDES AND BOTTOM EDGES AS SHOWN. INSTALL MALE PART OF BAG CLASP. SEE POSITION SHOWN ON PHOTO CARVE.

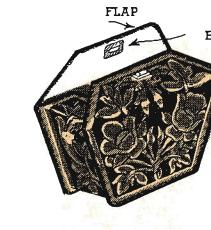

Q. CLOSE BAG AND PULL DOWN FLAP. CENTER POSITION OF EYE LET IS DETERMINED BY CENTER OF BAG CLASP. MARK POSITION ON FLAP AND INSTALL EYELET.

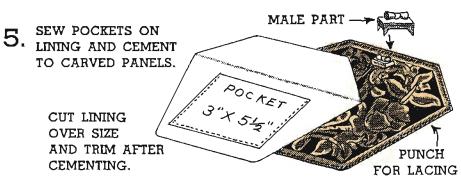



EDGES FOR BETTER ADHESION

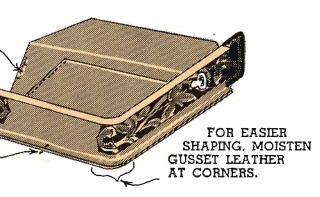

EMENT IN PLACE.



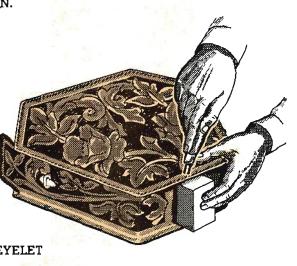

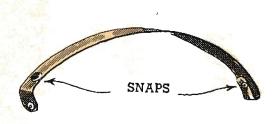

10. CUT CARRYING STRAP FROM 6 OZ. LEATHER. 3/4" x 20". INSTALL SNAPS.





Craftool Co., 4921 Exposition Blvd. Los Angeles 16, Calif.

