



Doodle Page Digital Download

This PDF file contains 1 (one) Doodle Page. The PDF has been put together to give you options when it comes to printing. Pages and patterns that are larger than 8½x11 have been provided in two formats:



1) Full Size

If you would like to have a full size print out, take the full size pages to your local print shop and they can print it for you. All full size Doodle Pages are 11x17



2) Tiled

The tiled pages give you the option of printing the full sized Doodle Pages at home. You print the tiled pages and then assemble them to make the larger patterns.

The Doodle Page PDF files are typically laid out like this:


Front – full sized, front – tiled, back – full sized, back – tiled

(Some Doodle Pages do not have backs)

Please note: When printing on a home printer, the edges may get cut off. To avoid this, make sure “Page Scaling” is set to “Shrink to Printable Area” in the Adobe Reader print dialogue box. This will decrease the size of the Doodle Page a very small amount.



You may take this PDF file to your local print shop to have the full-size pages printed for your own personal use.

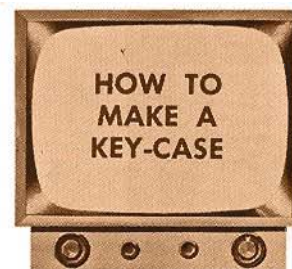

HOW TO
MAKE A
KEY-CASE

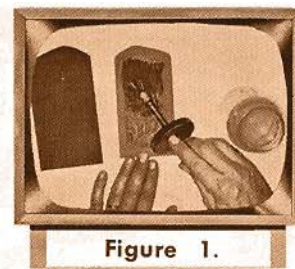


Figure 1.

APPLY CEMENT TO BACK
OF KEY-CASE BACK AND
TO SKIVER.

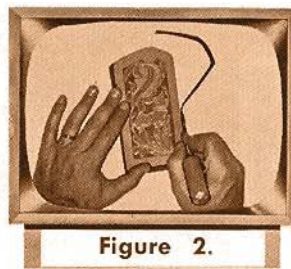


Figure 2.

TRIM SKIVER TO MATCH
THE BACK.

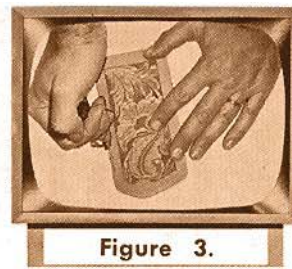


Figure 3.

MARK PUNCH LINE WITH
THE ADJUSTABLE CREASER.

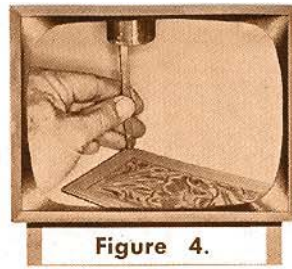


Figure 4.

USE SINGLE PRONG PUNCH
FOR CORNER HOLES.

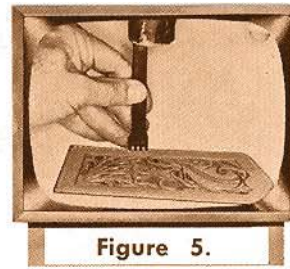


Figure 5.

USE FOUR PRONG PUNCH
FOR STRAIGHT PUNCHING.



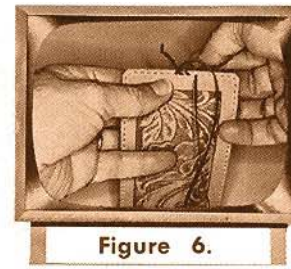


Figure 6.

LACE COMPLETE.

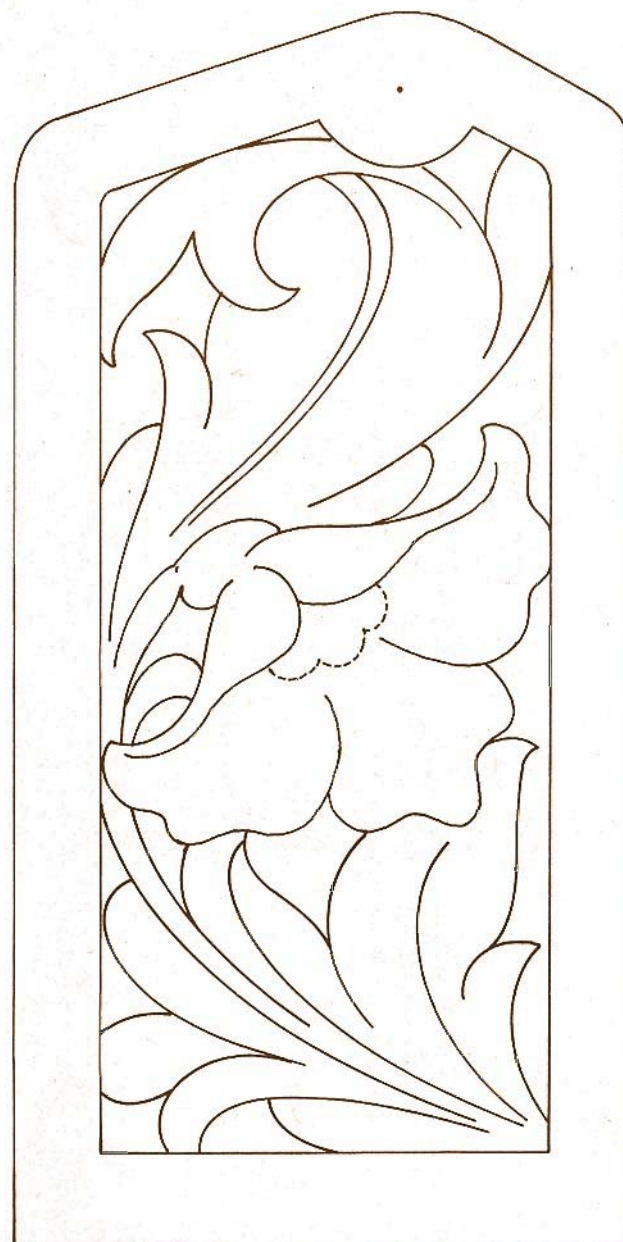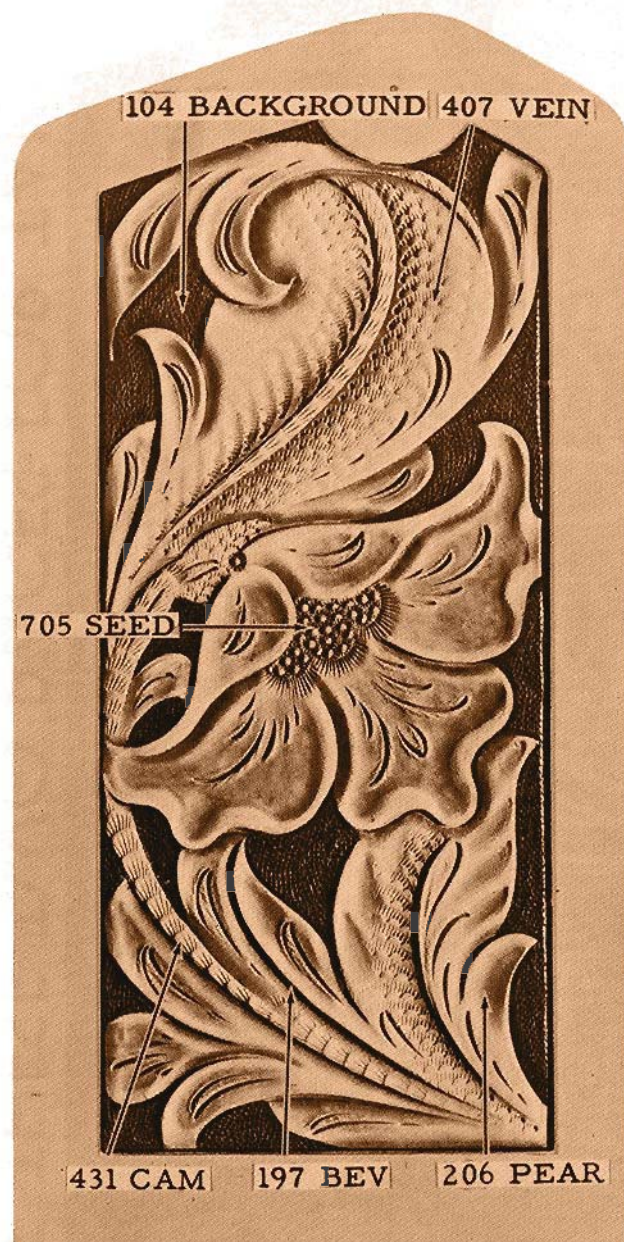

HOW TO MAKE A KEYCASE STEP BY STEP

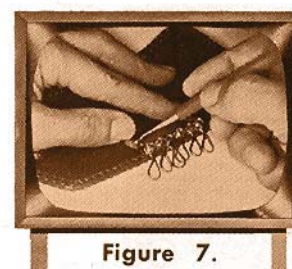


Figure 7.

POSITION KEY-TAINER &
MARK HOLES FOR EYELETS.

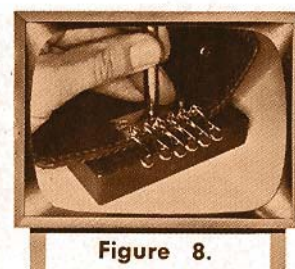


Figure 8.

INSTALL AND SET EYELETS.

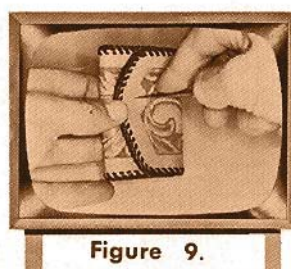


Figure 9.

FOLD KEY CASE & MARK
POSITION OF BOTH SNAP
HOLES.

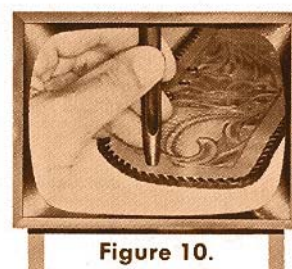


Figure 10.

PUNCH BOTH SNAP HOLES.

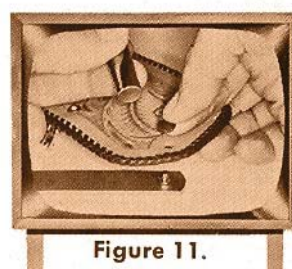


Figure 11.

SET SOCKET AND BUTTON
OF SNAP.

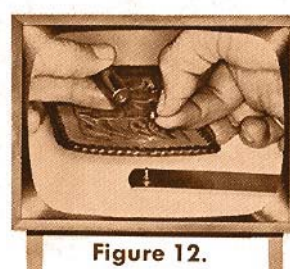


Figure 12.

SET STUD AND EYELET OF
SNAP.


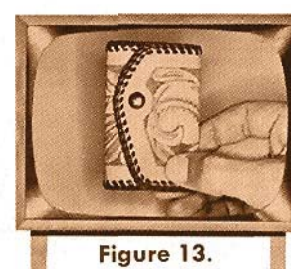


Figure 13.

THIS IS THE FINISHED KEY
CASE.

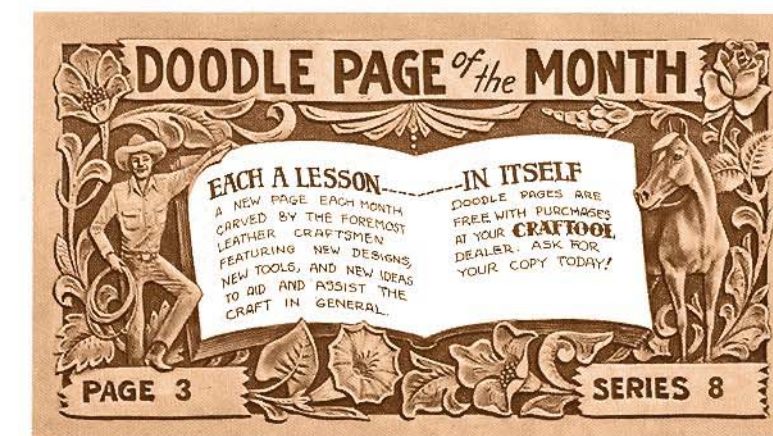

HOW TO ASSEMBLE A KEYCASE

This month's Doodle Page is the third of a series of four step by step Doodle Pages designed at the request of Craftool Dealers and Craft Teachers who have suggested them.

This Doodle Page features a design which can be completed with only 7 Craftools and is a matching design for the Billfold which was featured on Page 1 of this Series.

After the tracing and carving steps as shown on Page 1 are completed follow the steps as shown.

Step 1. Shows cementing the skiver to the flesh side. Apply the cement evenly and when tacky place the carved leather in the center of the skiver which has been cut slightly oversize. If you happen to get some cement on the surface of the leather it can be removed by using a pencil eraser to rub it into a ball.

Step 2. Use a sharp knife to trim off the excess skiver, use a piece of cardboard or linoleum to cut on, not the marble!

Step 3. Use Craftool Creaser Size 5 to make the guide line for punching the lacing holes. If you use the angle lacing punch, which permits punching closer to the edge of the leather use No. 3 Creaser.

Step 4. Use the single prong lacing punch to punch the corner holes. This is clearly shown on Page 13, of Lucky 7 Instruction Book. Incidentally did you know that Lucky 7 was written for the self taught student but that it has been accepted as the text book in schools from Coast to Coast?

Step 5. Shows the punching of the holes. Keep on the line and punch straight down.

Step 6. Only the start of the lacing operation is shown due to lack of space. See page 14 and 15 of Lucky 7 for 16 photos on the complete lacing operation.

Step 7 and 8. Shows how to install the key-tainer using the Craftool #55 Eyelet Setter.

Steps 9, 10, 11, 12. Show how to mark the position and how to install the snaps. Use punch #3 for the eyelet and #8 for the socket. Put the eyelet in the hole, the stud is placed on the top of the eyelet and set with Craftool No. 51 Snapsetter. Next, the socket is put in the hole (made with the #8 punch), the button is placed on top of the socket and set with the large concave tool in the Craftool No. 51 Snap Setting Kit.

TIP

If you want a medium sized hand bag with plenty of room order Craftaid 2985. It will really be a hit! See it on the back of this page.

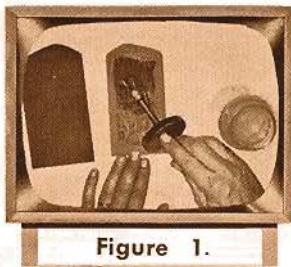
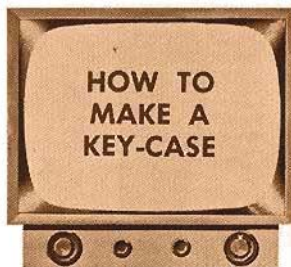


Figure 1.

APPLY CEMENT TO BACK OF KEY-CASE BACK AND TO SKIVER.

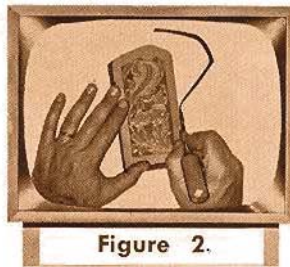


Figure 2.

TRIM SKIVER TO MATCH THE BACK.

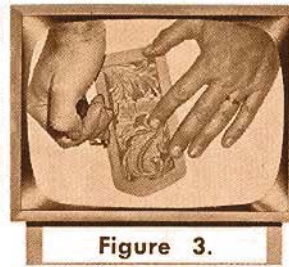


Figure 3.

MARK PUNCH LINE WITH THE ADJUSTABLE CREASER.

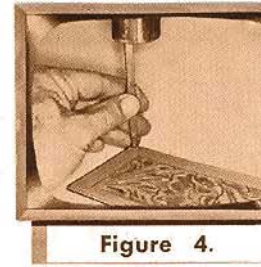


Figure 4.

USE SINGLE PRONG PUNCH FOR CORNER HOLES.

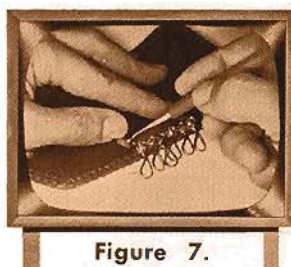
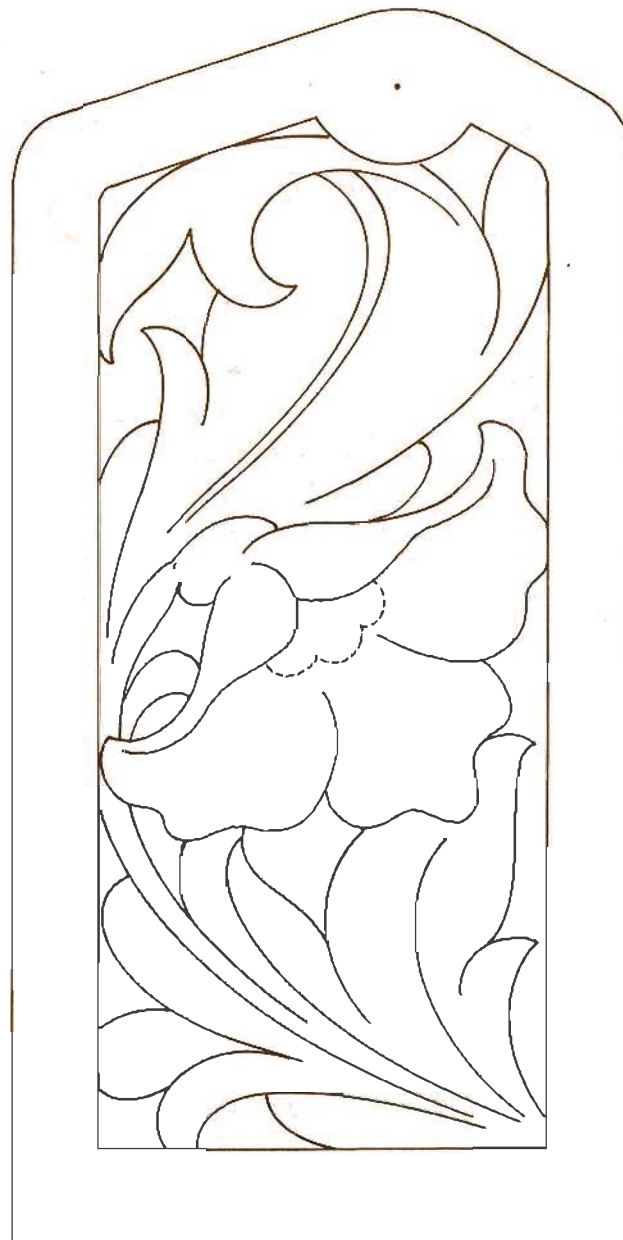


Figure 7.

POSITION KEY-TAINER & MARK HOLES FOR EYELETS.

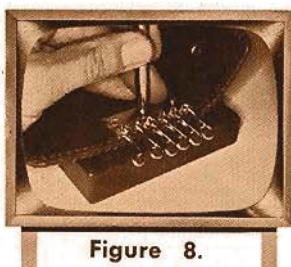


Figure 8.

INSTALL AND SET EYELETS.

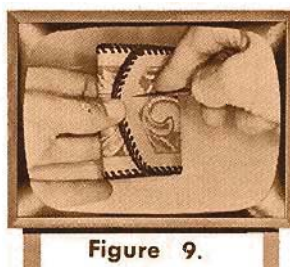


Figure 9.

FOLD KEY CASE & MARK POSITION OF BOTH SNAP HOLES.

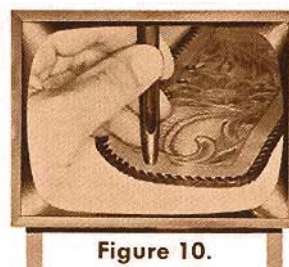


Figure 10.

PUNCH BOTH SNAP HOLES.

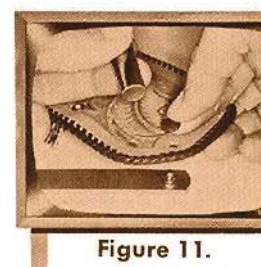


Figure 11.

SET SOCKET AND BUTTON OF SNAP.

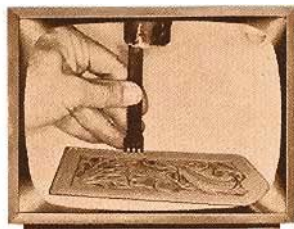


Figure 5.

USE FOUR PRONG PUNCH FOR STRAIGHT PUNCHING.



Figure 6.

LACE COMPLETE.

HOW TO MAKE A KEYCASE

STEP BY STEP

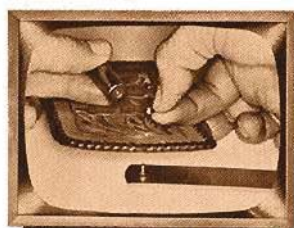


Figure 12.

SET STUD AND EYELET OF SNAP.


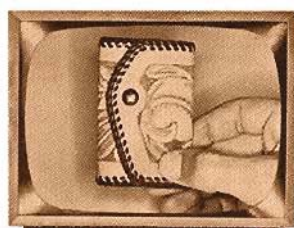


Figure 13.

THIS IS THE FINISHED KEY CASE.

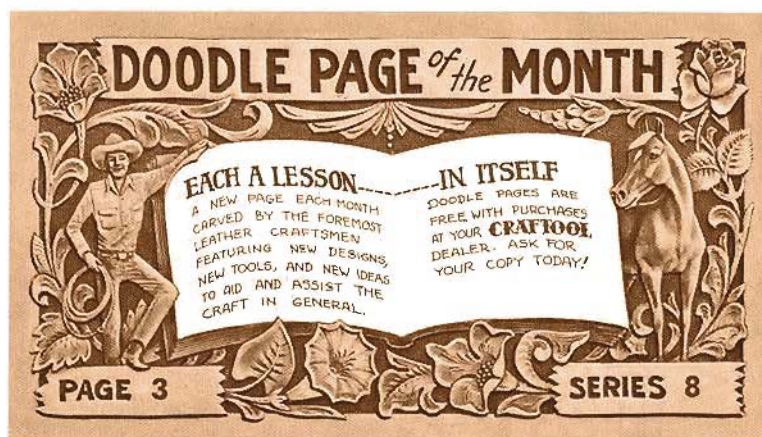

HOW TO ASSEMBLE A KEYCASE

This month's Doodle Page is the third of a series of four step by step Doodle Pages designed at the request of Craftool Dealers and Craft Teachers who have suggested them.

This Doodle Page features a design which can be completed with only 7 Craftools and is a matching design for the Billfold which was featured on Page 1 of this Series.

After the tracing and carving steps as shown on Page 1 are completed follow the steps as shown.

Step 1. Shows cementing the skiver to the flesh side. Apply the cement evenly and when tacky place the carved leather in the center of the skiver which has been cut slightly oversize. If you happen to get some cement on the surface of the leather it can be removed by using a pencil eraser to rub it into a ball.

Step 2. Use a sharp knife to trim off the excess skiver, use a piece of cardboard or linoleum to cut on, not the marble!

Step 3. Use Craftool Creaser Size 5 to make the guide line for punching the lacing holes. If you use the angle lacing punch, which permits punching closer to the edge of the leather use No. 3 Creaser.

Step 4. Use the single prong lacing punch to punch the corner holes. This is clearly shown on Page 13, of Lucky 7 Instruction Book. Incidentally did you know that Lucky 7 was written for the self taught student but that it has been accepted as the text book in schools from Coast to Coast?

Step 5. Shows the punching of the holes. Keep on the line and punch straight down.

Step 6. Only the start of the lacing operation is shown due to lack of space. See page 14 and 15 of Lucky 7 for 16 photos on the complete lacing operation.

Step 7 and 8. Shows how to install the key-tainer using the Craftool #55 Eyelet Setter.

Steps 9, 10, 11, 12. Show how to mark the position and how to install the snaps. Use punch #3 for the eyelet and #8 for the socket. Put the eyelet in the hole, the stud is placed on the top of the eyelet and set with Craftool No. 51 Snapsetter. Next, the socket is put in the hole (made with the #8 punch), the button is placed on top of the socket and set with the large concaved tool in the Craftool No. 51 Snap Setting Kit.

TIP

If you want a medium sized hand bag with plenty of room order Craftaid 2985. It will really be a hit! See it on the back of this page.