


HI-TECH LEATHER SPLITTER COVER

Design by George Hurst
Pattern is reproduced at 100%


MAIN BODY
CUT ONE FROM 6/7 OZ. VEGETABLE TANNED COWHIDE

GOUGE LINE

GOUGE LINE

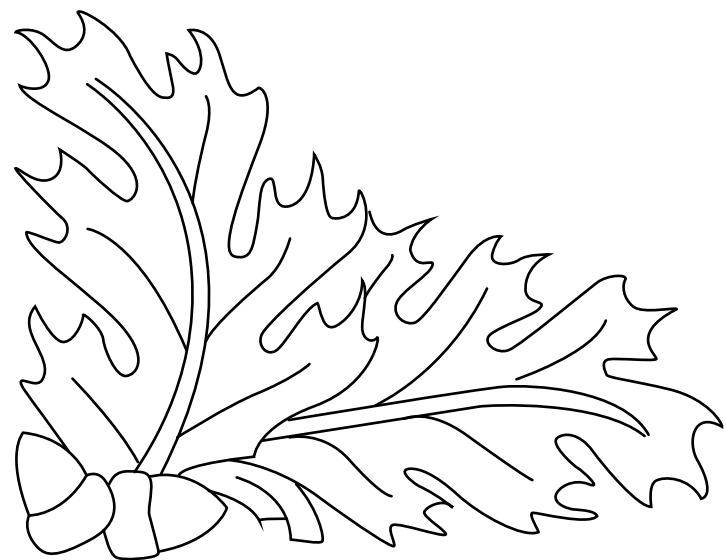

GOUGE LINE

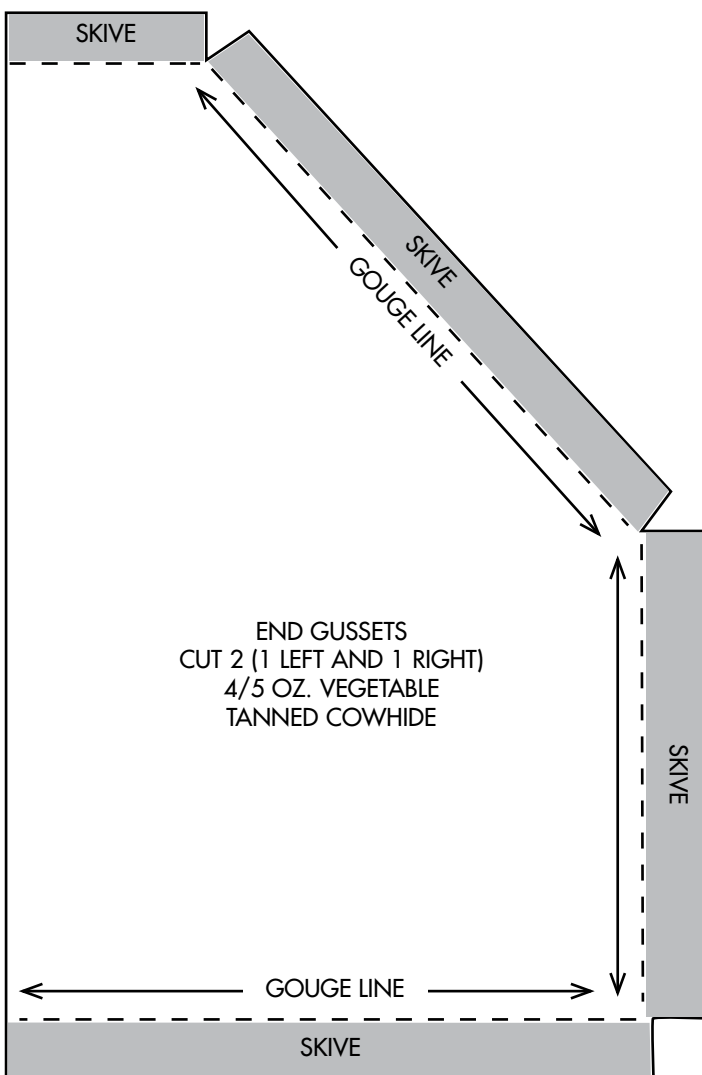

This is a 15 minute instructional video on how to custom make a leather safety cover for the Craftool® Hi-Tech Leather Splitter. This cover will add good looks to your leather shop as well.

Running Time: 15:00 minutes

Products Used:

- 9038-03 6/7 oz. European Single Bends
- 9038-01 4/5 oz. European Single Bends
- 9072-00 Bag Stiffener
- 3608-00 Steel Square
- 3903-00 Angled Utility Knife
- 3608-11 Adjustable "V" Gouge
- 88080-00 French Edge Skiver
- 3465-00 Professional Cutting Board
- 88052-00 Hand Chisel Pliers
- 88040-00 4-Prong Lacing Chisel
- 3607-00 Wing Divider
- 1191-13 #000 Harness Needles
- 11207-12 Waxed Linen Thread
- 2532-01 Eco-Flo™ Contact Cement
- 3443-00 Small Daubers
- 8077-03 Edge Beveler
- 8121-00 Edge Slicker
- 2532-01 Eco-Flo Edge Dressing Brown
- 3300-03 Rawhide Mallet
- 8039-01 Tracing Stylus
- 8117-01 Pointed Bone Creaser



Visit www.tandy Leather Factory.com for all the supplies needed to complete this project.
Visit www.LeadercraftLibrary.com for more patterns and projects.


©2013 Tandy Leather Factory. All rights reserved.

TLF_LEATHER SPLITTER COVER_0613




Digital Downloads

This PDF package has been put together to give you options when it comes to printing. Some PDF file downloads may contain some documents larger than an 8-1/2" x 11" image. Pages and patterns that are larger than 8½x11 have been provided in two formats:

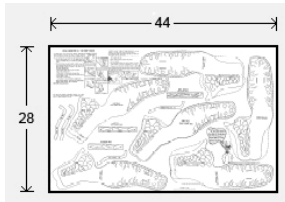

Full Size: If you would like to have a full size print out, take the full size pages to your local print shop and they can print it for you.

Tiled: The tiled pages give you the option of printing the larger patterns at home. You print the tiled pages and then assemble them to make the larger patterns.

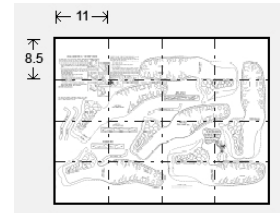


Pattern PDF files are typically laid out as follows: Cover (if applicable), instructions sheets (if applicable), pattern 1 – full sized, pattern 1 – tiled, pattern 2 – full sized, pattern 2 – tiled, pattern 3 – full sized, pattern 3 – tiled. ...Etc.

Doodle Page PDF files are typically laid out as follows: Front – full sized, front – tiled, back – full sized, back – tiled (Some Doodle Pages do not have backs).

Craftaid PDF files contain 1 (one) full Craftaid pattern or Craftaid pattern pack that has been converted into a tracing pattern. All pages in the PDF are full sized. This means that you may have to take the PDF to a print shop for certain oversized Craftaid patterns if your home printer cannot print the larger pages. **NOTE: These digitized patterns do not include any of the physical plastic templates (Craftaids) that may be mentioned, nor does the purchase of this PDF file imply a promise to receive any physical plastic templates (Craftaids).**

NOTE: Digital kit patterns do not include any kit parts that they may reference.

Please note: When printing on a home printer, use the settings seen on the image to the right in the Page Handling area of the Adobe Reader print dialogue box. If your printer is cutting edges off, set "Page Scaling" to "Shrink to Printable Area". This will, however, decrease the size of the pattern a very small amount.

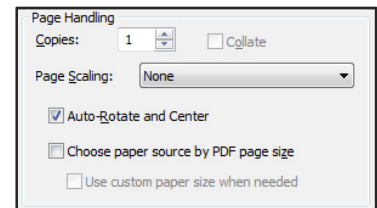

NOTE: Some patterns may reference tools, and other items no longer available.

NOTE: You may take this PDF file to your local print shop to have the full-size pages printed for your own personal use.

This premium has been published by Tandy Leather Factory, 1900 South East Loop 820, Ft. Worth, TX 76140. Copyright © 2011 by Tandy Leather Factory, all rights reserved. The contents of this publication may not be reproduced either in whole or in part without the consent of the copyright owner.

Please respect the copyright by not forwarding or distributing this document.

HI-TECH L

Design by G
Pattern is repro

MAIN BODY
CUT ONE FROM 6/7 OZ. VEGETABLE TANNED COWHIDE

GOUGE LINE

SKIVE

LEATHER SPLITTER COVER


George Hurst
produced at 100%



This is a 15 minute instructional video on how to custom make a leather safety cover for the Craftool® Hi-Tech Leather Splitter. This cover will add good looks to your leather shop as well.


Running Time: 15:00 minutes

GOUGE LINE

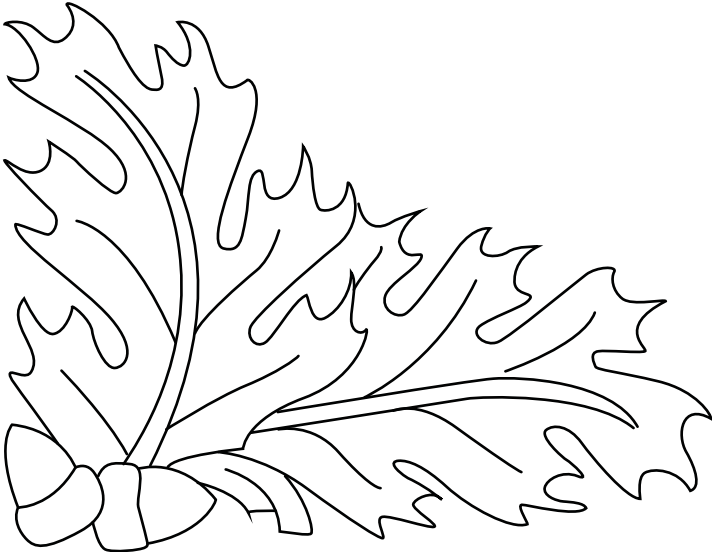

GOUGE LINE



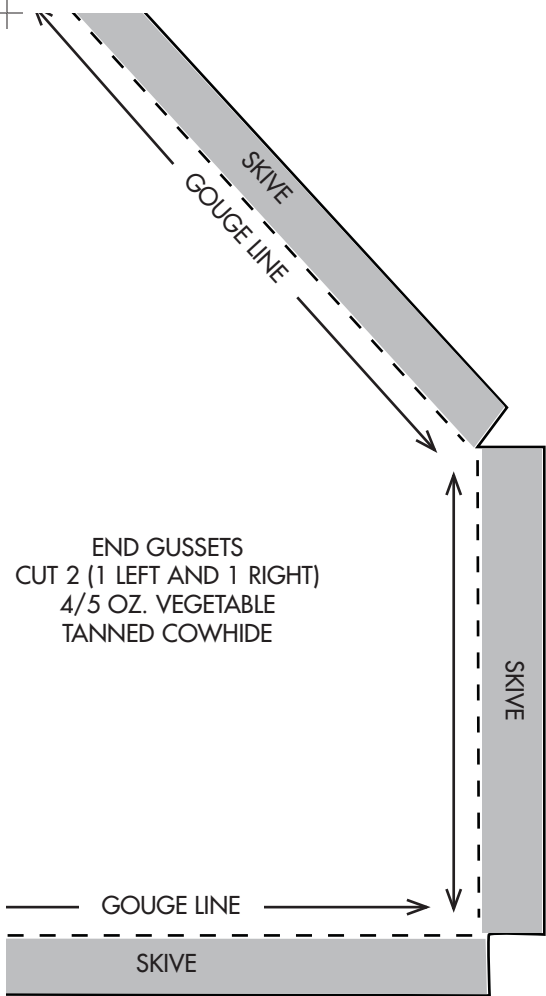

Products Used:

- 9038-03 6/7 oz. European Single Bends
- 9038-01 4/5 oz. European Single Bends
- 9072-00 Bag Stiffener
- 3608-00 Steel Square
- 3903-00 Angled Utility Knife
- 3608-11 Adjustable "V" Gouge
- 88080-00 French Edge Skiver
- 3465-00 Professional Cutting Board
- 88052-00 Hand Chisel Pliers
- 88040-00 4-Prong Lacing Chisel
- 3607-00 Wing Divider
- 1191-13 #000 Harness Needles
- 11207-12 Waxed Linen Thread
- 2532-01 Eco-Flo™ Contact Cement
- 3443-00 Small Daubers
- 8077-03 Edge Beveler
- 8121-00 Edge Slicker
- 2532-01 Eco-Flo Edge Dressing Brown
- 3300-03 Rawhide Mallet
- 8039-01 Tracing Stylus
- 8117-01 Pointed Bone Creaser



Visit www.tandy-leatherfactory.com for all the supplies needed to complete this project.
 Visit www.LeadercraftLibrary.com for more patterns and projects.

©2013 Tandy Leather Factory. All rights reserved.

TLF_LEATHER SPLITTER COVER_0613