


TV GUIDE COVER

STOCK NO. 4141

KIT CONTAINS:
Pre-cut, Pre-punched
leather cover
Suede lacing

YOU WILL NEED:
Tools for the design

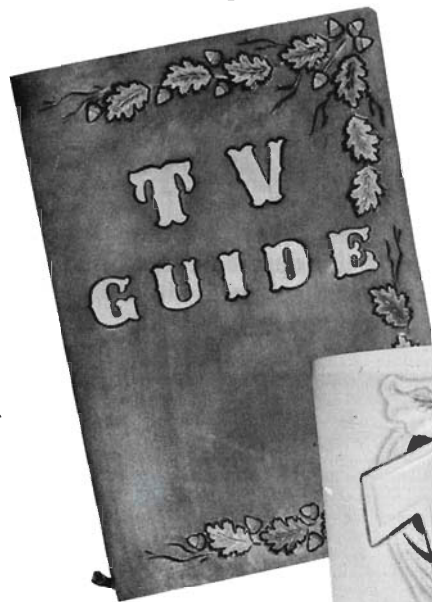


**tandy**
LEATHER COMPANY®


Est. 1919
**TANDY CRAFTS**

Printed in U.S.A.


DO ALL TOOLING AND DYEING BEFORE ASSEMBLY!

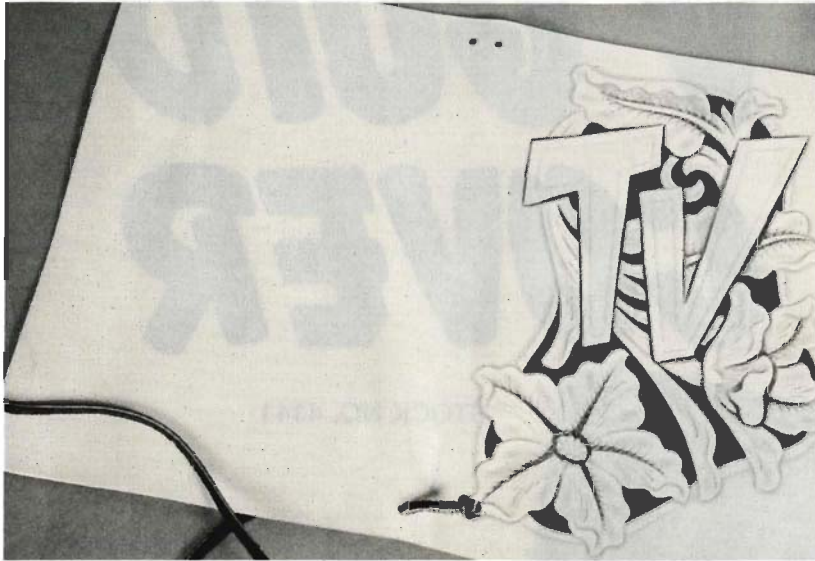


STEP 1. Tie a knot in one end of the lacing and point the other end. From the grain side of the leather, push the pointed end of the lacing through the bottom hole. Pull lacing through the hole until the knot is against the leather.

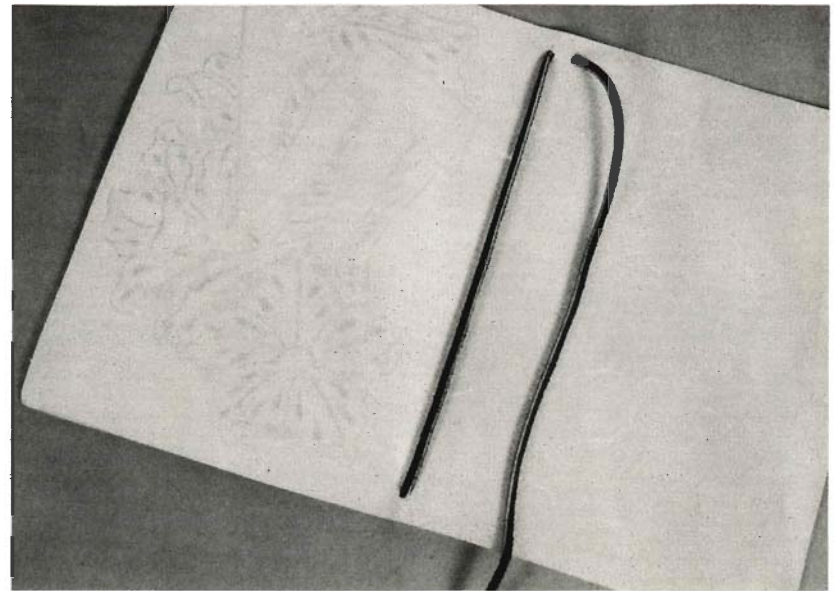


STEP 3. From the grain side of the leather, push the pointed end of the lacing through the last hole and pull all the way through the hole. This end forms the bookmark.

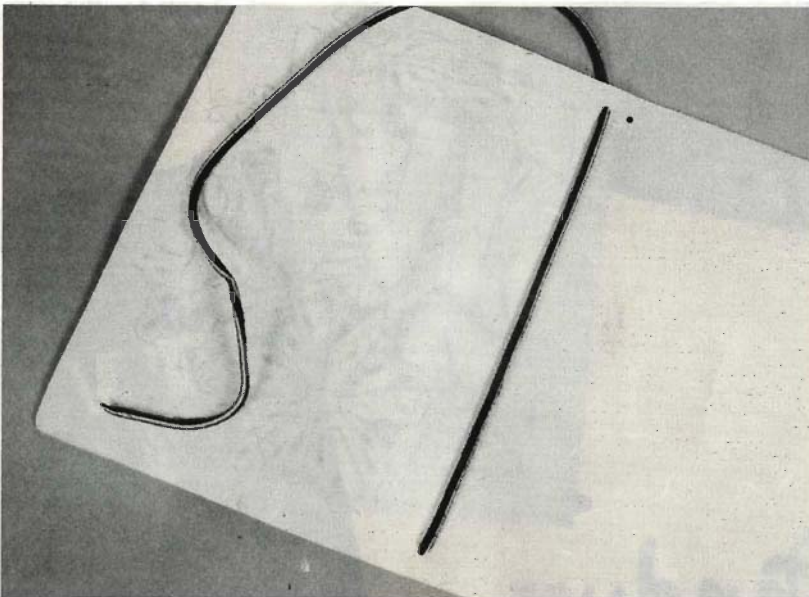

STEP 2. From the flesh side of the leather, push the pointed end of the lacing through the hole directly above the bottom hole. Pull the lacing until it lies flat between the holes.

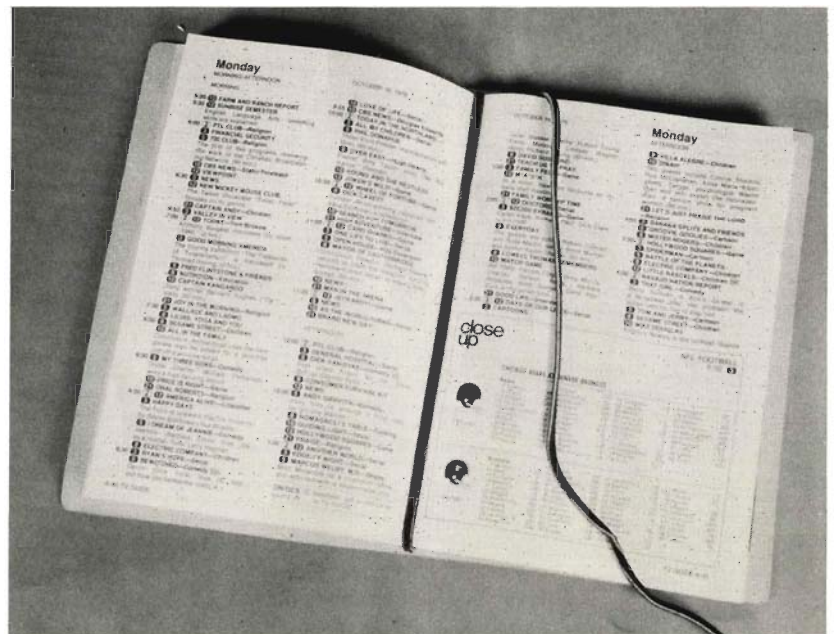

STEP 4. Locate the center of the T V GUIDE and slip half of the book under the lacing between the top and bottom holes.

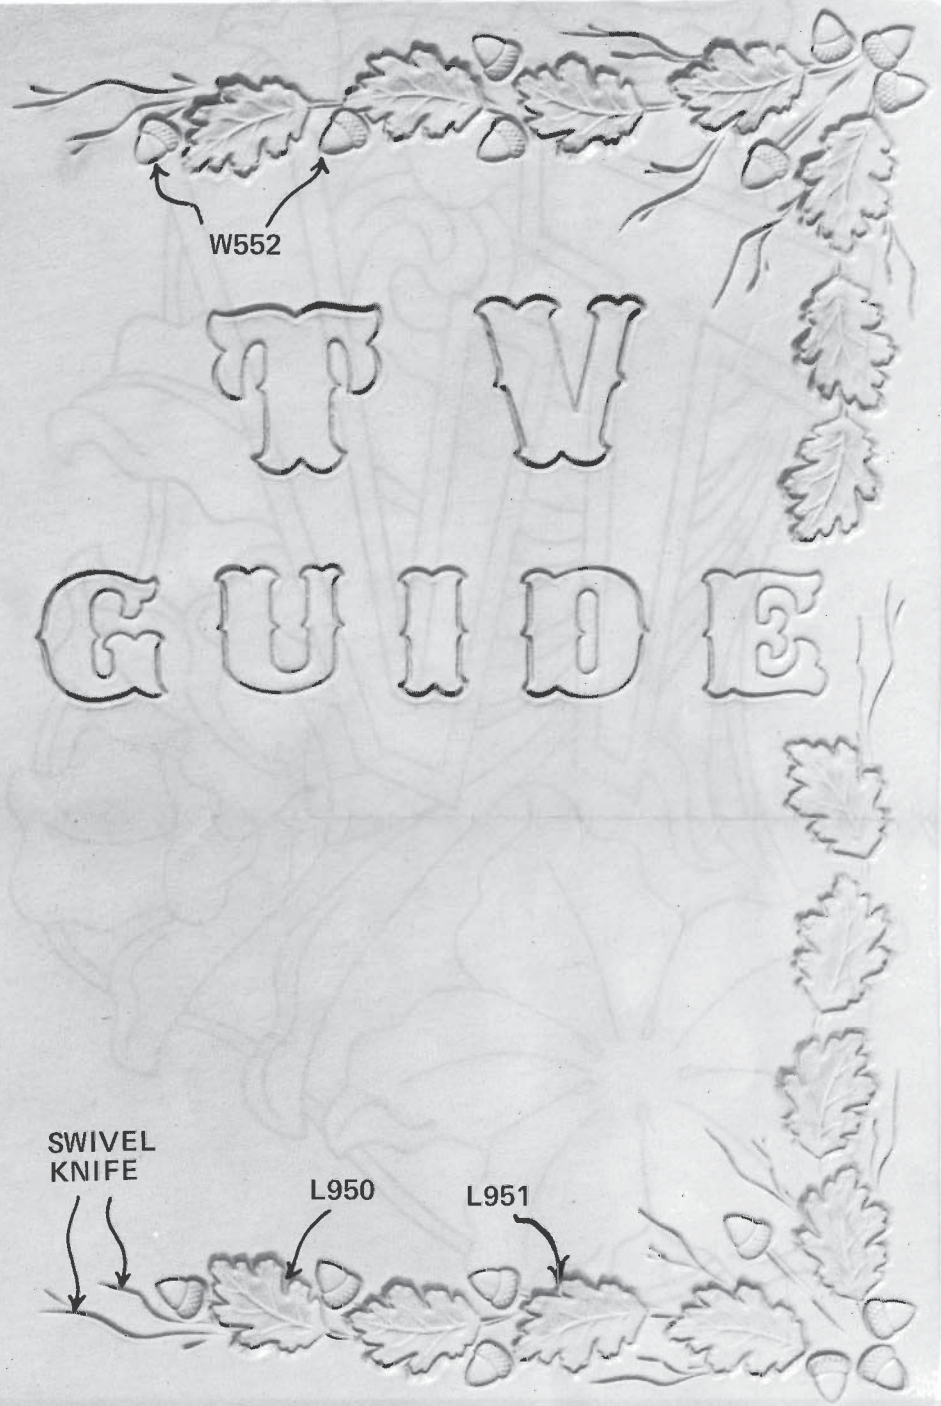


SWIVEL KNIFE

CRAFTOOL SWIVEL KNIFE

BASKET STAMP No. X511

BORDER STAMP No. D436

CUT AND BEVEL INSIDE THIS LINE BEFORE USING THE BASKET OR BORDER STAMPS.

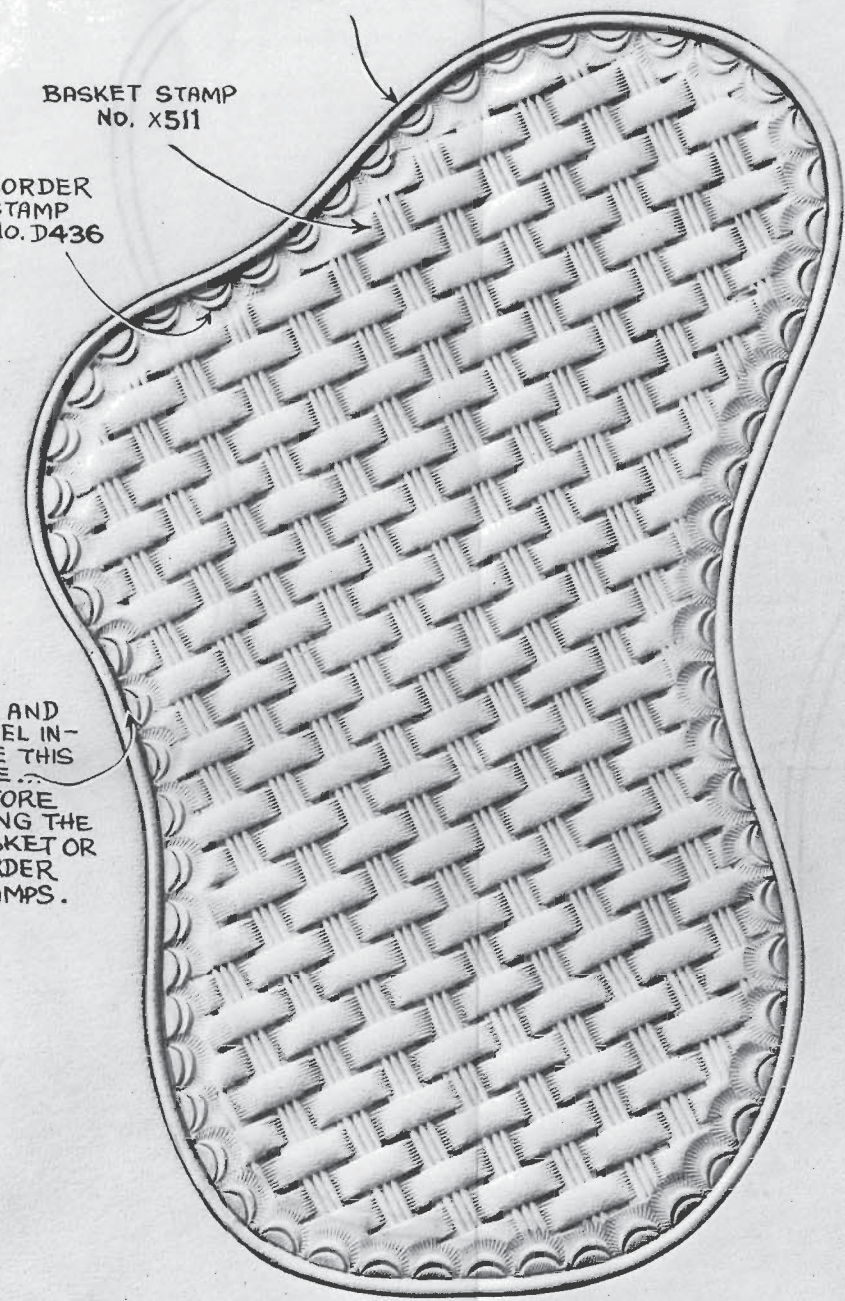

AL STOHLMAN



