

Trucker's Log Book Cover Kit


STOCK NO. 4469



KIT CONTAINS:
Pre-Cut, Pre-Punched
Leather Parts
Optional Snap Tab
Durable Dot Snap
Waxed Thread & Needle
Patterns & Instructions

YOU WILL NEED:
Craftsman Cement
Rubber Cement
No. 7058 Durable Dot Setter (optional)
No. 1804 Anvil (optional)
No. 2 Mini Punch (optional)
No. 0 Mini Punch (optional)


Distributed by Tandy Leather Company
A Division of TANDYCRAFTS INC.
Fort Worth, Texas 76107

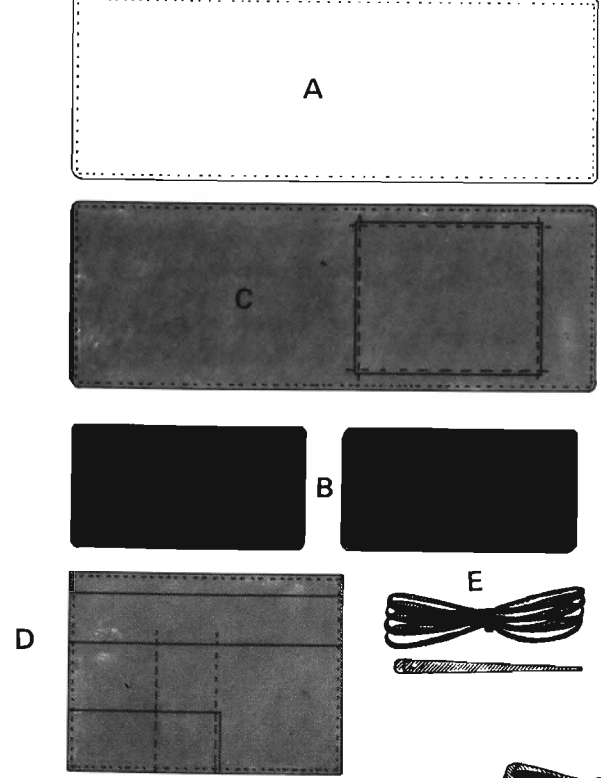


KIT PARTS:
A- Back
B- Cardboard Stiffeners
C- Lining
D- Pocket Assembly
E- Lace & Needle
F- Waxed Thread & Needle
G- Snap Tab
H- Durable Dots

DO ALL TOOLING, DYEING, AND FINISHING BEFORE ASSEMBLY.


Before TOOLING, DYEING, FINISHING your logbook, cement flesh side of Back to stiff cardboard with rubber cement to prevent stretch or shrink. When dyes and finishes are completely dry, carefully remove cardboard from the leather.

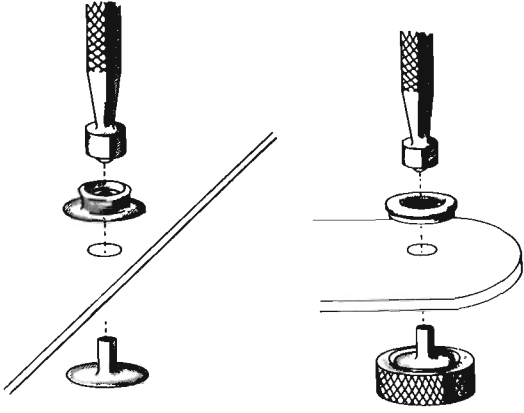

(OPTIONAL SNAP TAB) STEP 1. Locate position of Snap hole on front end of Back (A) as shown on pattern sheet below and punch with No. 2 Mini Punch. Then following instructions above, set bottom and socket of Durable Dot Snap in Snap Tab (B) and stud and eyelet in Back (A).

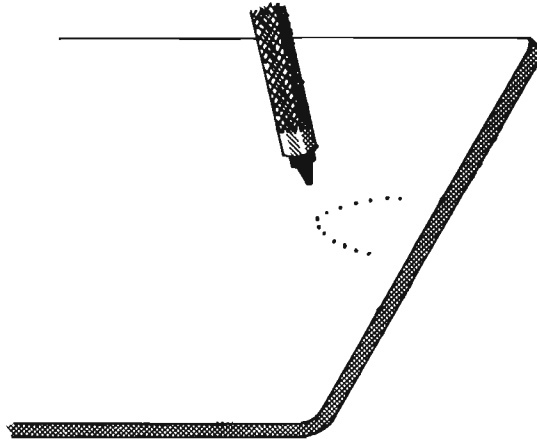


(OPTIONAL SNAP TAB) STEP 2. Locate position of Snap Tab (G) on back end of Back (A) as shown on pattern sheet below and punch holes with No. 0 Mini Punch.

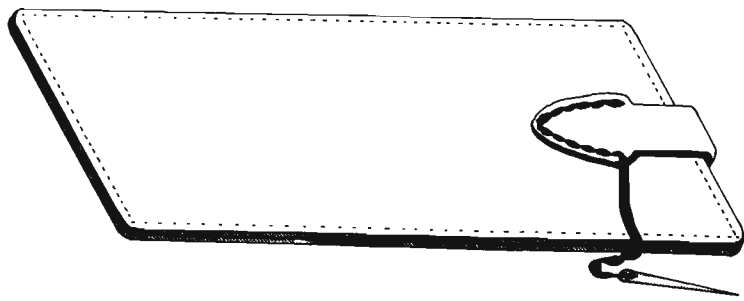


(OPTIONAL SNAP TAB) STEP 3. Align holes in Snap Tab (G) over holes in grain side on back end of Back (A). Begin stitching with waxed thread and needle in one of the top holes, from flesh side of Back (A), leaving 2" tail of thread in hole on flesh side of Back (A). Stitch around Snap Tab (E), in and out in a running stitch, to other top hole. Turn and backstitch through holes, being sure to go OVER the first thread in holes. DO NOT PIERCE THREAD! Tie ends of thread together on flesh side of Back (A). Tap all stitches down with a mallet.

ADHERING CARDBOARD STIFFENERS

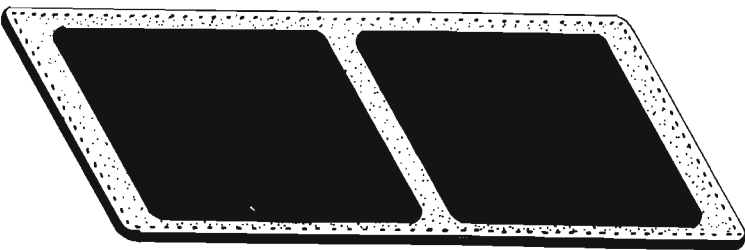


STEP 4. Using Craftsman Cement, cement Cardboard Stiffeners (B) to flesh side of Back (A) 3/8" from edge on each end and sides.

ADHERING THE POCKET ASSEMBLY

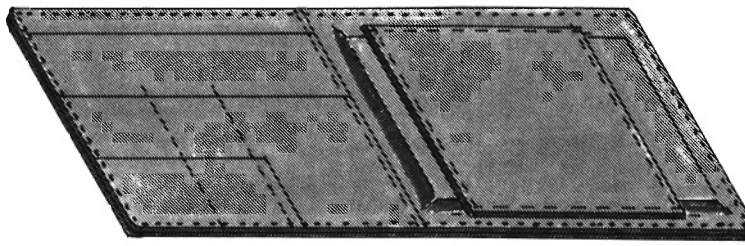


STEP 6. Apply rubber cement around holes on flesh side of Pocket Assembly (D). Apply rubber cement around corresponding holes in Lining (C). Adhere Pocket Assembly in place.

ADHERING LINING

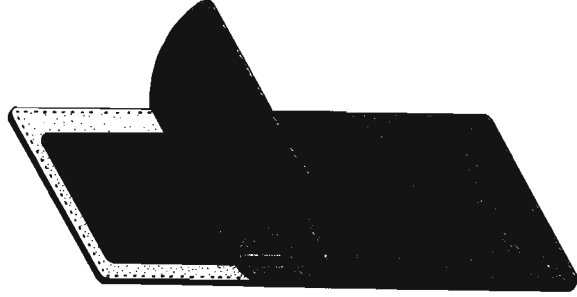


STEP 5. Apply Craftsman Cement to flesh side of Back (A) and Stiffeners (B) and to flesh side of Lining (C). Adhere Lining (C) to Back (A) aligning holes. **CAUTION:** Craftsman Cement bends permanently on contact. Be sure holes are carefully aligned before adhering Lining to Back.

DOUBLE LOOP LACING

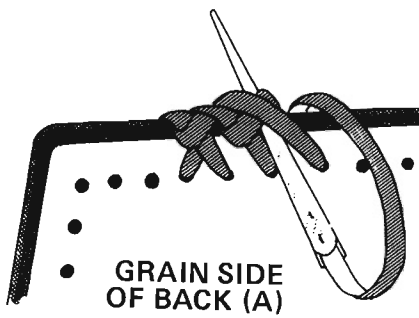

STEP 7. Lace all the way around Trucker's Logbook following DOUBLE LOOP LACE instructions below.

HOW TO LACE & SPLICE THE DOUBLE LOOP STITCH

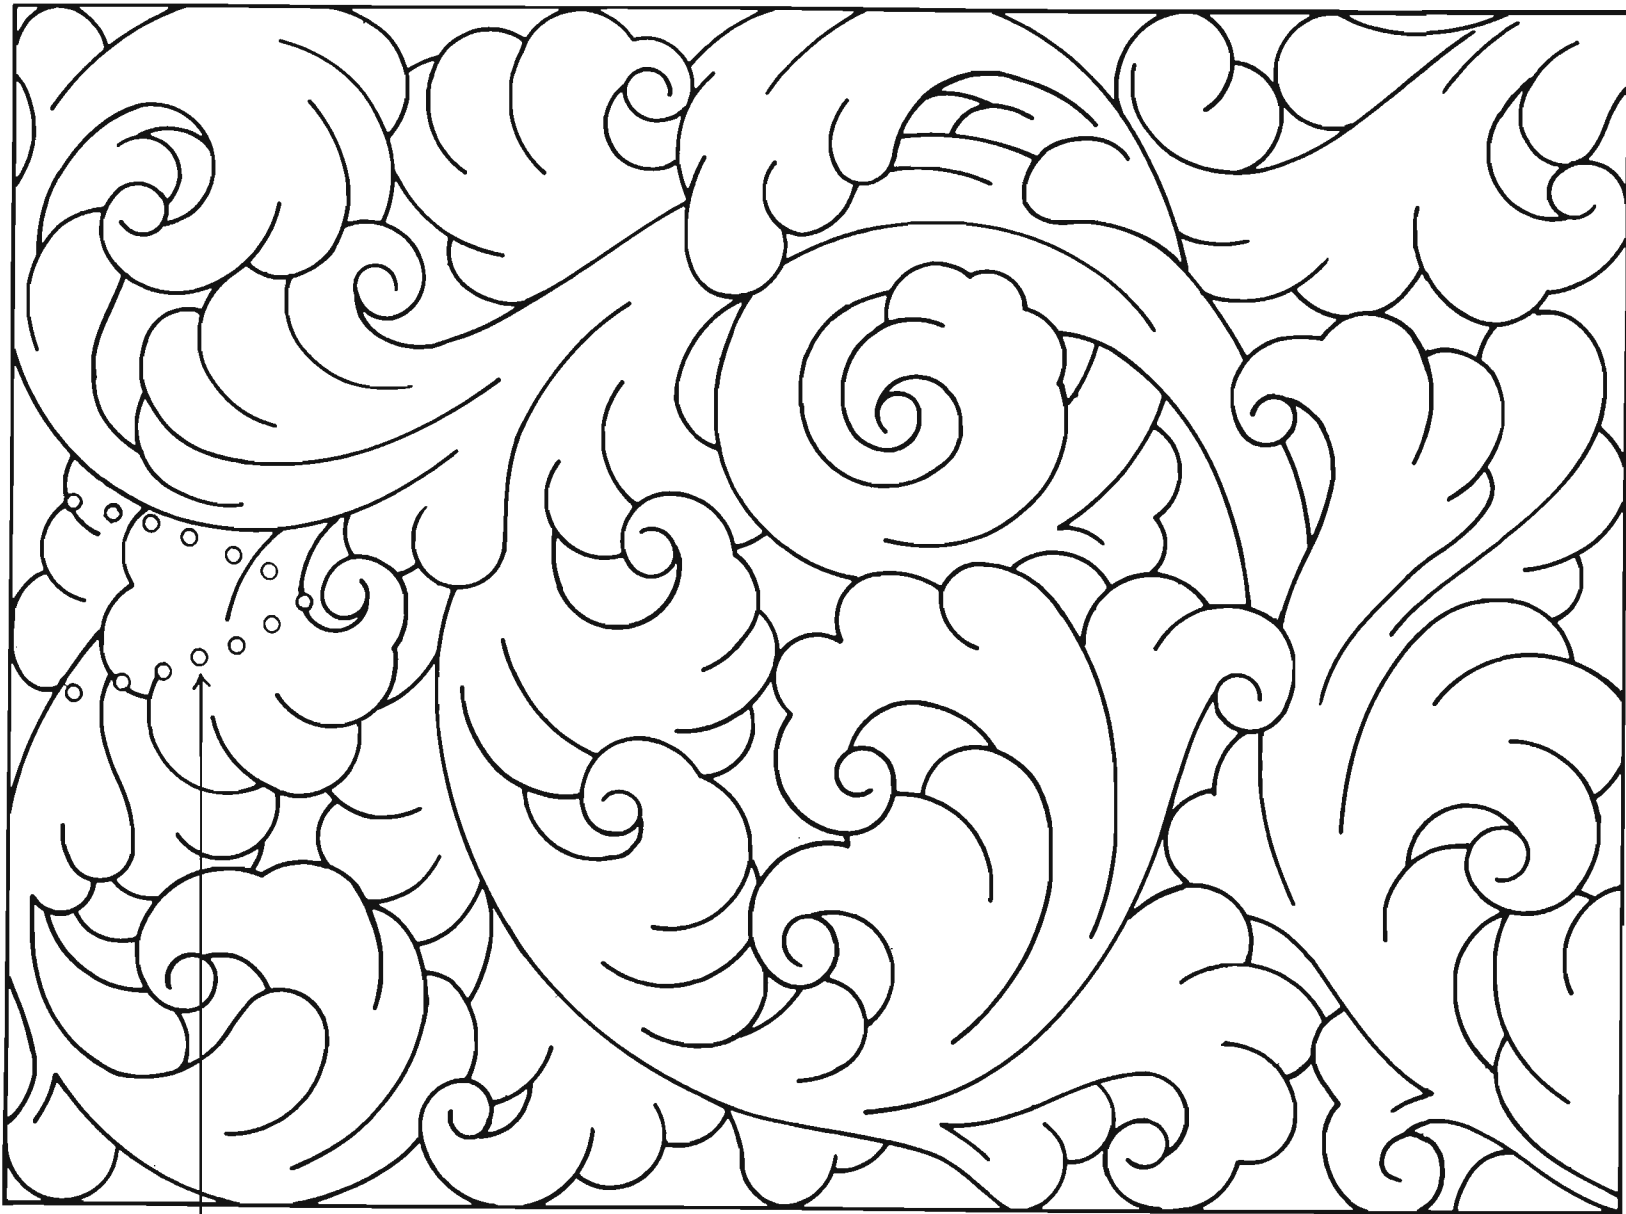

OPTIONAL SNAP TAB POSITION
Punch on back of Back (A) only with
No. 0 Mini Punch.

B971

F976

U853

H907

C431

B701

BACK & LINING

If you are cutting from
your own Leather
cut 1 from
4oz. Tooling Leather
and 1 from
Lining Leather

A104

P209



OPTIONAL SNAP HOLE
Punch on front of Back (A) only
with No. 2 Mini Punch.

STIFFENER

If you are cutting from your own leather
cut 2 from Stiff Cardboard

STITCH LINE

PEN & RULER POCKET

STITCH LINE

If you are cutting from your own leather
cut 1 from Lining Leather





STITCH LINE

Trucker's Log Cover



og Book Kit

STOCK NO. 4469

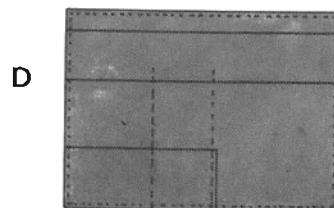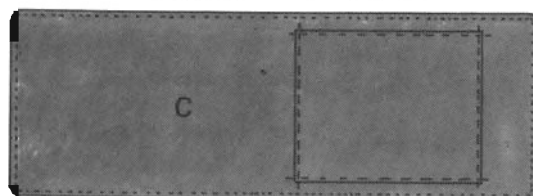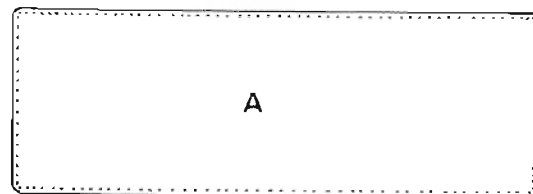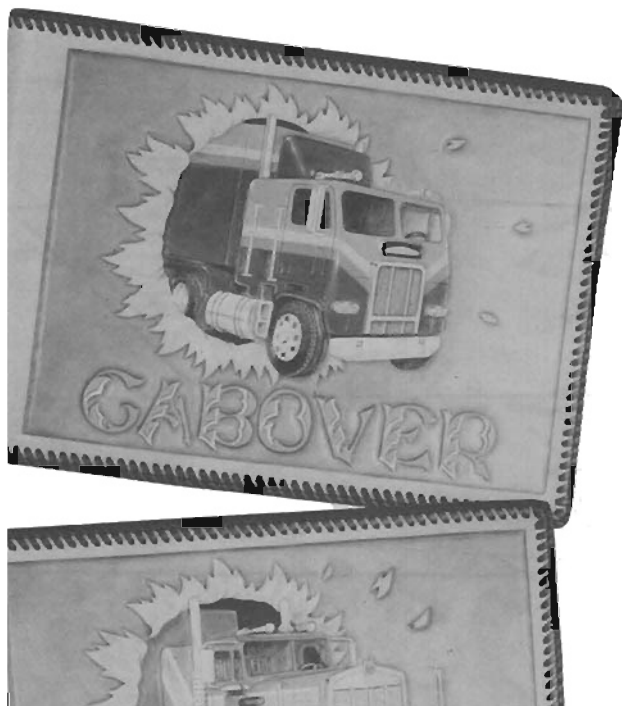


KIT PARTS:

- A- Back
- B- Cardboard Stiffeners
- C- Lining
- D- Pocket Assembly
- E- Lace & Needle
- F- Waxed Thread & Needle
- G- Snap Tab
- H- Durable Dots




DO ALL TOOLING, DYEING, AND FINISHING BEFORE ASSEMBLY.

Before TOOLING, DYEING, FINISHING your logbook, cement flesh side of Back to stiff cardboard with rubber cement to prevent stretch or shrink. When dyes and finishes are completely dry, carefully remove cardboard from the leather.

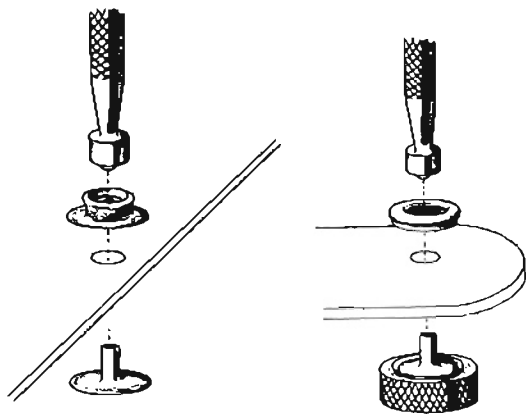


(OPTIONAL SNAP TAB) STEP 1. Locate position of Snap hole on front end of Back (A) as shown on pattern sheet below and punch with No. 2 Mini Punch. Then following instructions above, set bottom and socket of Durable Dot Snap in Snap Tab (B) and stud and eyelet in Back (A).

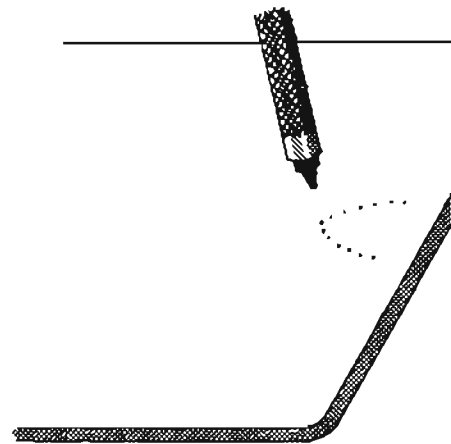

(OPTIONAL SNAP TAB) STEP 2. Locate position of Snap Tab (G) on back end of Back (A) as shown on pattern sheet below and punch holes with No. 0 1




tion of Snap
on pattern
Mini Punch.

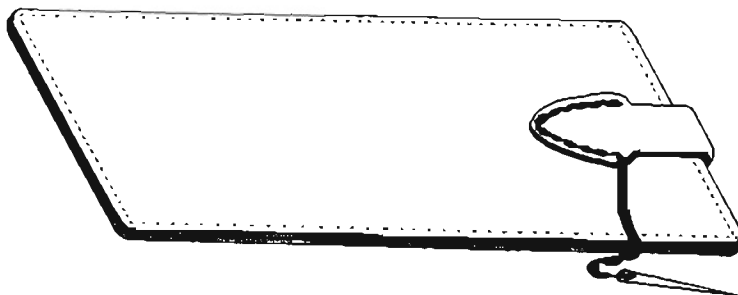


(OPTIONAL SNAP TAB) STEP 3. Align holes in Snap Tab (G) over holes in grain side on back end of Back (A). Begin stitching with waxed thread and needle in one of the top holes, from flesh side of Back (A), leaving 2" tail of thread in hole on flesh side of Back (A). Stitch around Snap Tab (E), in and out in a running stitch, to other top hole. Turn and backstitch through holes, being sure to go OVER the first thread in holes. DO NOT PIERCE THREAD! Tie ends of thread together on flesh side of Back (A). Tap all stitches down with a mallet.

ADHERING CARDBOARD

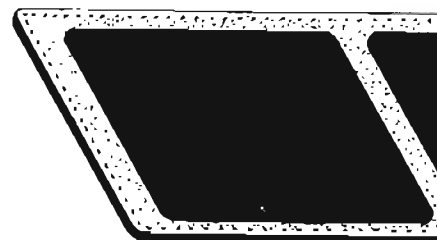


STEP 4. Using Craftsman Cent Stiffeners (B) to flesh side of Back each end and sides.

ADHERING THE POK

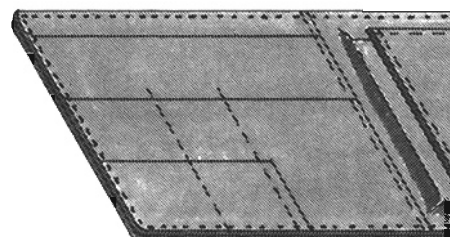


STEP 6. Apply rubber cement at of Pocket Assembly (D). Apply corresponding holes in Lining Assembly in place.

D STIFFENERS

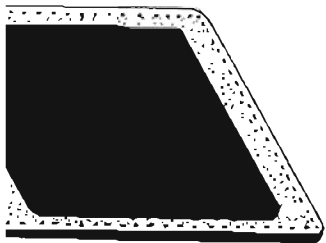


ment, cement Cardboard
ck (A) 3/8" from edge on

ET ASSEMBLY

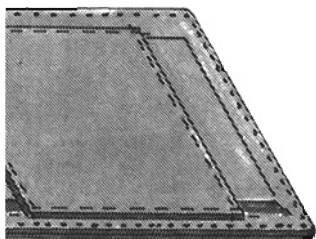


round holes on flesh side
' rubber cement around
g (C). Adhere Pocket

ADHERING LINING

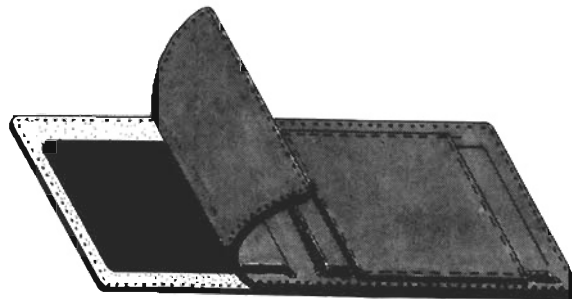


STEP 5. Apply Craftsman Cement to flesh side of Back (A) and Stiffeners (B) and to flesh side of Lining (C). Adhere Lining (C) to Back (A) aligning holes. *CAUTION: Craftsman Cement bends permanently on contact. Be sure holes are carefully aligned before adhering Lining to Back.*

DOUBLE LOOP LACING

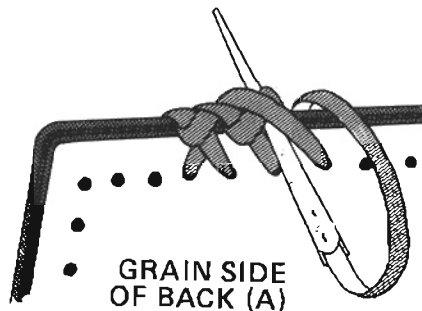

GRAIN SIDE
OF BACK (A)


STEP 7. Lace all the way around Truckers Logbook following DOUBLE LOOP LACE instructions below.

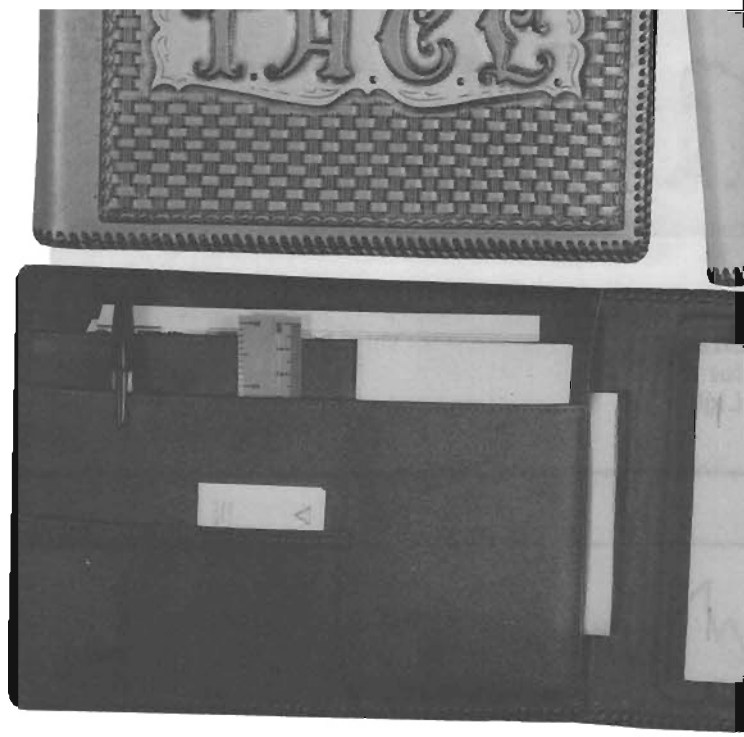


KIT CONTAINS:
 Pre- Cut, Pre- Punched
 Leather Parts
 Optional Snap Tab
 Durable Dot Snap
 Waxed Thread & Needle
 Leather Lace & Needle
 Patterns & Instructions


YOU WILL NEED:
 Craftsman Cement
 Rubber Cement
 No. 7058 Durable Dot Setter (optional)
 No. 1804 Anvil (optional)
 No. 2 Mini Punch (optional)
 No. 0 Mini Punch (optional)

Distributed by Tandy Lea
 A Division of TANDYCO
 Fort Worth, Texas

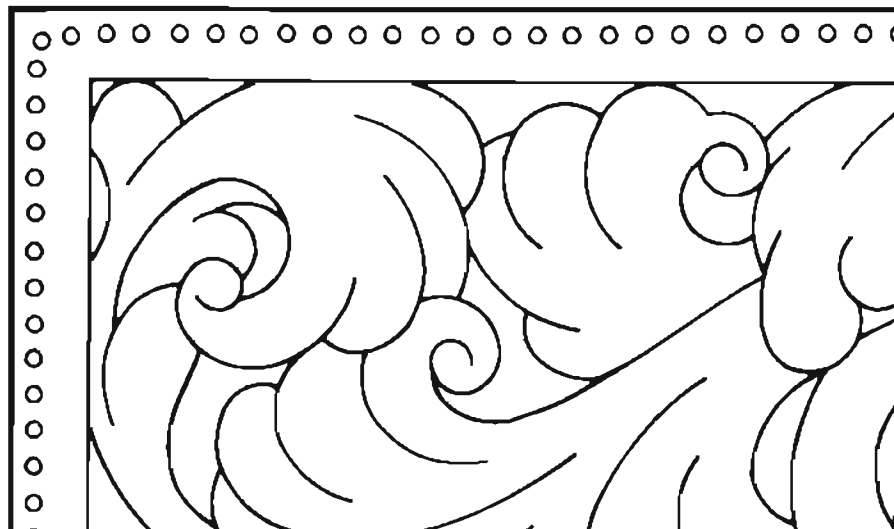


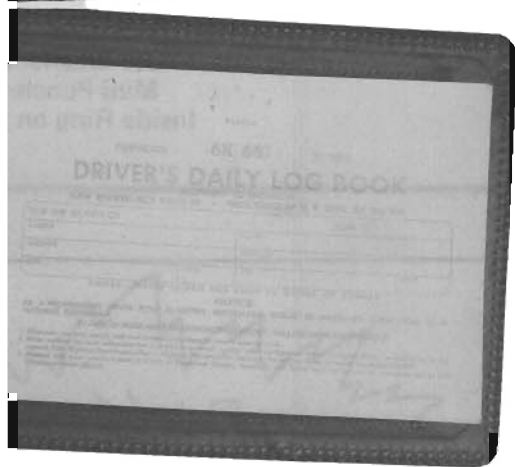


ther Company
RAFTS INC.
76107

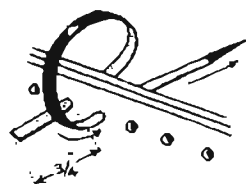


1. Beginning on front side of project, pull the needle and lace through the 1st hole. Leave about $\frac{3}{4}$ " of the lacing end and go on to lace the next hole.

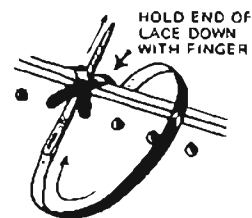



2. Pull the stitch tight, lacing over the end you left free. This forms a cross or "bight".

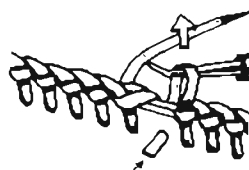


13. From back side pull the end of lace out of the hole.

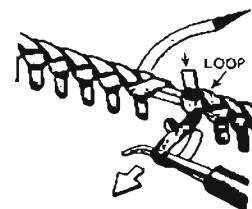


14. From front side, pull end of lace out of the loop.

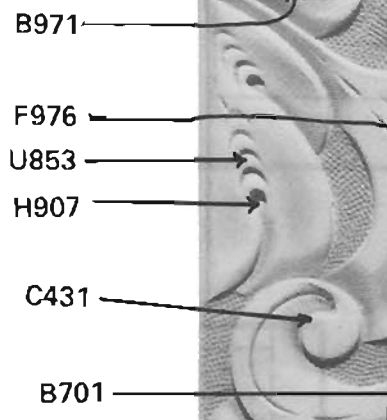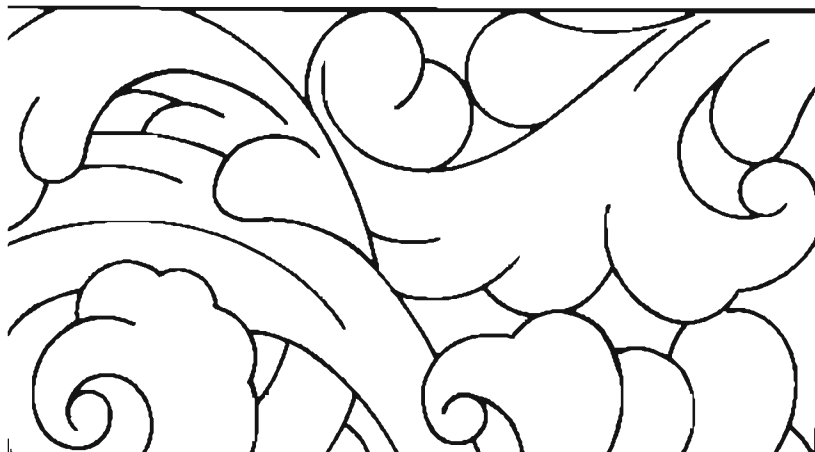


HOW TO LACE & S

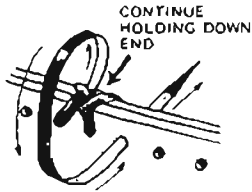

3. Pull the stitch under the bight snug but not tight. Lace through the next hole.

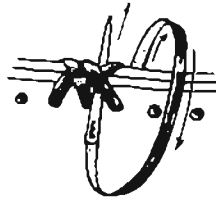


4. Follow the same procedure as in Steps 1 and 2 making a cross or bight. Once again go under the bight and pull the stitch snug.

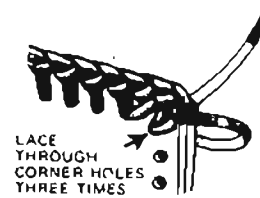


5. When lacing a corner, stitch the hole before, the corner hole and the hole after the corner hole twice each. Be sure to go under the bight each time.



6. Lace until only lace remain. You splice with a n lace.

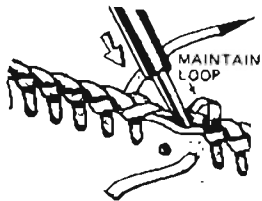


15. Push tool or needle down between leathers and hook it over the lace.

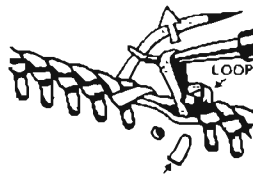

16. Pull end of lace out of hole and up between leathers. Two empty holes should appear on the front side; one on the back.

2700-14

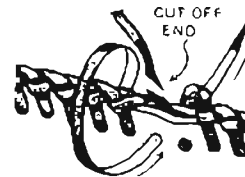




17. Cut off the end of the lace you have pulled out and tuck the end of the lace between the leathers. Lace through the next hole.





18. Pull stitch ti up through loop back side. All h back side should b




PLICE THE DOUBLE LOOP STITCH

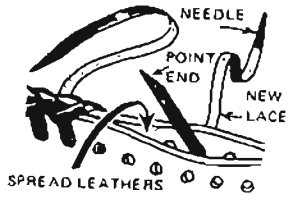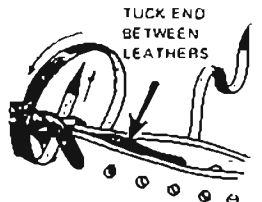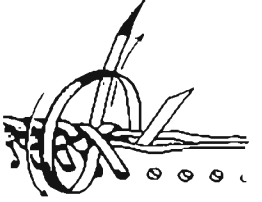 Approximately 6" of lace will have to be cut off the new length of	 7. Insert new lace down between leathers, 4 holes from existing lacing; pull out back side. Leave $\frac{3}{4}$" of lace between the leathers.	 8. Tuck end of lace between leathers and continue lacing your project with the old lace.	 9. Pull the old lace up tight, cut off the end at an angle, allowing about $\frac{3}{4}$" to remain. Attach needle to new lace.
 ght and lace p from the holes on the side filled.	 19. Lace under the bight. . . do not pull this stitch tight.	 20. Carefully cross over as shown. . . and push needle down through the loop.	 21. Pull needle through. Push laced edges together to adjust starting loops for easier completion.





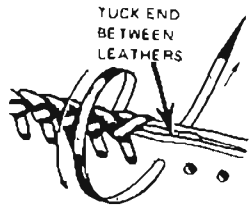

10. Tuck the end of the old lace between the leathers and lace over it with the new lace so that it is caught and won't show.

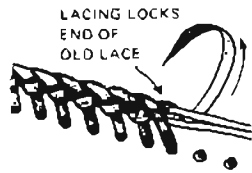


11. Continue lacing to starting point.

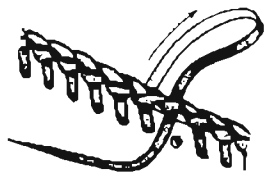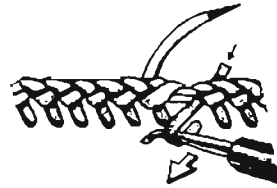


22. Pull any slack out of the first loop and adjust lacing with fingers to make all your stitches appear equal.




23. Pull the end of the lacing down tight. Make sure all stitches appear even and equally spaced.

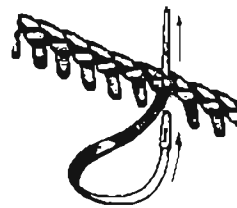

24. Push needle through the last hole as shown. Bring it up between the leathers and out between the lacing. Cut off the excess lace.

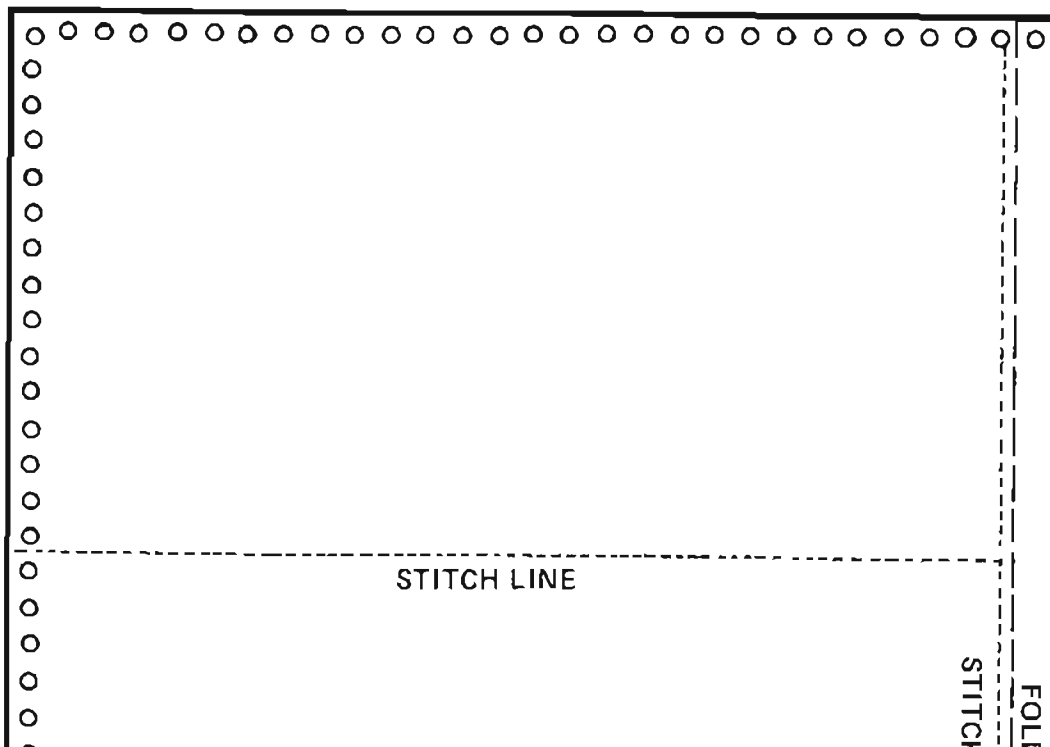

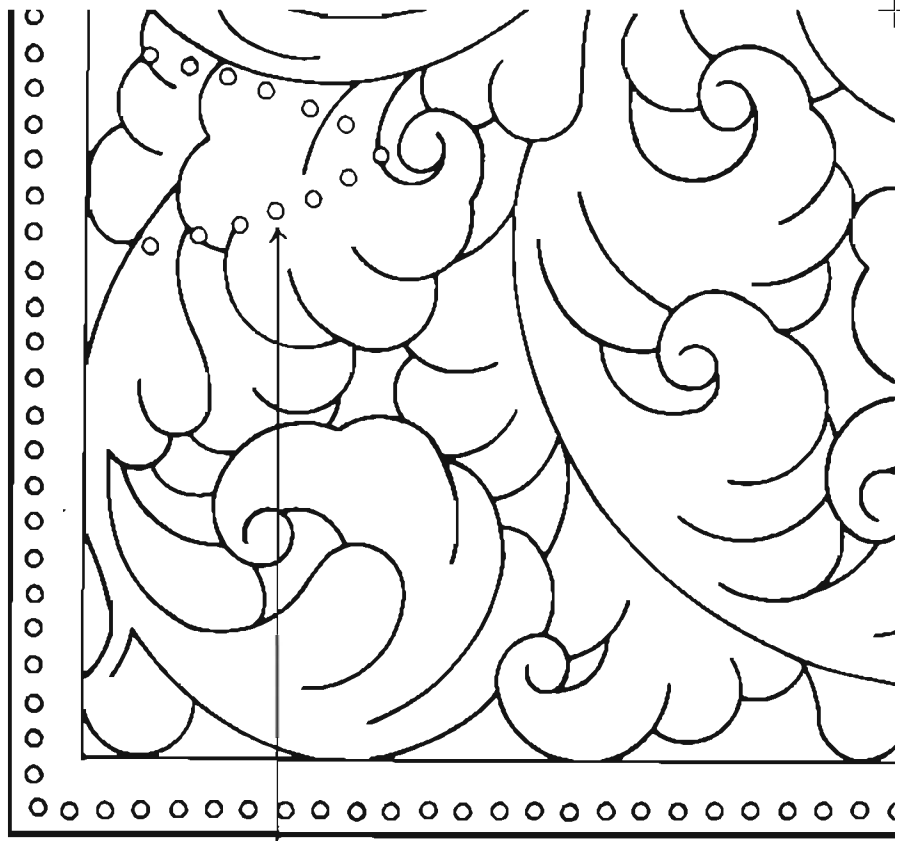

OPTIONAL SNAP TAB POSITION
Punch on back of Back (A) only with
No. 0 Mini Punch.



BACK & LINING

If you are cutting from
your own Leather
cut 1 from
4oz. Tooling Leather
and 1 from
Lining Leather

A104

P209






OPTIONAL SNAP HOLE
Punch on front of Back (A) only
with No. 2 Mini Punch.

STIFFENER

If you are cutting from your own leather
cut 2 from Stiff Cardboard

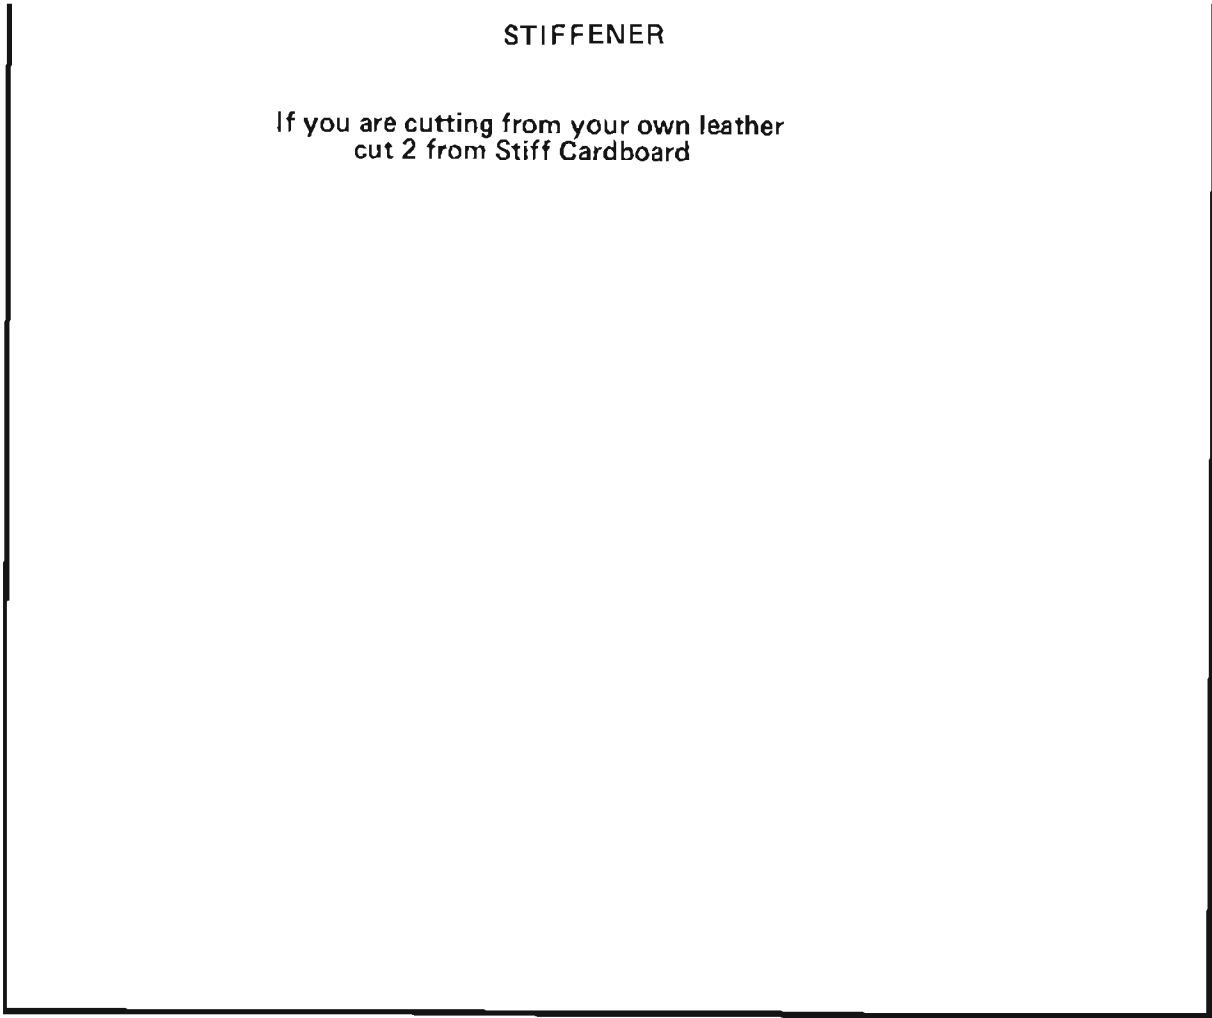



PEN & RULER POCKET

2 LINE
1 LINE








STITCH LINE


If you are cutting from your own leather
cut 1 from Lining Leather


STITCH LINE

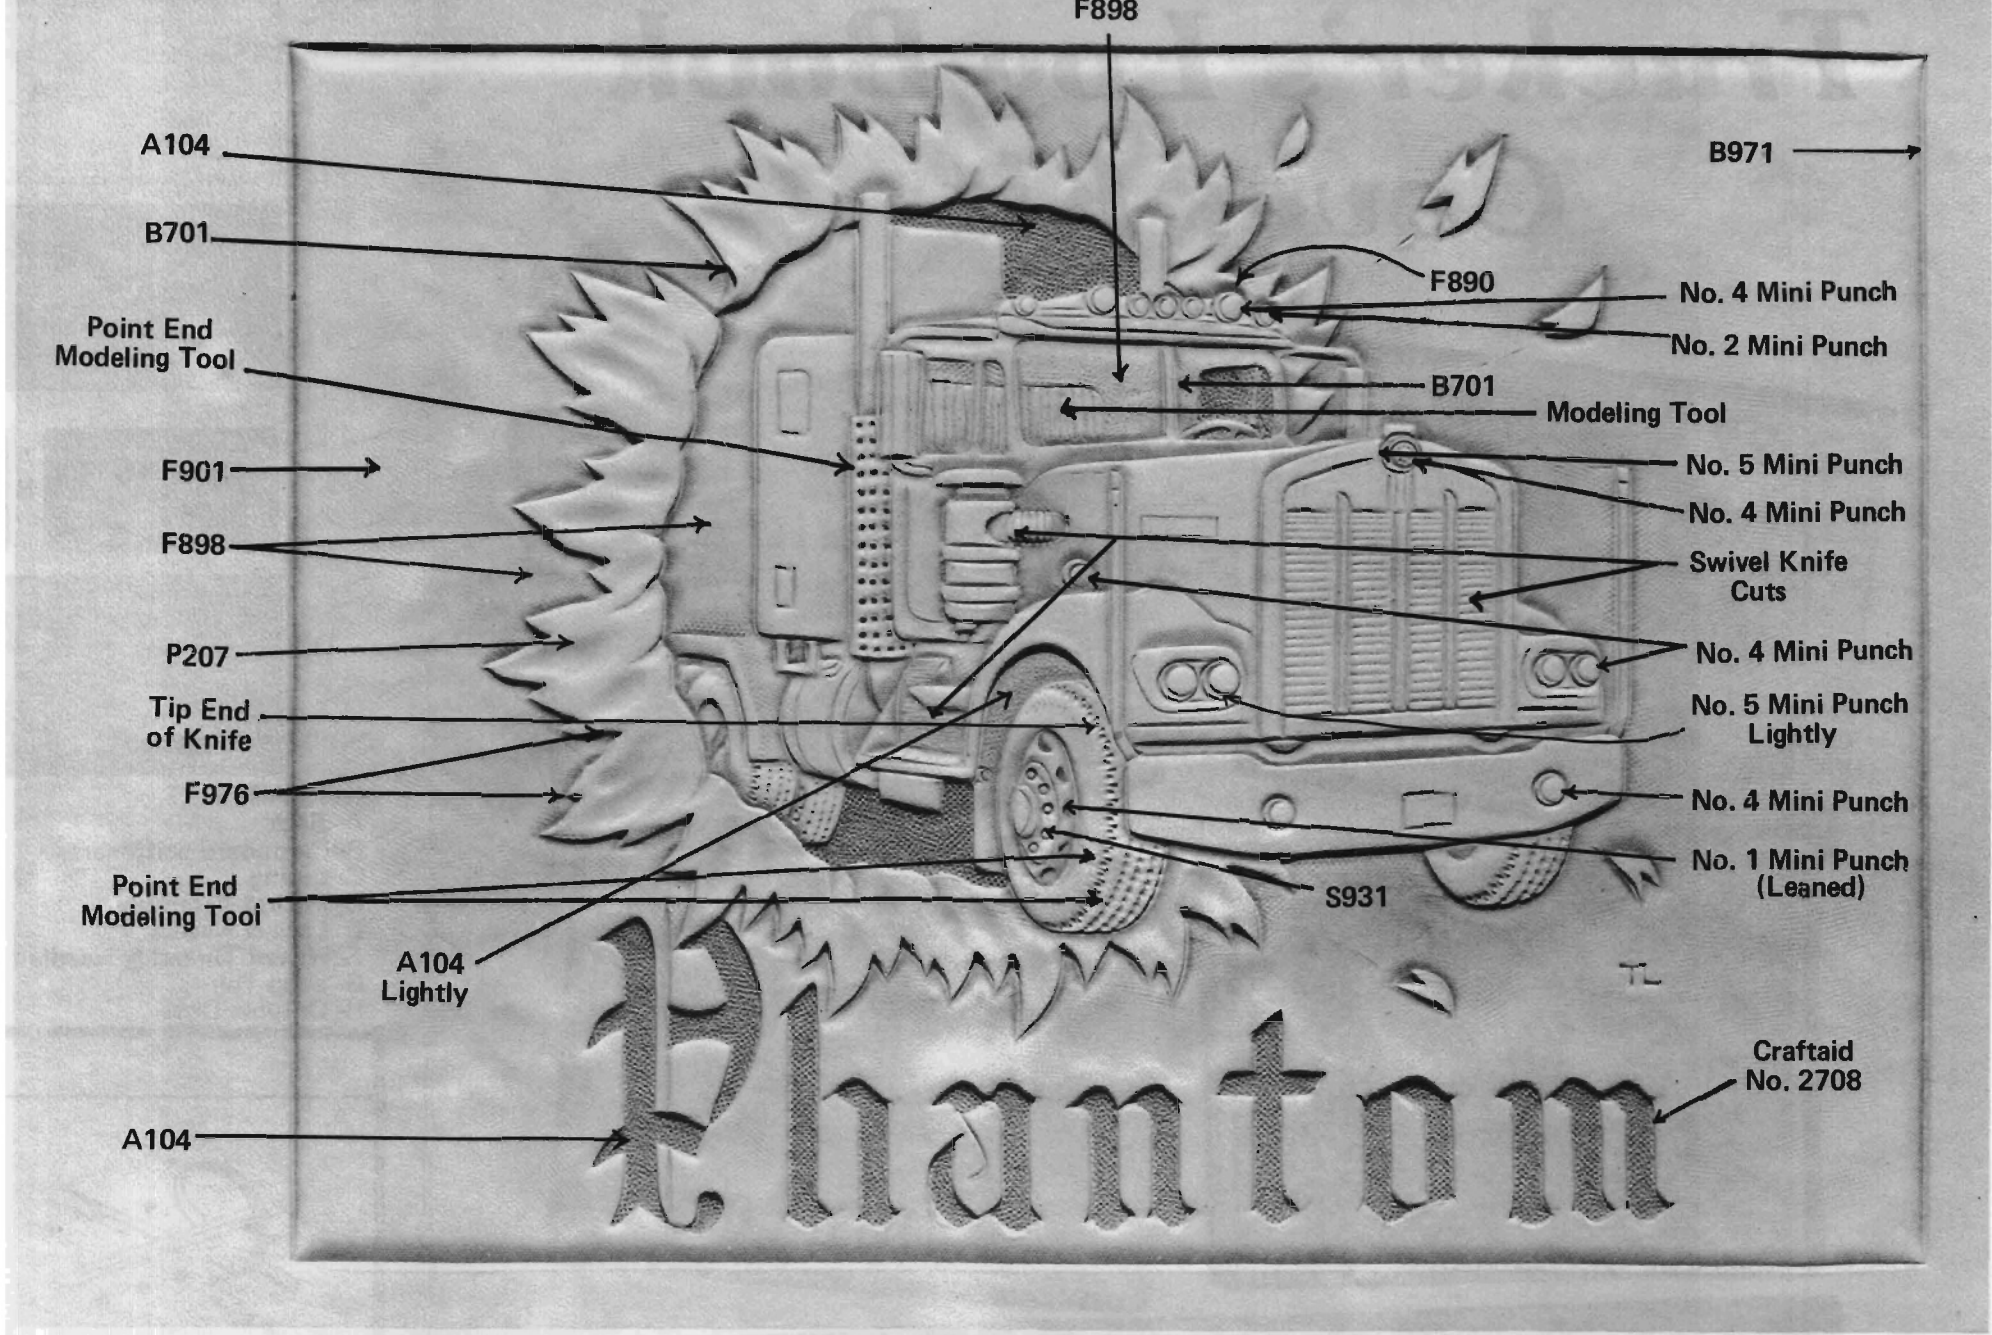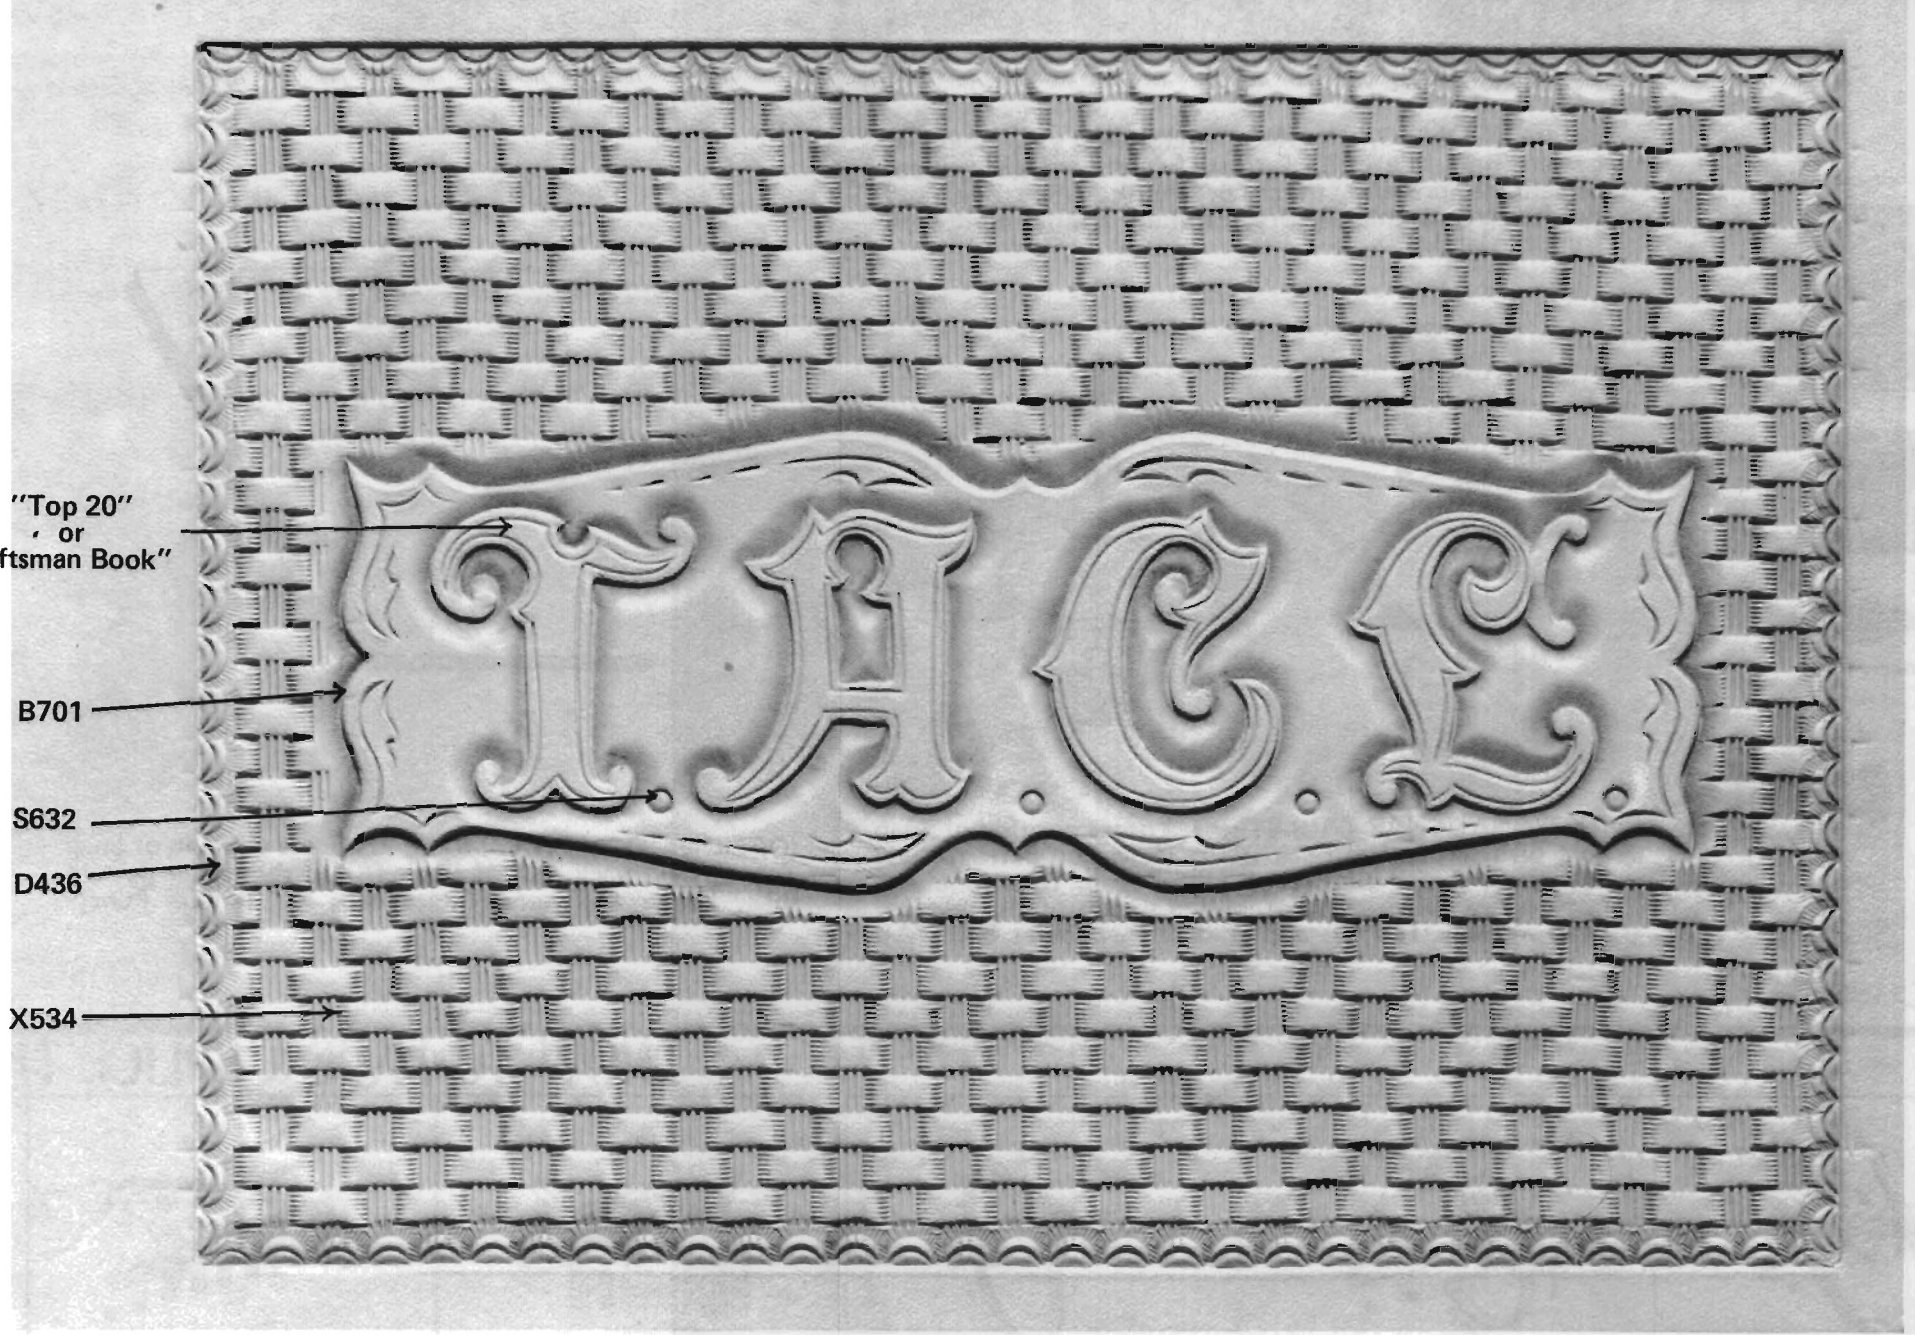

Use Smaller Size
Mini Punch for
Inside Ring on Lights

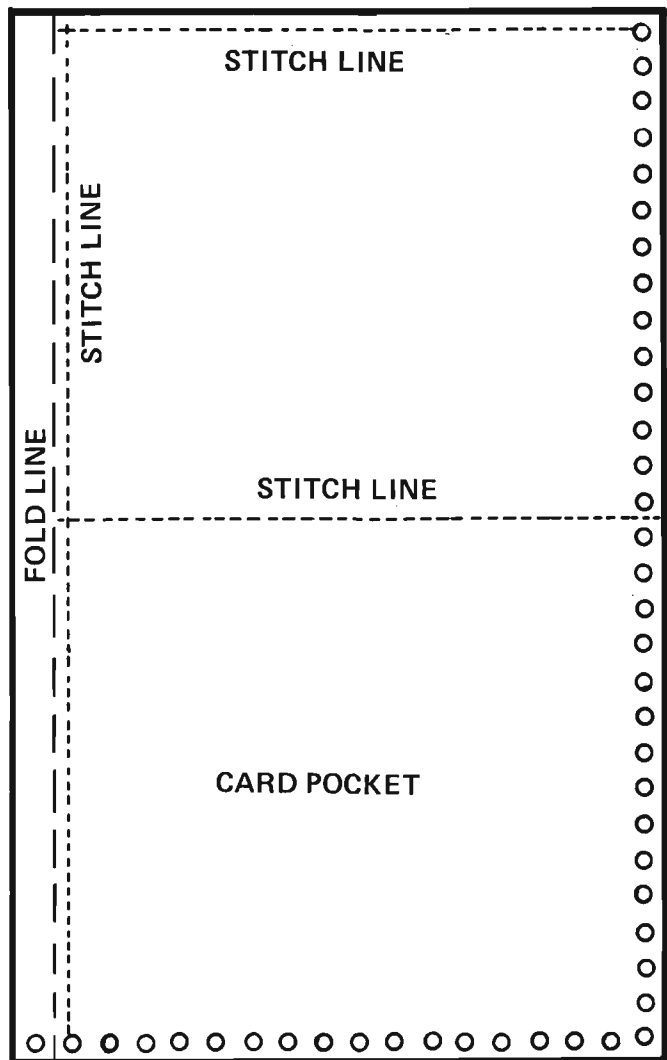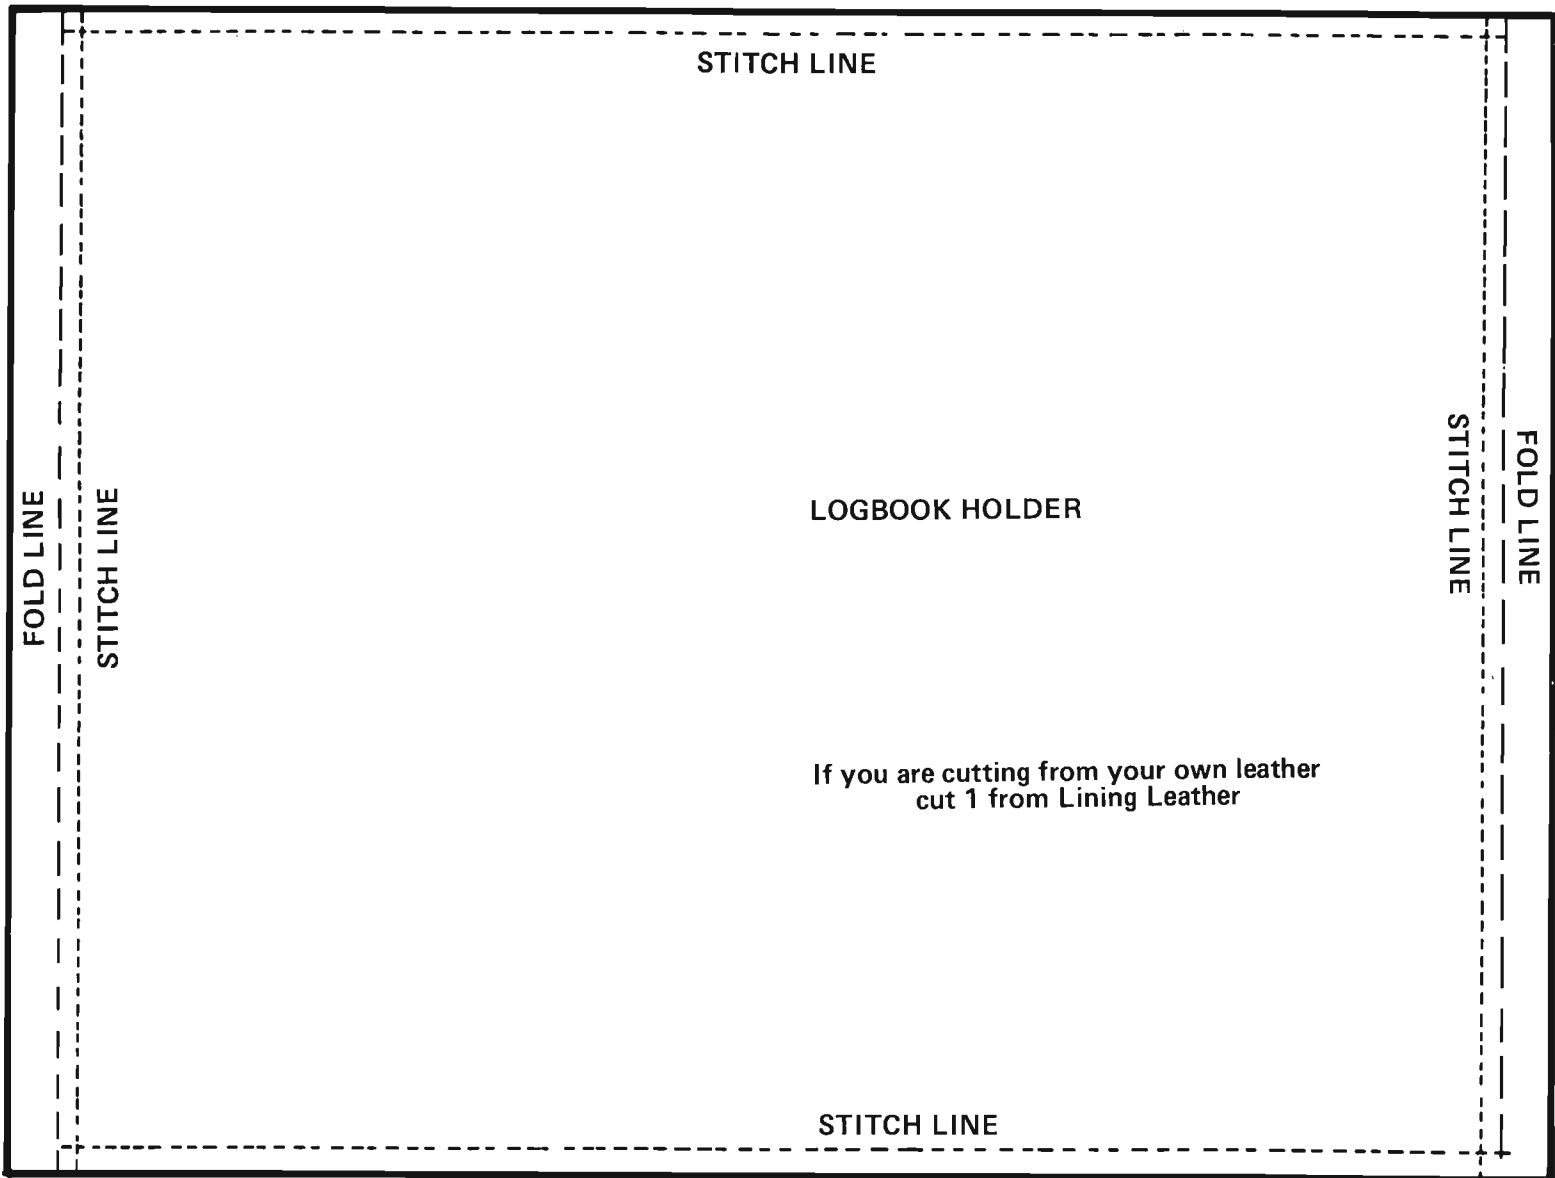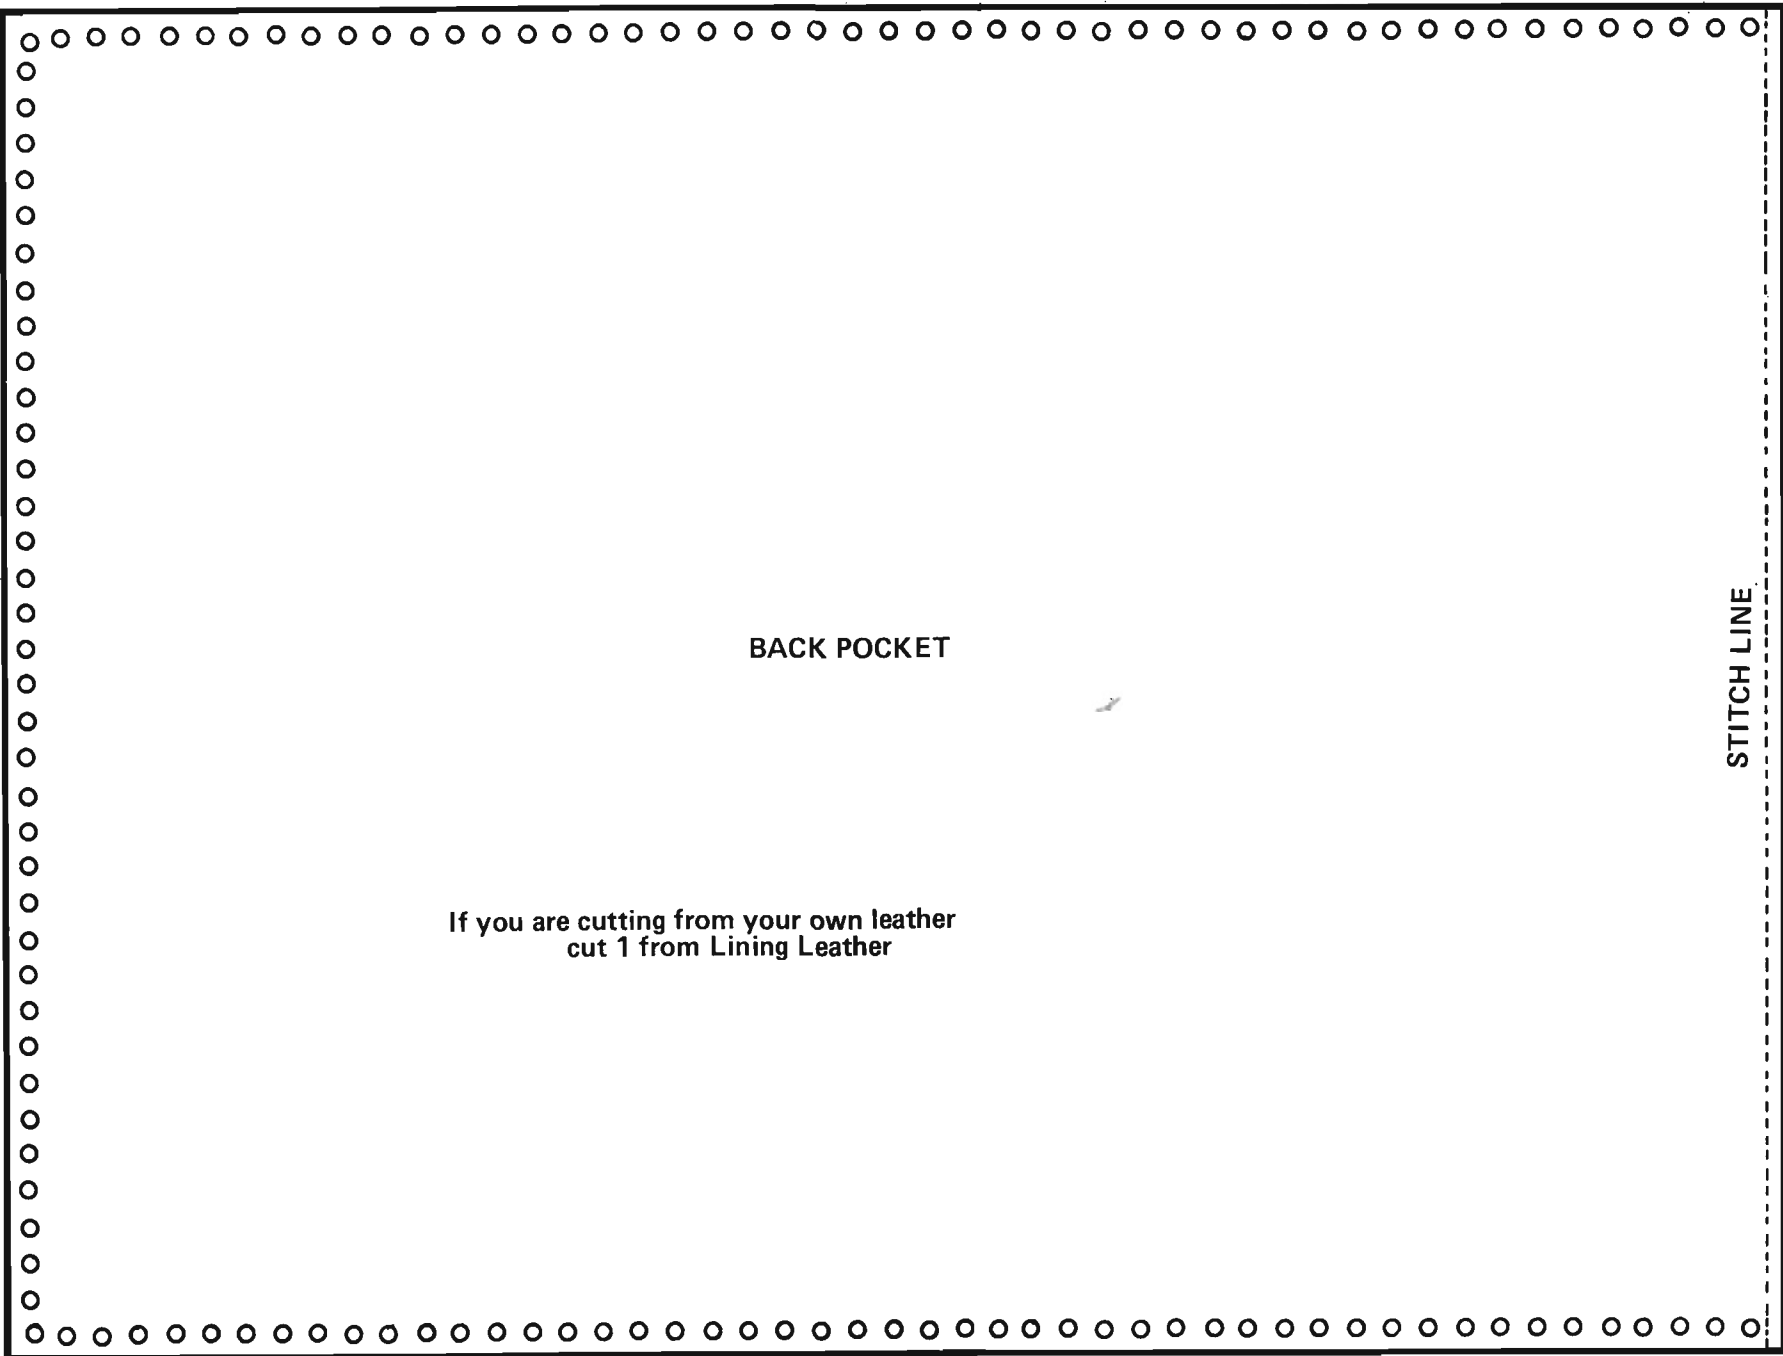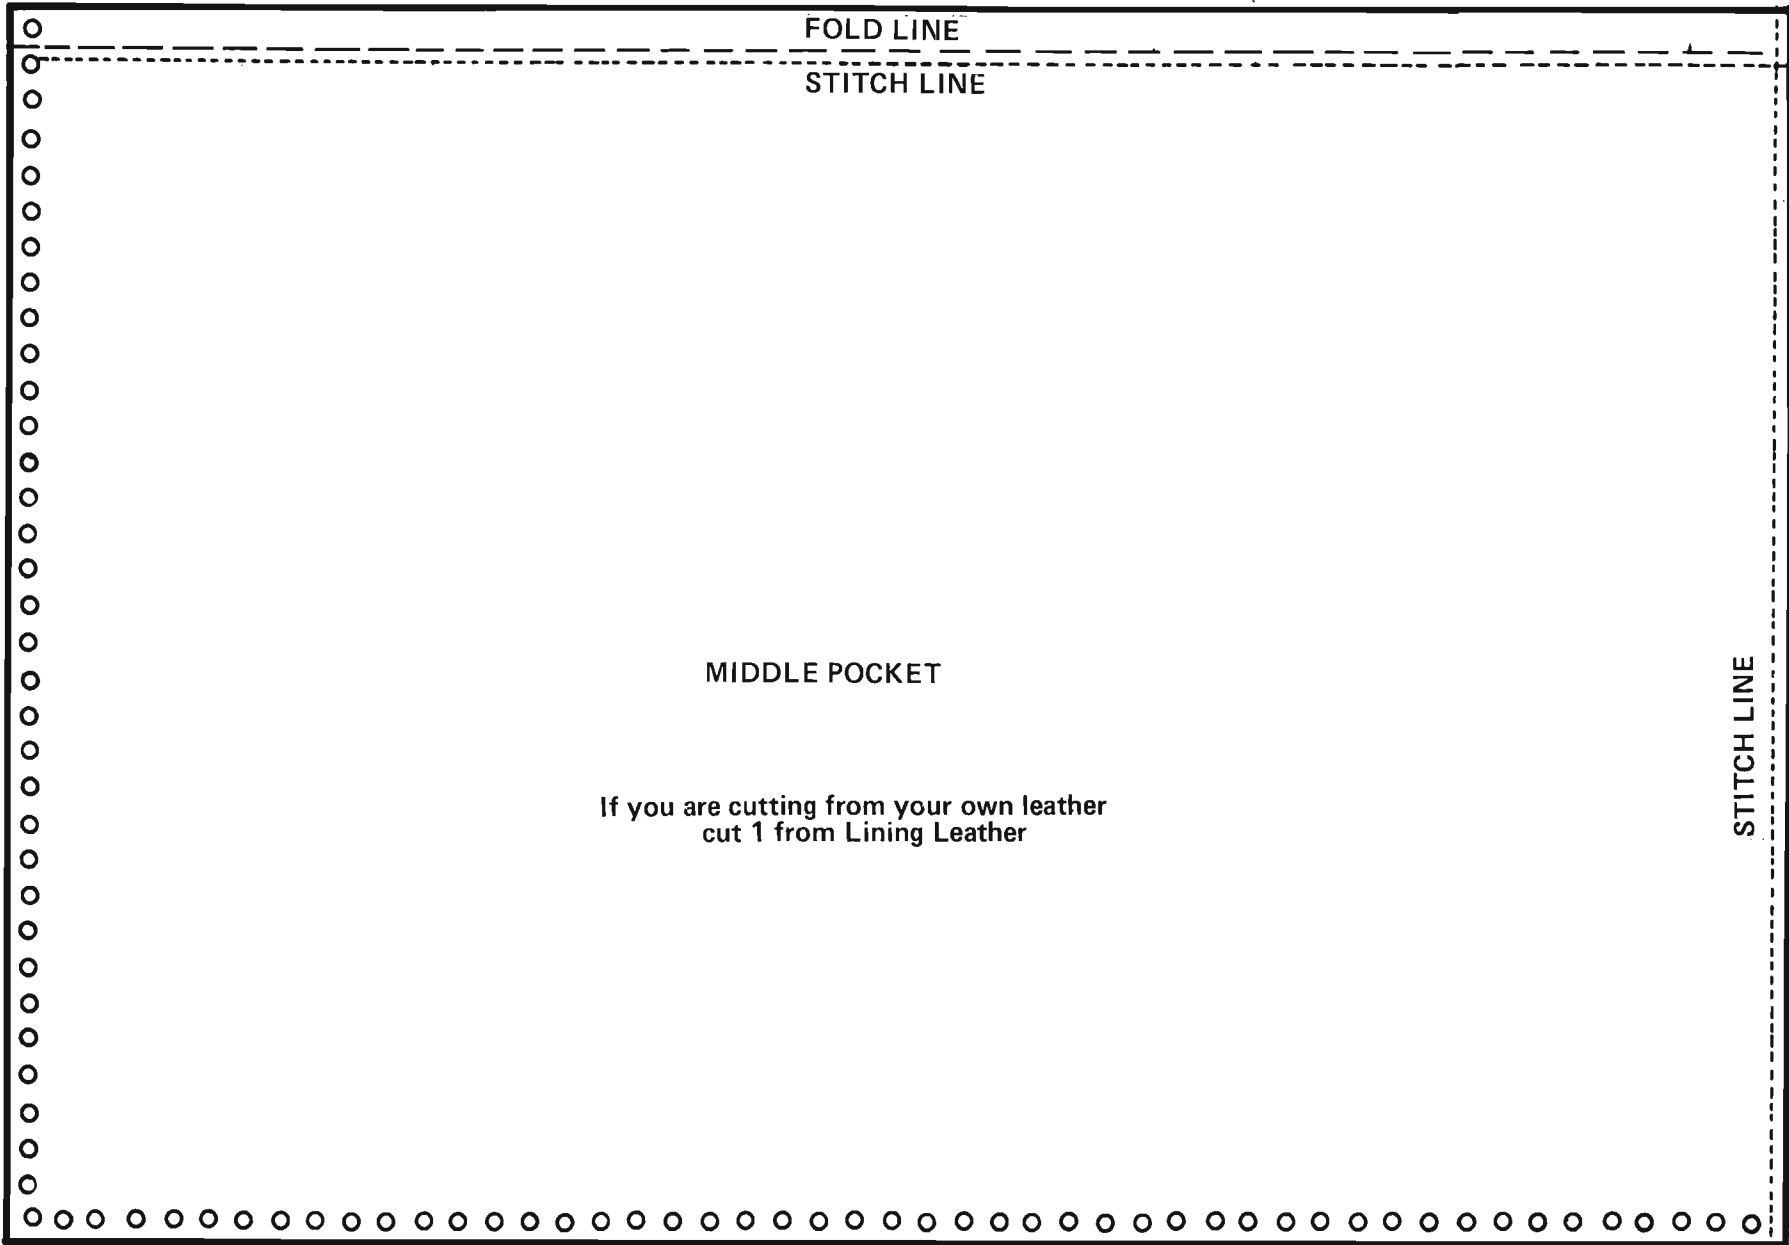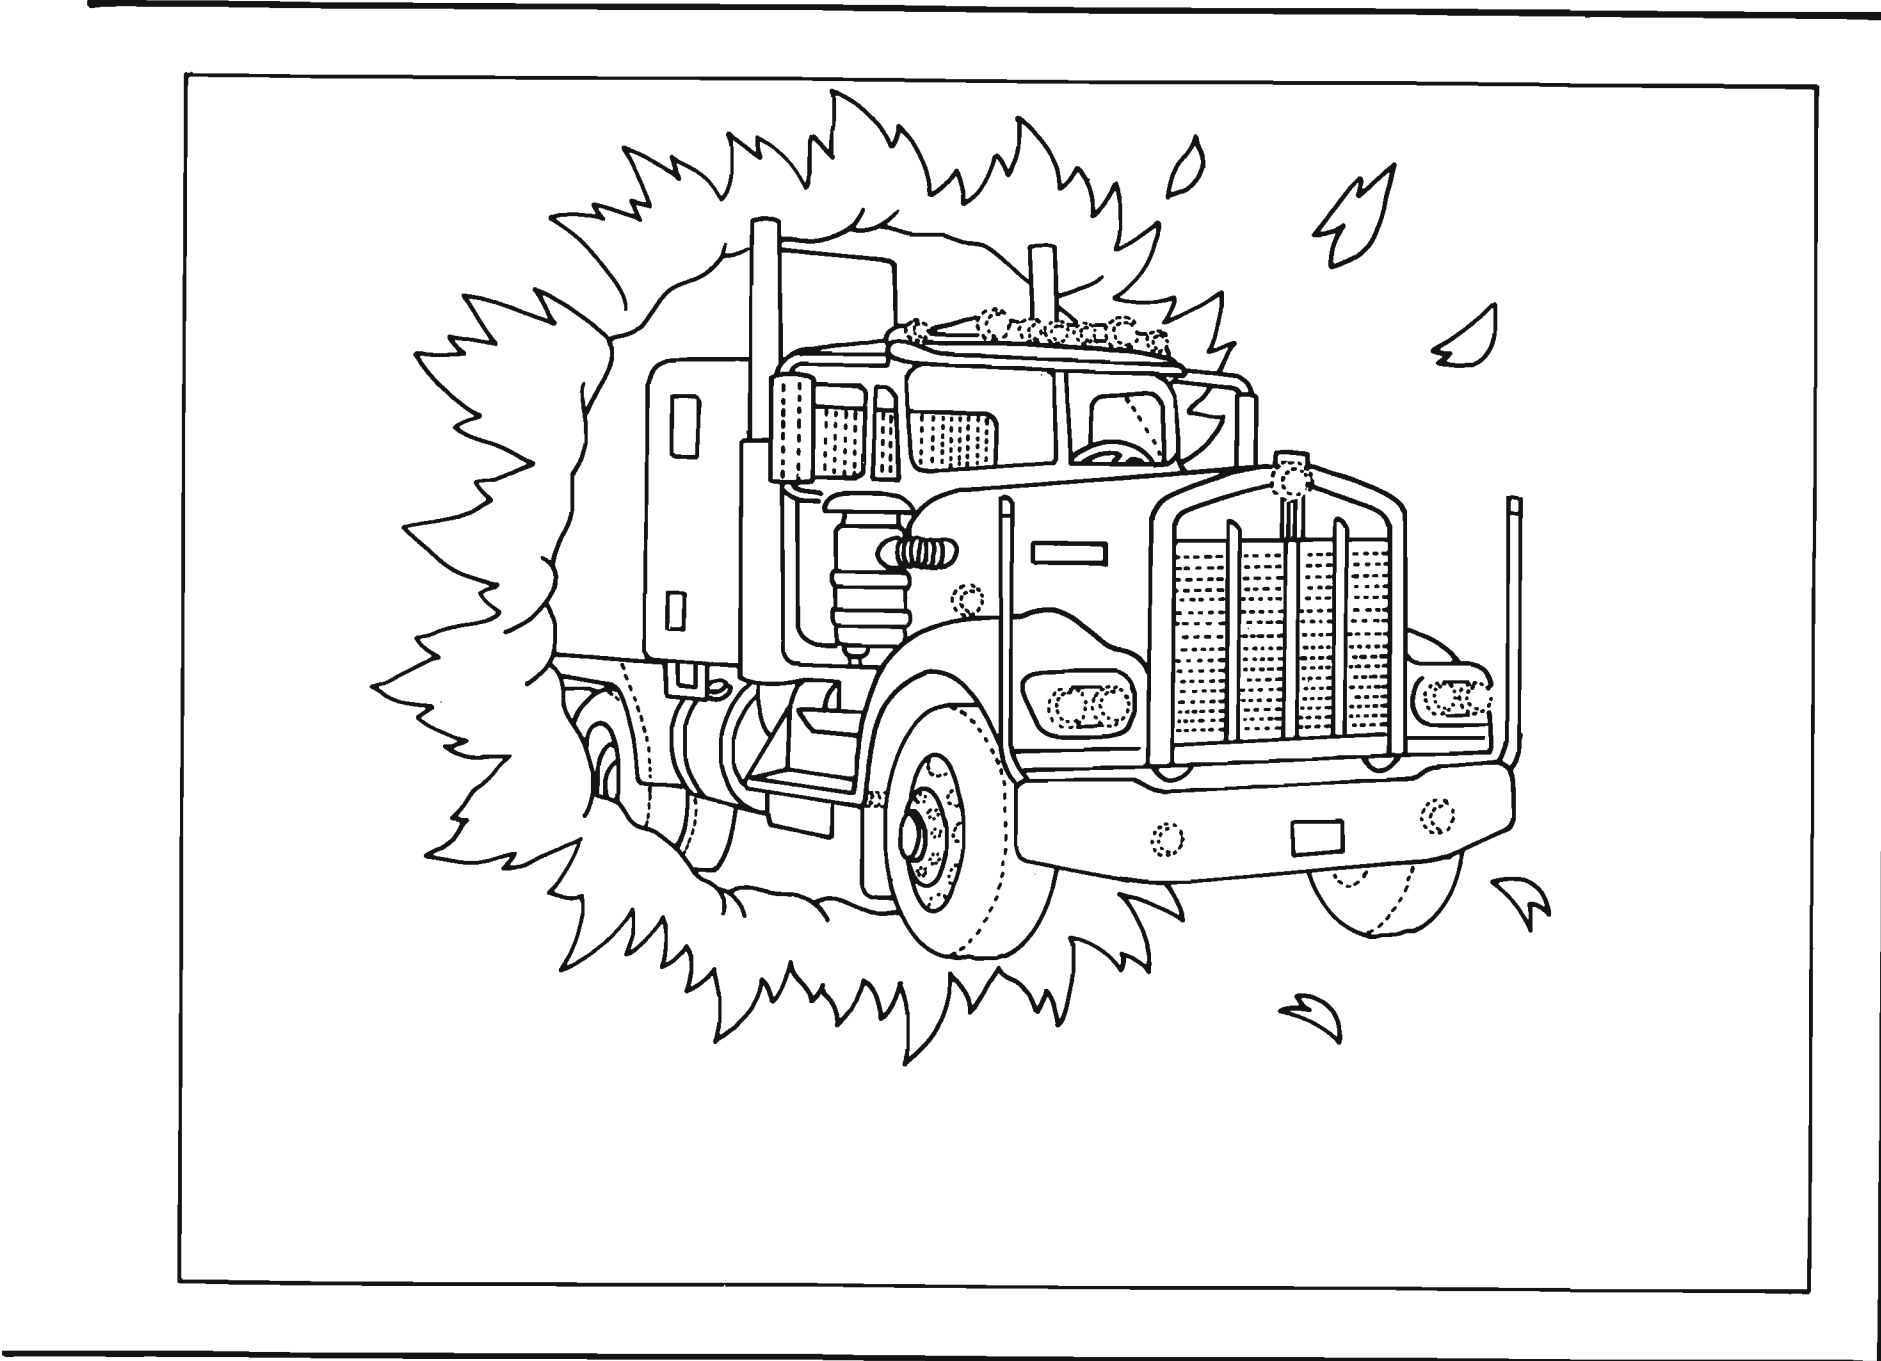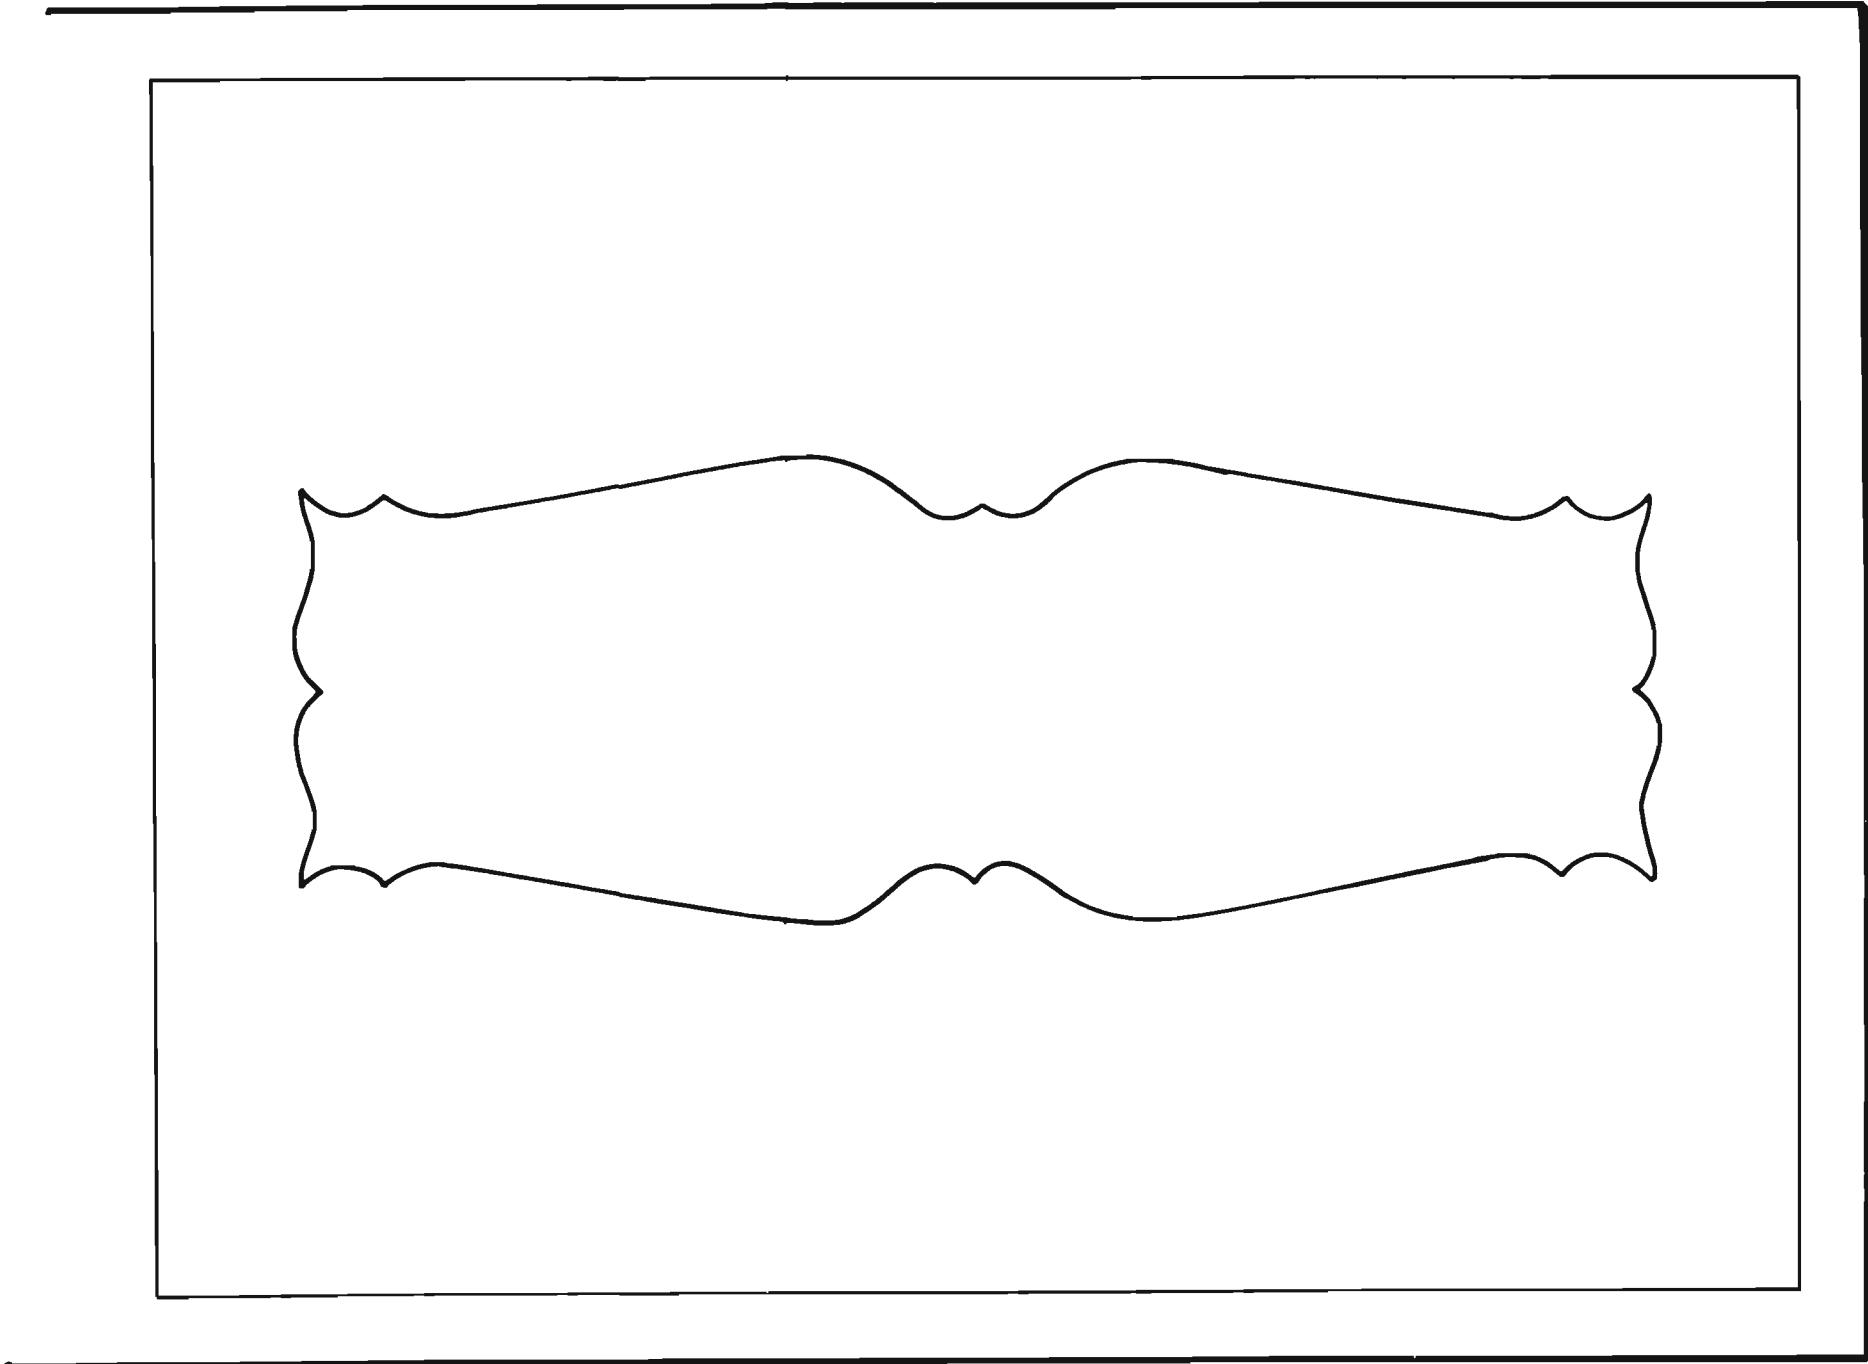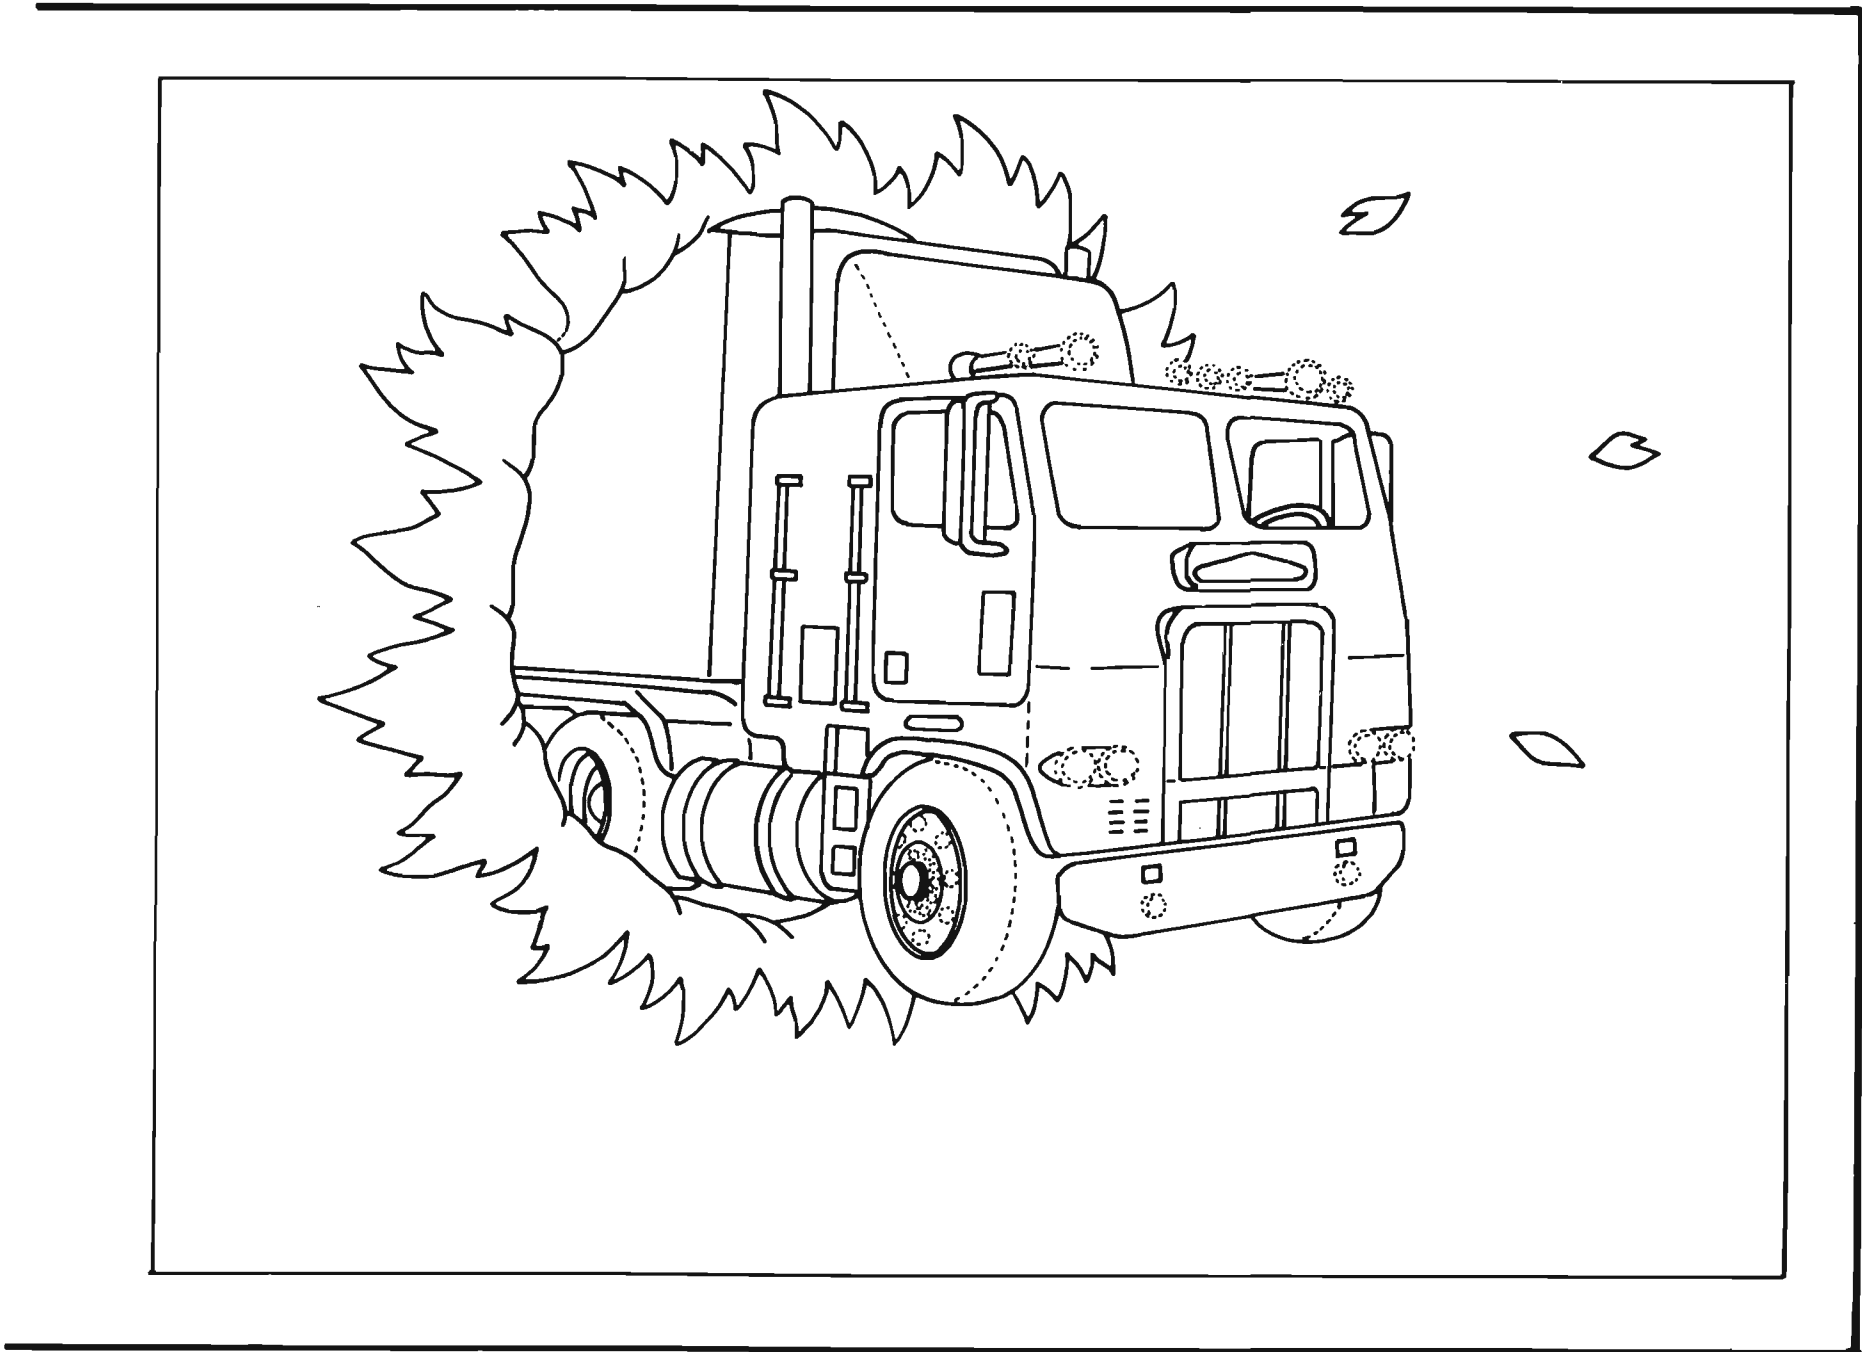

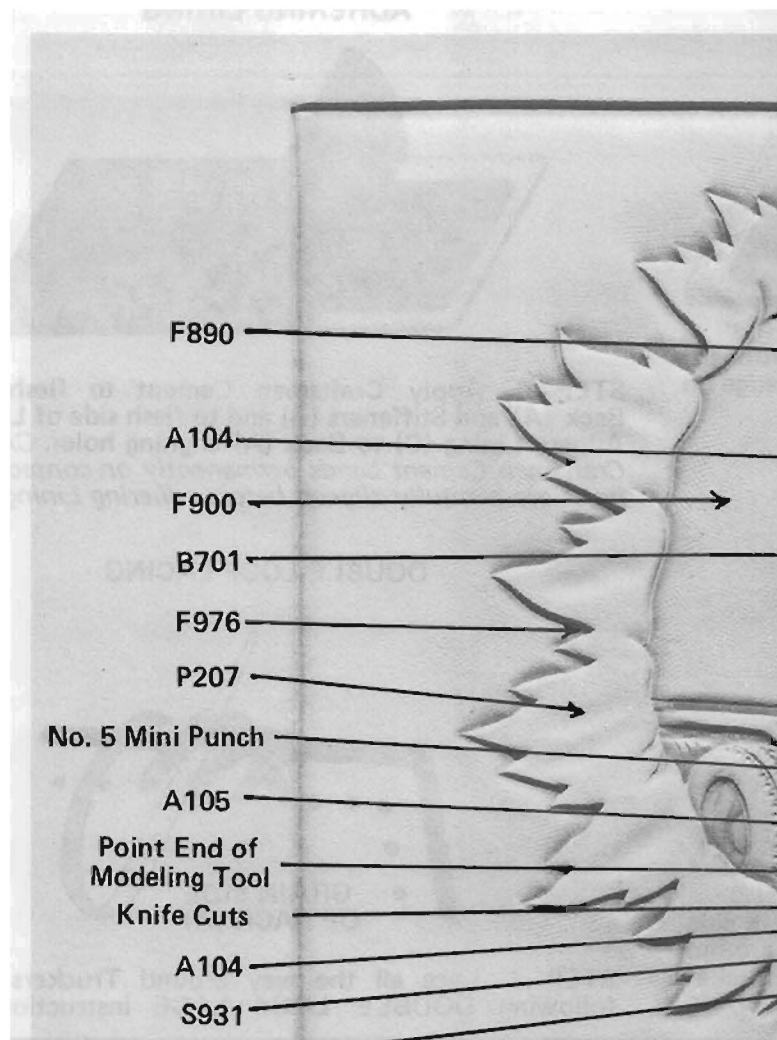

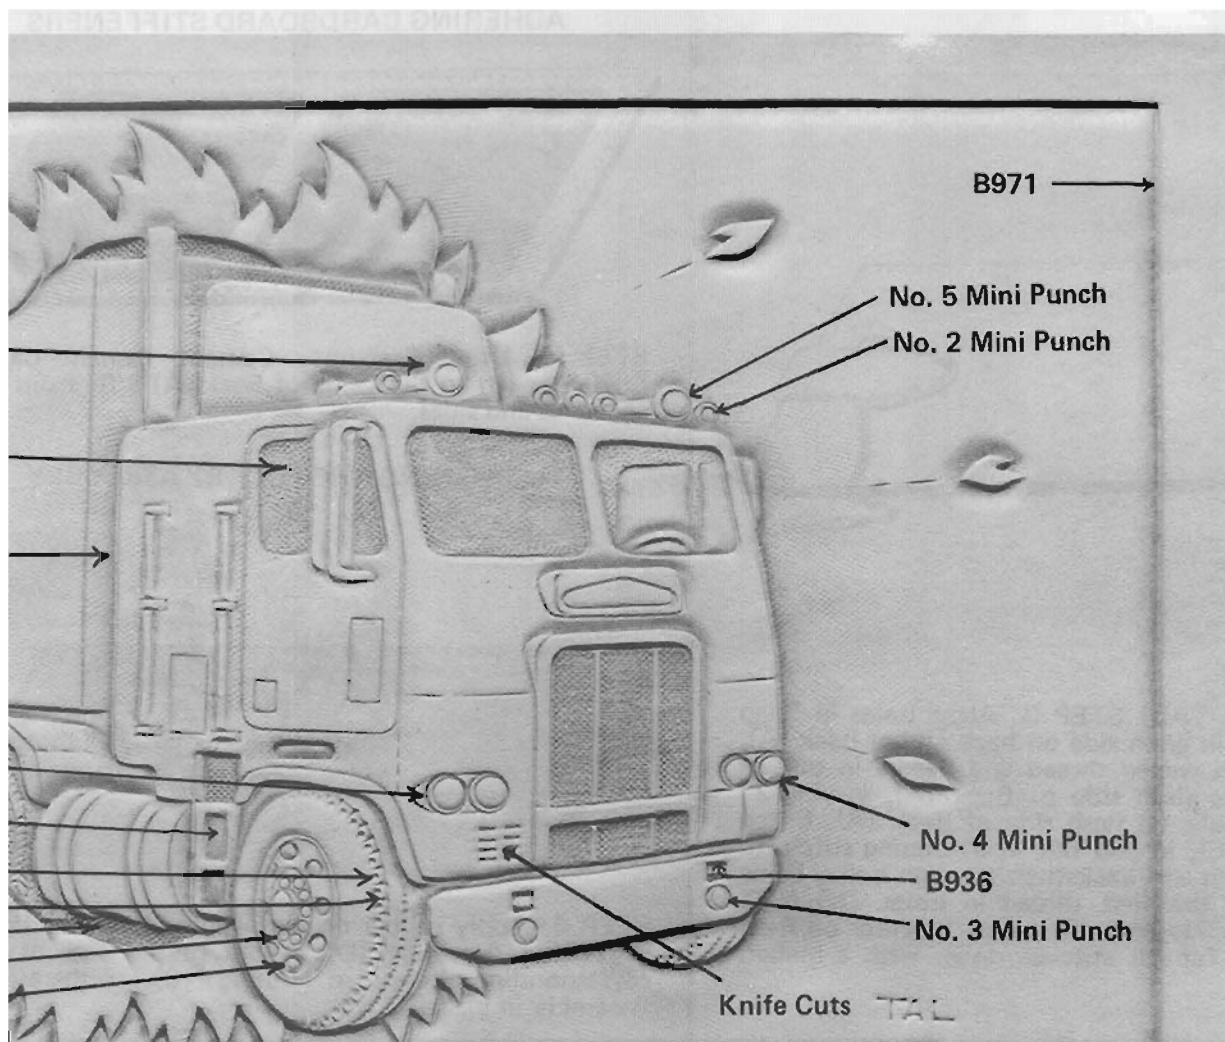

"Cra

"Top 20"
or
"Ft. Man Book"



B701

S632

D436

X534



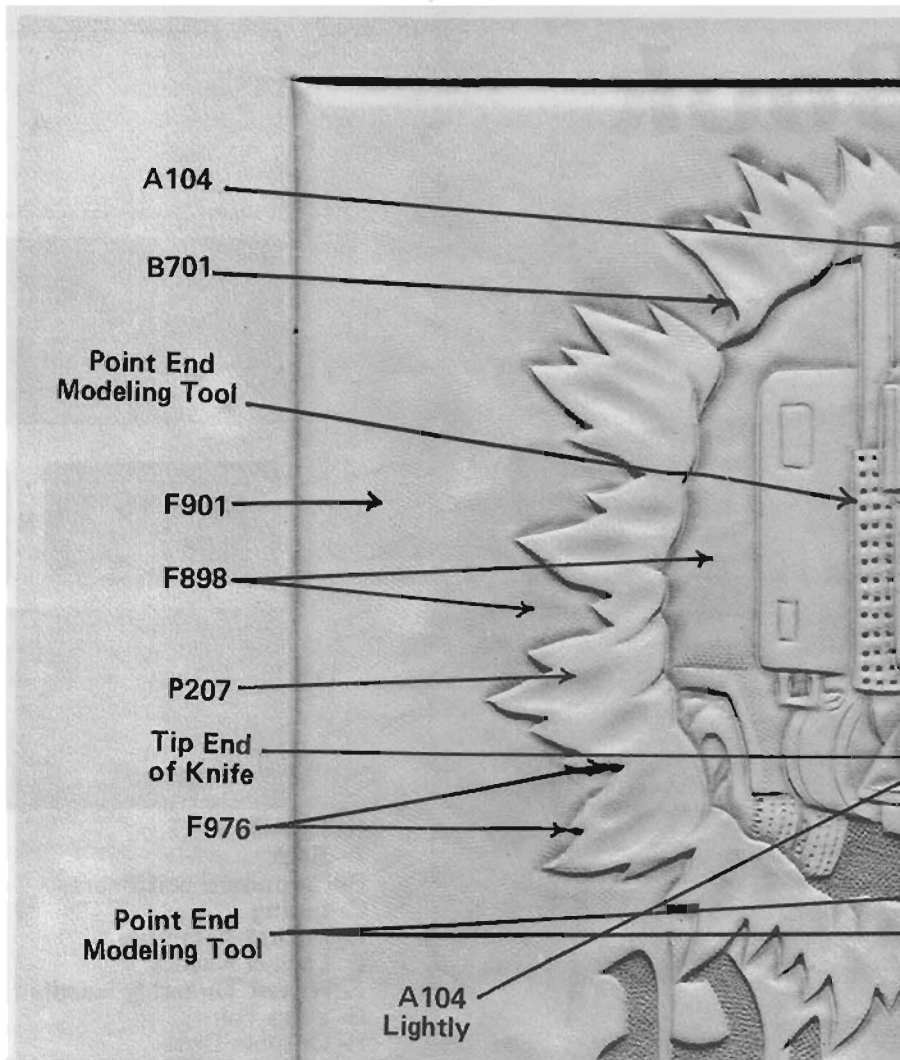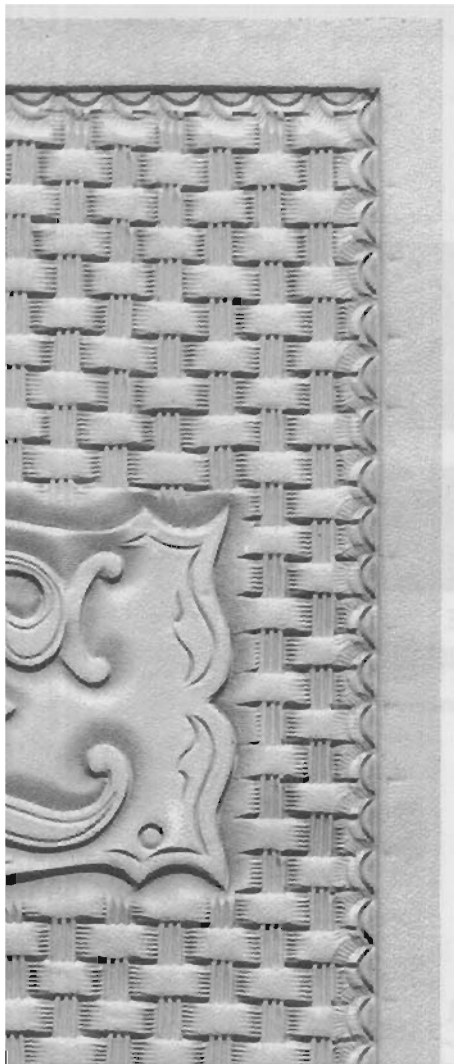

F898

B971

F890

No. 4 Mini Punch

No. 2 Mini Punch

B701

Modeling Tool

No. 5 Mini Punch

No. 4 Mini Punch

Swivel Knife
Cuts

No. 4 Mini Punch


No. 5 Mini Punch
Lightly

No. 4 Mini Punch

No. 1 Mini Punch
(Leaned)



S931

TL

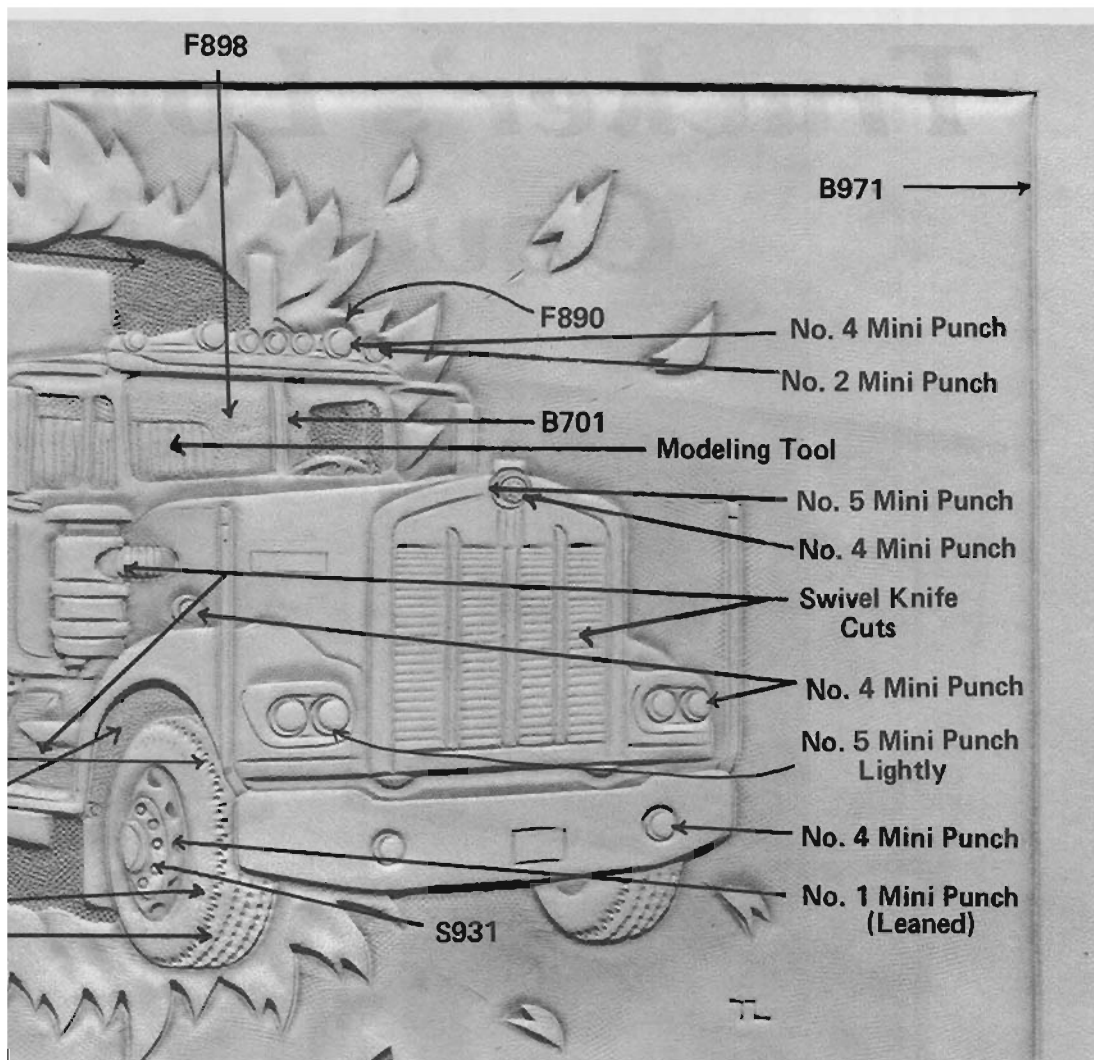


No. 0 Mini Punch



6047
"How To Carve Leather"
Book




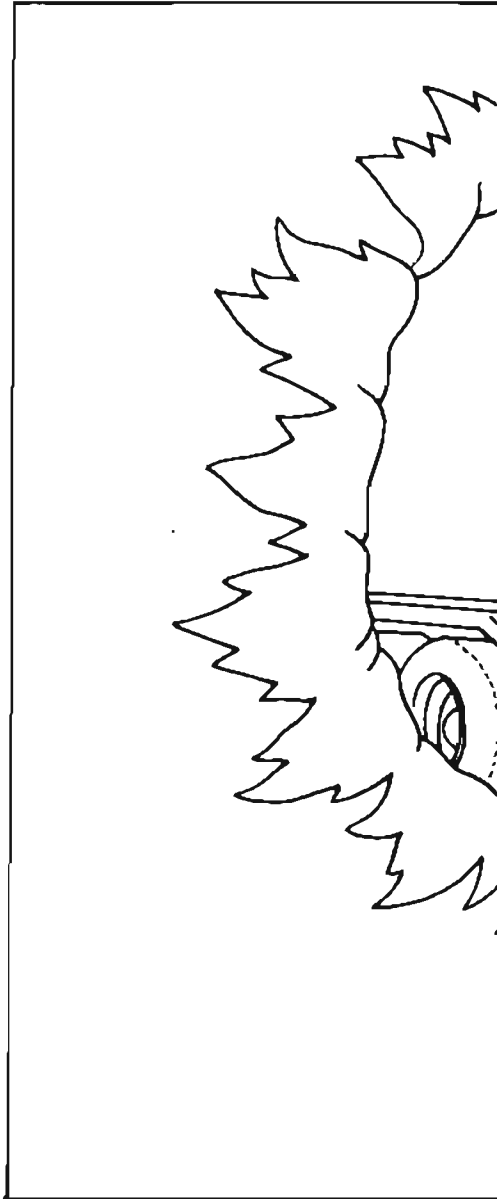
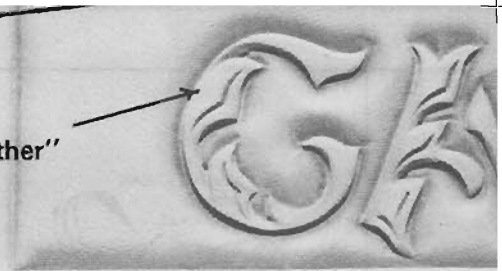





LD LINE
ATCH LINE

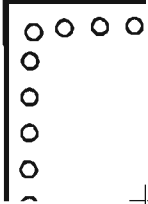


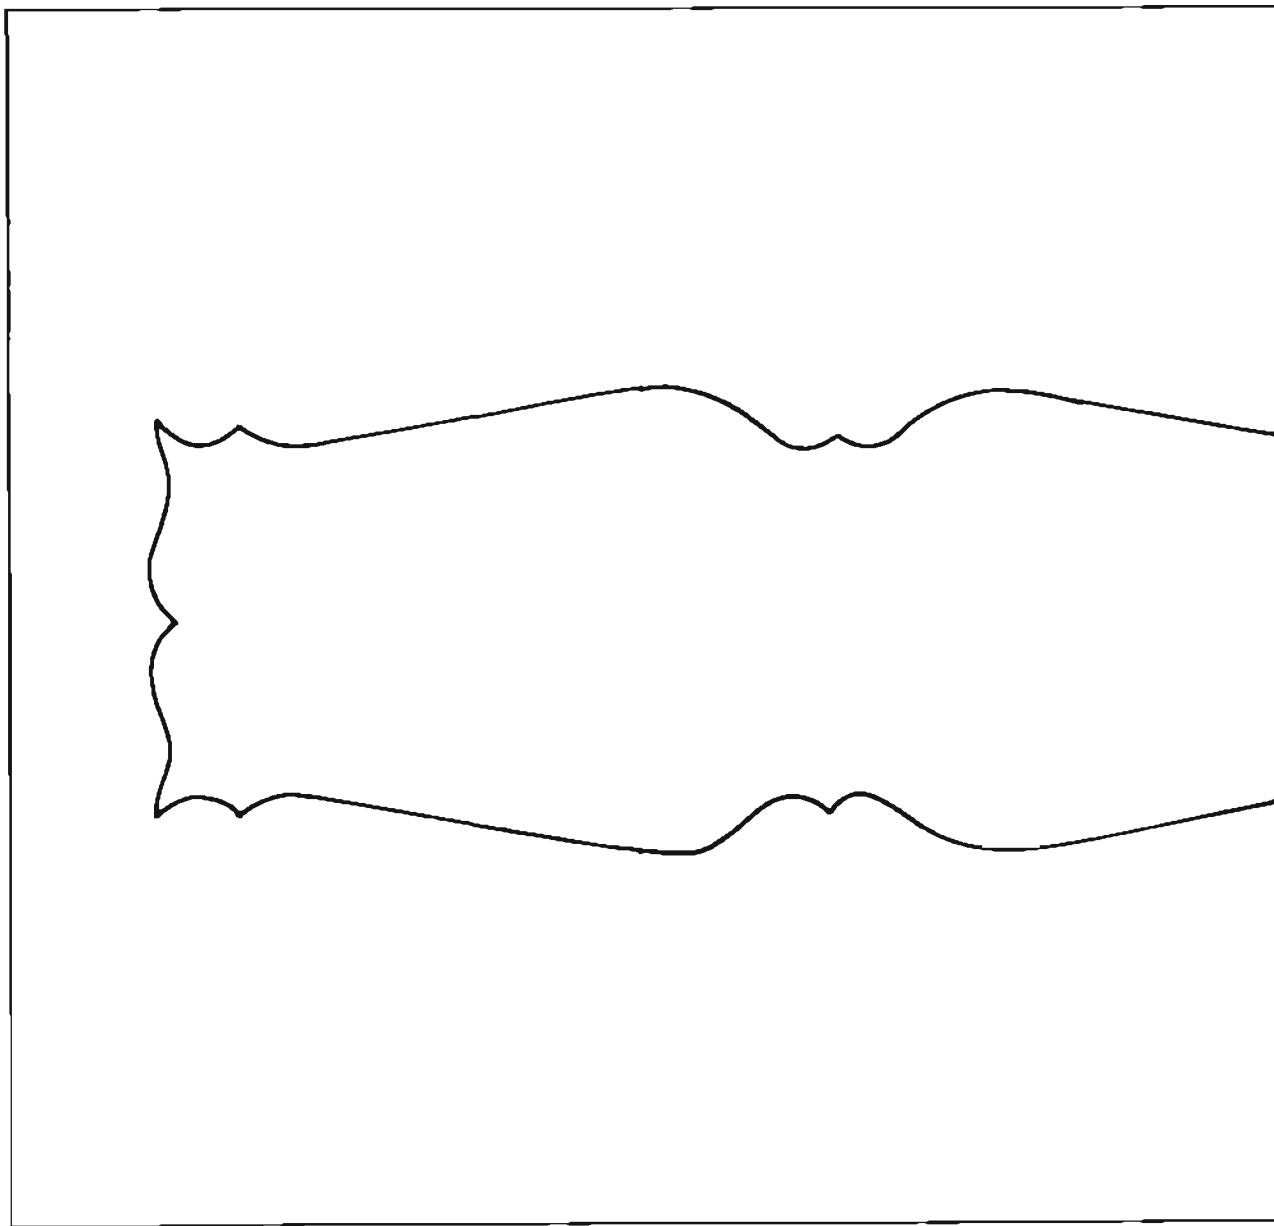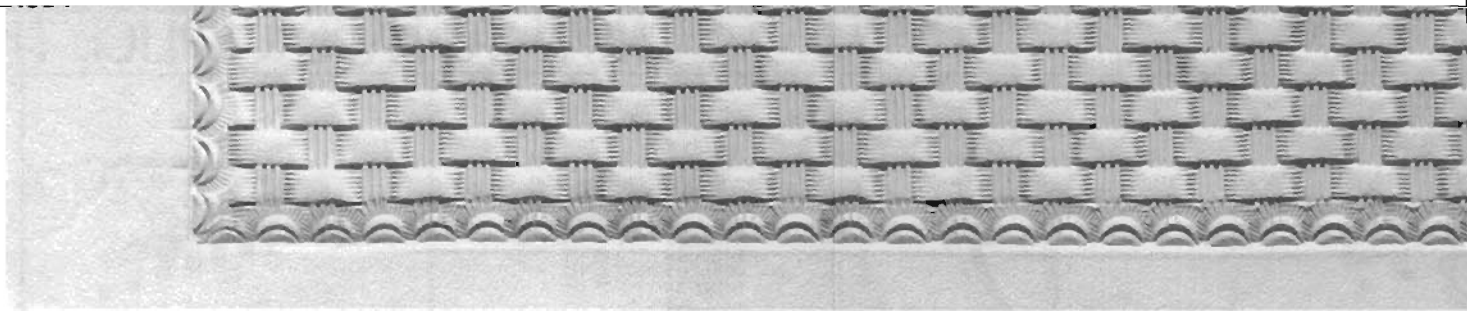


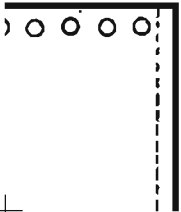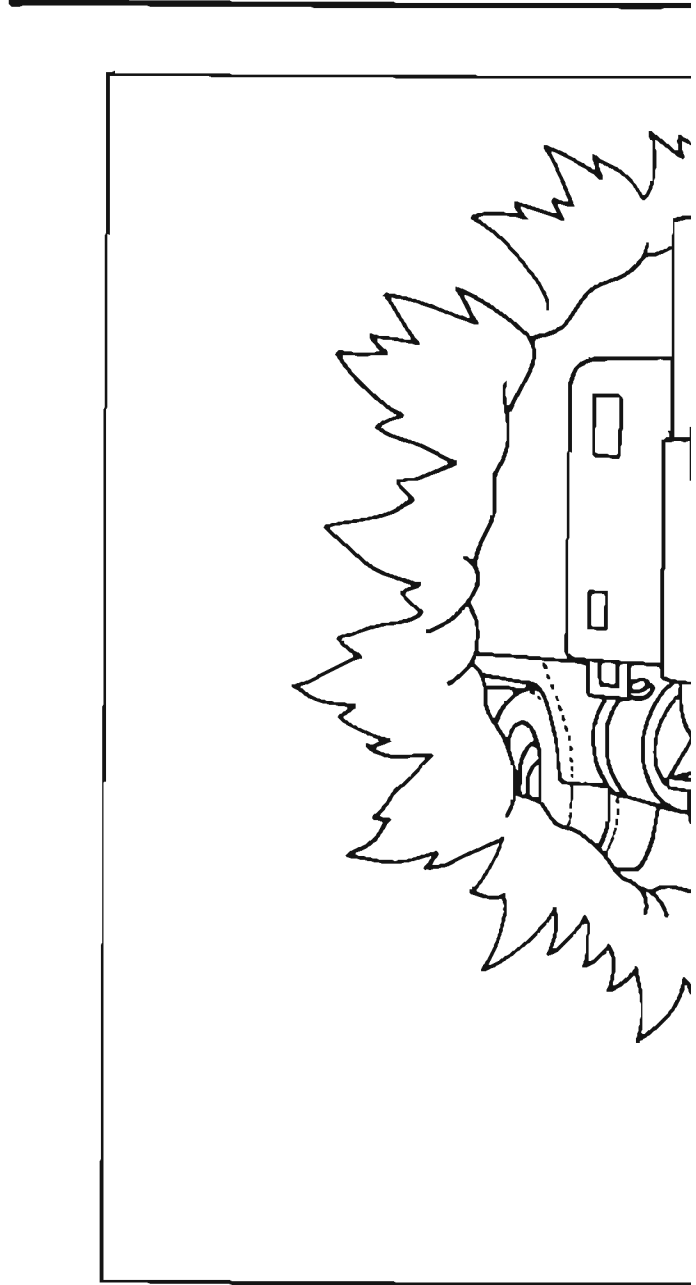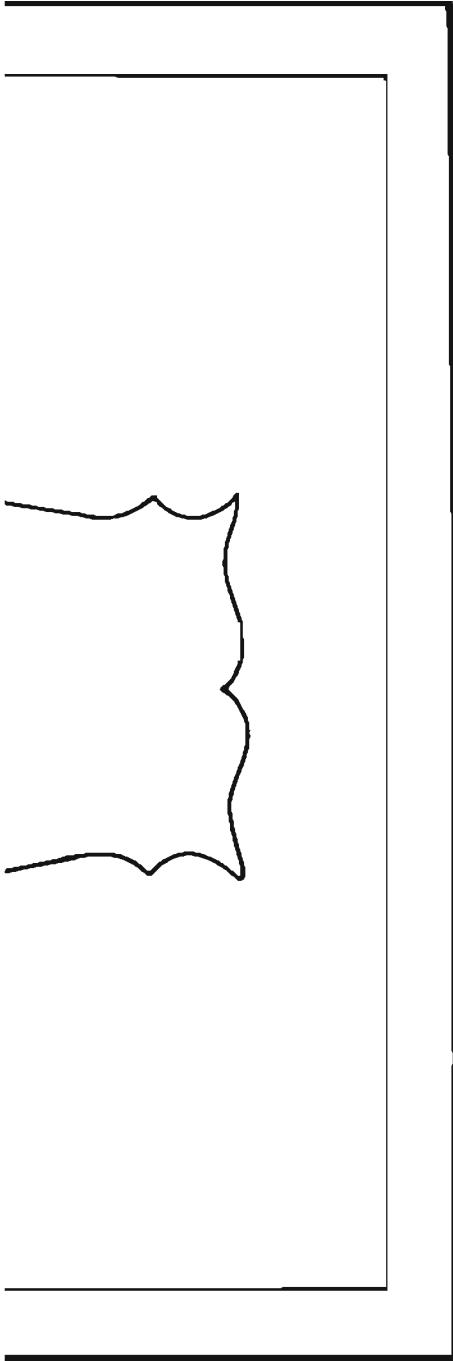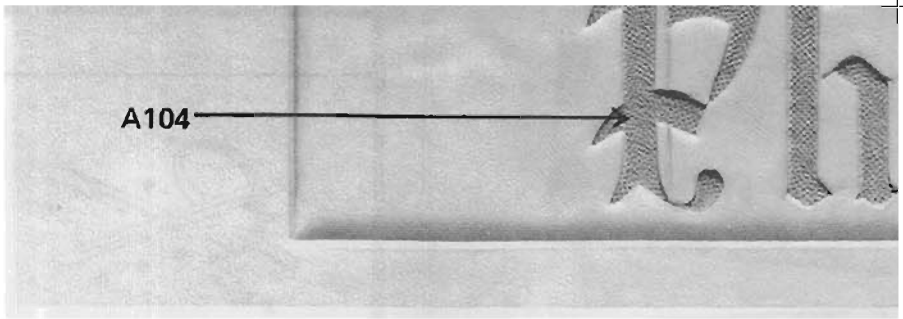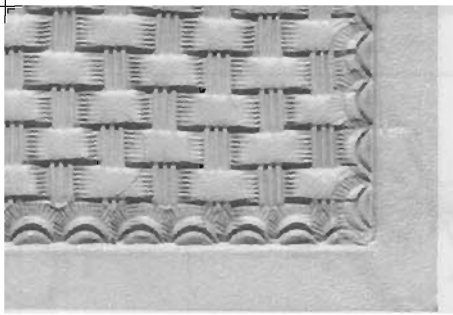

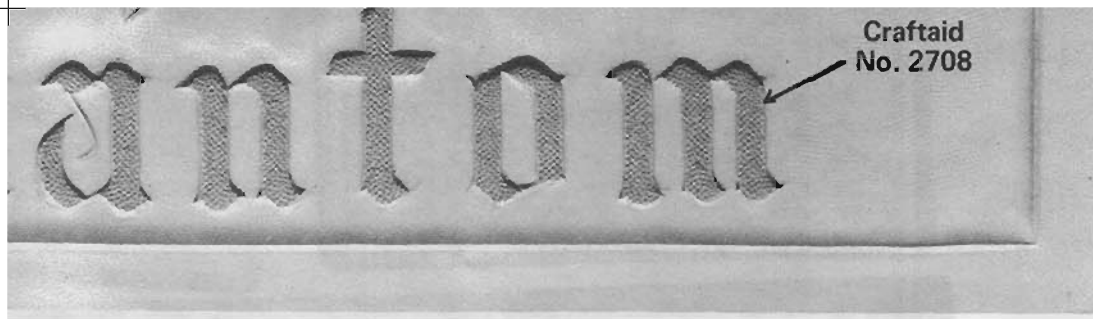

Use Smaller Size
Mini Punch for
Inside Ring on Lights

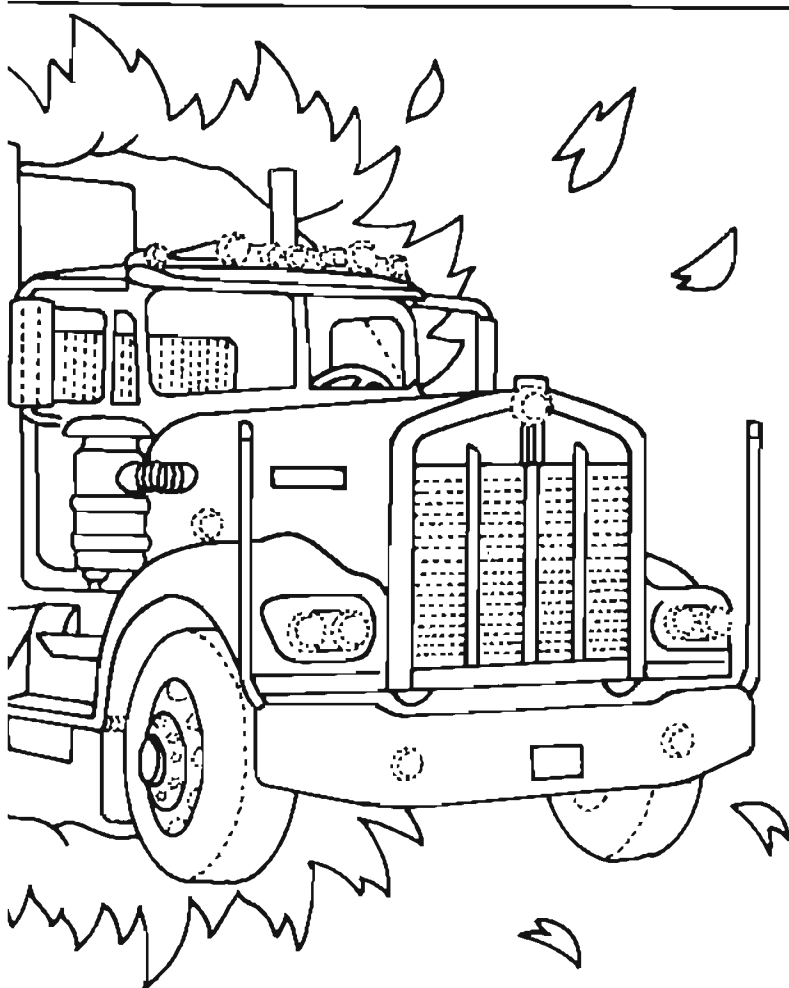

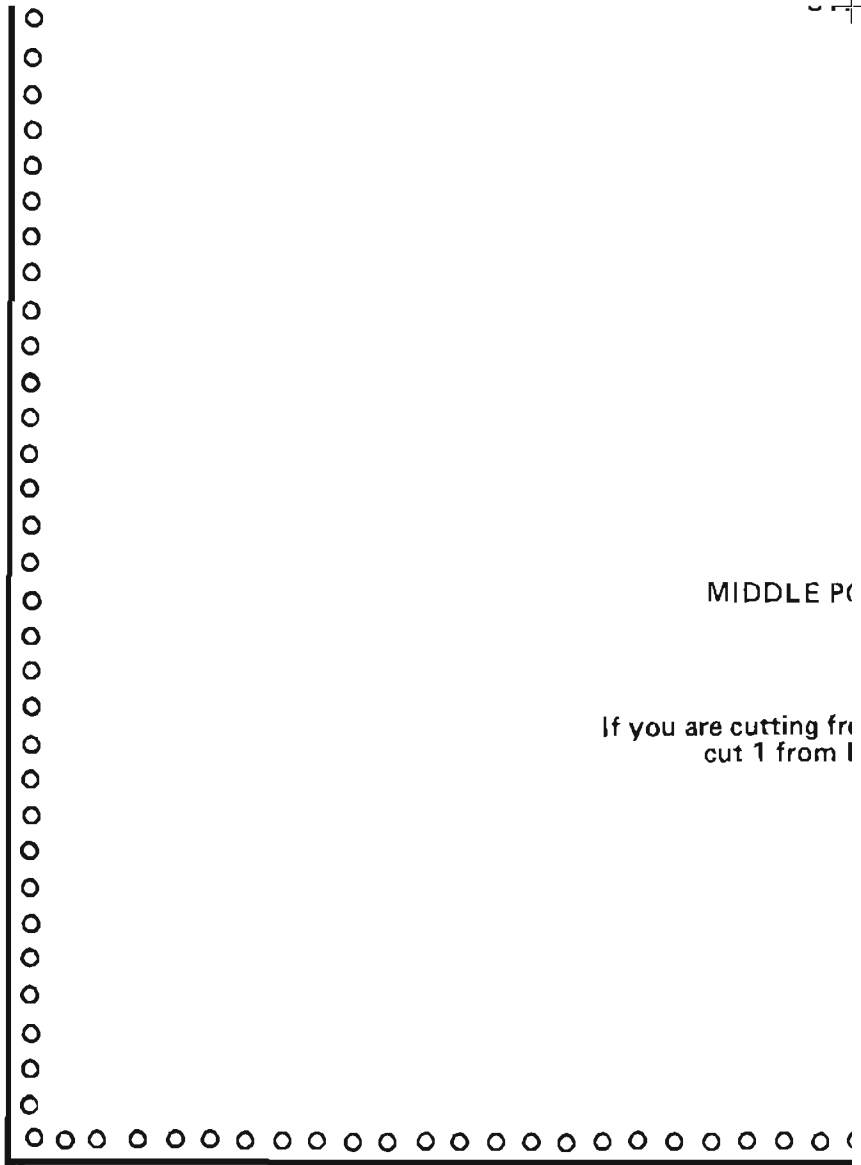

MIDDLE P

If you are cutting fr
cut 1 from l

POST LINE

POCKET

on your own leather
Lining Leather

STITCH LINE




BACK POCKET

1/2"

If you are cutting from your own leather
cut 1 from Lining Leather



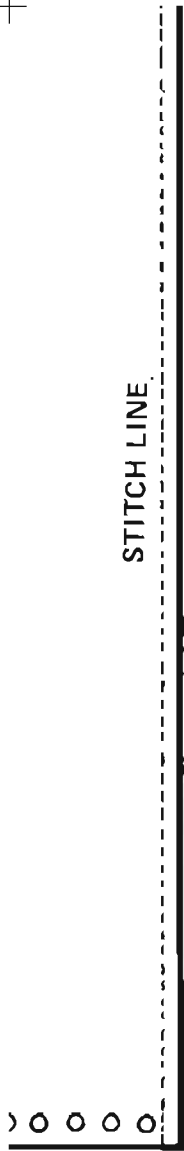

STITCH LINE



FOLD LINE

STITCH LINE

LOGBOOK HOLDER

If you are cutting from your own
cut 1 from Lining Leather

STITCH LINE

n leather
ier

